

GE 145 SKID - PS - PSX

GE 165 SKID - PS - PSX

GE 145-165 PMS-PMSX

0311


741659003 - GB

**USE AND MAINTENANCE MANUAL
SPARE PARTS CATALOGS**

Main Characteristics of the unit:

- Three-phase electric power (max) 121.6 kW (GE 145) - 132 kW (GE 165) / 400 V / 50 Hz
- Perkins Diesel engine / 1106C-E66TAG2 (GE 145) - 1106C-E66TAG3 (GE 165)
- Brushless synchronous alternator
- Tank of 230l with autonomy of 9.5h (GE 145) - 9 h (GE 165)
- Dimensions / weight, (GE 145), 3000x1200x1800 / 2130Kg.(PS-PMS)-3400x1200x1800/2200Kg.(PSX-PMSX)
- Dimensions / weight, (GE 165), 3000x1200x1800 / 2160Kg.(PS-PMS)-3400x1200x1800/2230Kg.(PSX-PMSX)
- Noise level at 7m (GE 145): 70dB(A) (PS) - 68dB(A) (PSX)
- Noise level at 7m (GE 165): 71dB(A) (PS) - 68dB(A) (PSX)
- Prepared for automatic start unit.
- Prepared for remote start/stop.

The unit is composed by : a base, a tank, an engine/alternator unit fixed on the base by 4 elastic dampers,

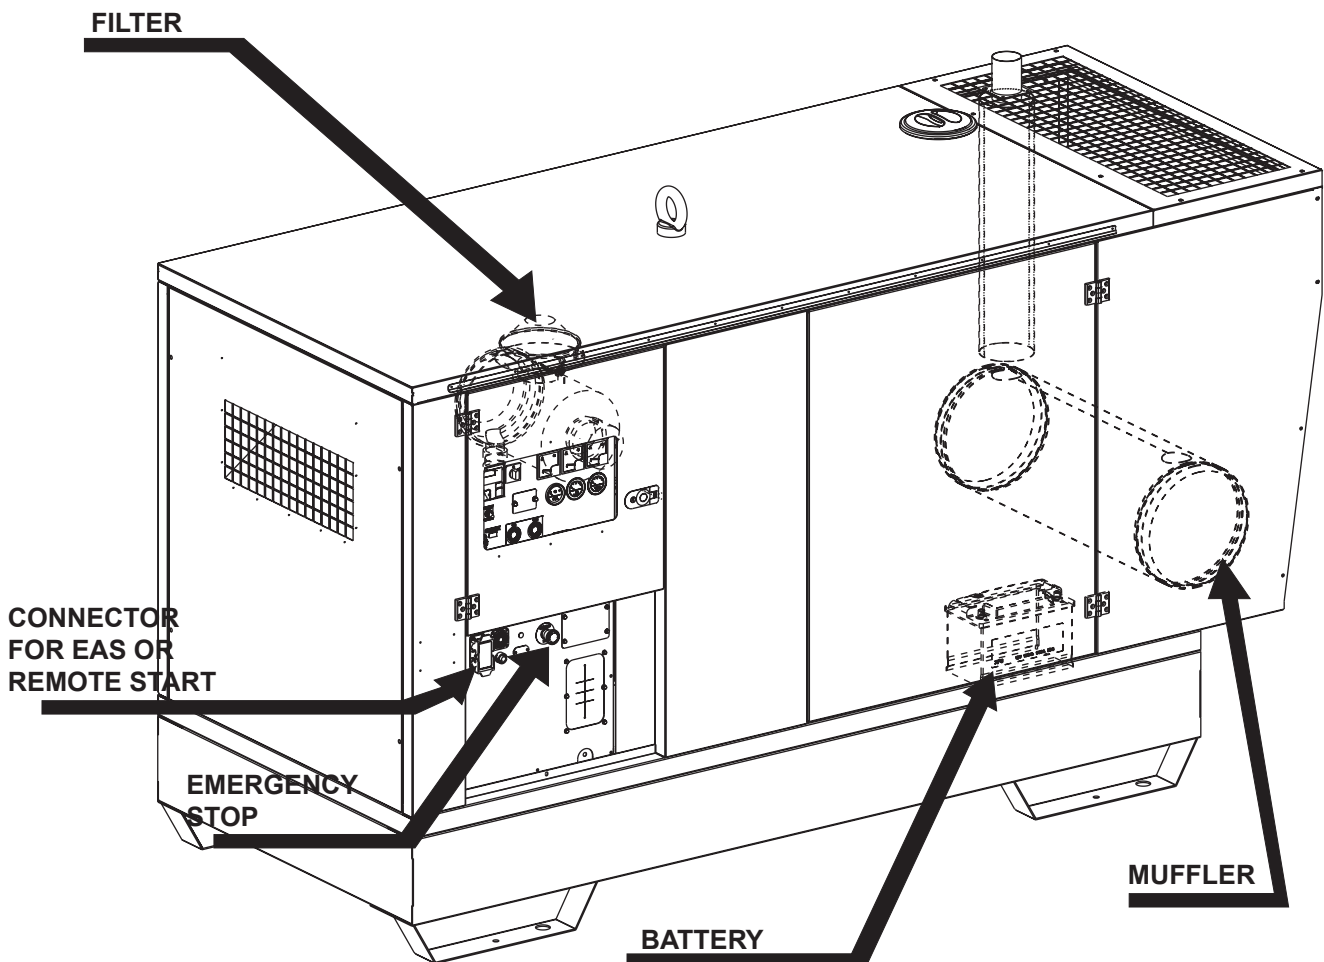

a roll-bar, with hook for an easy and sure lifting, a base complete with doors for a quick access to the engine, to the air filter and to the battery. The set is also equipped with a electrical board where there are mounted protections and measuring instruments, which are protected by a same sized cover.



UNI EN ISO 9001 : 2008

ISO 9001:2008 - Cert. 0192

MOSA has certified its quality system according to UNI EN ISO 9001:2008 to ensure a constant, highquality of its products. This certification covers the design, production and servicing of engine driven welders and generating sets.

The certifying institute, ICIM, which is a member of the International Certification Network IQNet, awarded the official approval to MOSA after an examination of its operations at the head office and plant in Cusago (MI), Italy.

This certification is not a point of arrival but a pledge on the part of the entire company to maintain a level of quality of both its products and services which will continue to satisfy the needs of its clients, as well as to improve the transparency and the communications regarding all the company's activities in accordance with the official procedures and in harmony with the MOSA Manual of Quality.

The advantages for MOSA clients are:

- Constant quality of products and services at the high level which the client expects;
- Continuous efforts to improve the products and their performance at competitive conditions;
- Competent support in the solution of problems;
- Information and training in the correct application and use of the products to assure the security of the operator and protect the environment;
- Regular inspections by ICIM to confirm that the requirements of the company's quality system and ISO 9001 are being respected.

All these advantages are guaranteed by the CERTIFICATE OF QUALITY SYSTEM No.0192 issued by ICIM S.p.A. - Milano (Italy) - www.icim.it

M 01	QUALITY SYSTEM
M 1.01	COPYRIGHT
M 1.1	NOTES
M 1.4	CE MARK
M 1.5	TECHNICAL DATA
M 1.6	TECHNICAL DATA ENGINE DRIVEN WELDER
M 2-2.1	SYMBOLS AND SAFETY PRECAUTIONS
M 2.5...	INSTALLATION AND ADVICE BEFORE USE
M 2.6	INSTALLATIONS AND ADVICE
M 2.7	INSTALLATION
M 3	PACKING
M 4...	TRANSPORT AND DISPLACEMENTS
M 6...	ASSEMBLY: CT.....
M 20	SETTING-UP THE UNIT (DIESEL ENGINE)
M 21	ENGINE STARTING AND USE (DIESEL ENGINE)
M 22	STOPPING THE ENGINE (DIESEL ENGINE)
M 25	SETTING-UP THE UNIT (GASOLINE ENGINE)
M 26	STARTING THE ENGINE (GASOLINE ENGINE)
M 27	STOPPING THE ENGINE (GASOLINE ENGINE)
M 30	CONTROLS LEGEND
M 31	CONTROLS
M 34	USE AS A WELDER
M 35	USE AS AN ENGINE STARTER
M 36	USE AS A BATTERY CHARGE
M 37...	USE AS A GENERATOR
M 38...	USE OF THE REMOTE CONTROL
M 39...	USE OF THE ENGINE PROTECTION
M 40...	TROUBLE SHOOTING
M 43...	MAINTENANCE
M 45	STORAGE
M 46	CAST OFF
M 53	DIMENSIONS
M 55	RECOMMENDED ELECTRODES
M 60	ELECTRICAL SYSTEM LEGENDE
M 61...	ELECTRICAL SYSTEM
R 1	SPARE PARTS LIST
.....	SPARE PARTS
K...	ACCESSORIES



ATTENTION

This use and maintenance manual is an important part of the machines in question.

The assistance and maintenance personnel must keep said manual at disposal, as well as that for the engine and alternator (if the machine is synchronous) and all other documentation about the machine.

We advise you to pay attention to the pages concerning the security (see page M1.1).



© All rights are reserved to said Company.

It is a property logo of MOSA division of B.C.S. S.p.A. All other possible logos contained in the documentation are registered by the respective owners.

▄▄▄▄▶ The reproduction and total or partial use, in any form and/or with any means, of the documentation is allowed to nobody without a written permission by MOSA division of B.C.S. S.p.A.

To this aim is reminded the protection of the author's right and the rights connected to the creation and design for communication, as provided by the laws in force in the matter.

In no case MOSA division of B.C.S. S.p.A. will be held responsible for any damage, direct or indirect, in relation with the use of the given information.

MOSA division of B.C.S. S.p.A. does not take any responsibility about the shown information on firms or individuals, but keeps the right to refuse services or information publication which it judges discutible, unright or illegal.

INFORMATION

Dear Customer,
We wish to thank you for having bought from MOSA a high quality set.

Our sections for Technical Service and Spare Parts will work at best to help you if it were necessary.

To this purpose we advise you, for all control and overhaul operations, to turn to the nearest authorized Service Centre, where you will obtain a prompt and specialized intervention.

- ☞ In case you do not profit on these Services and some parts are replaced, please ask and be sure that are used exclusively original MOSA parts; this to guarantee that the performances and the initial safety prescribed by the norms in force are re-established.
- ☞ **The use of non original spare parts will cancel immediately any guarantee and Technical Service obligation from MOSA.**

NOTES ABOUT THE MANUAL

Before actioning the machine please read this manual attentively. Follow the instructions contained in it, in this way you will avoid inconveniences due to negligence, mistakes or incorrect maintenance. The manual is for qualified personnel, who knows the rules: about safety and health, installation and use of sets movable as well as fixed.

You must remember that, in case you have difficulties for use or installation or others, our Technical Service is always at your disposal for explanations or interventions.

The manual for Use Maintenance and Spare Parts is an integrant part of the product. It must be kept with care during all the life of the product.

In case the machine and/or the set should be yielded to another user, this manual must also given to him.

Do not damage it, do not take parts away, do not tear pages and keep it in places protected from dampness and heat.

You must take into account that some figures contained in it want only to identify the described parts and therefore might not correspond to the machine in your possession.

INFORMATION OF GENERAL TYPE

In the envelope given together with the machine and/or set you will find: the manual for Use Maintenance and Spare Parts, the manual for use of the engine and the tools (if included in the equipment), the guarantee (in the countries where it is prescribed by law).

Our products have been designed for the use of generation for welding, electric and hydraulic system; ANY OTHER DIFFERENT USE NOT INCLUDED IN THE ONE INDICATED, relieves MOSA from the risks which could happen or, anyway, from that which was agreed when selling the machine; MOSA excludes any responsibility for damages to the machine, to the things or to persons in this case.

Our products are made in conformity with the safety norms in force, for which it is advisable to use all these devices or information so that the use does not bring damage to persons or things.

While working it is advisable to keep to the personal safety norms in force in the countries to which the product is destined (clothing, work tools, etc.).

Do not modify for any motive parts of the machine (fastenings, holes, electric or mechanical devices, others..) if not duly authorized in writing by MOSA: the responsibility coming from any potential intervention will fall on the executioner as in fact he becomes maker of the machine.

- ☞ **Notice:** *this manual does not engage MOSA, who keeps the faculty, apart the essential characteristics of the model here described and illustrated, to bring betterments and modifications to parts and accessories, without putting this manual uptodate immediately.*















Any of our product is labelled with CE marking attesting its conformity to applicable directives and also the fulfillment of safety requirements of the product itself; the list of these directives is part of the declaration of conformity included in any machine standard equipment.

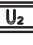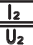Here below the adopted symbol:




CE marking is clearly readable and unerasable and it can be either part of the data-plate.

MOSA		V.le Europa, 59-20090 CUSAGO (MI) ITALY	
		tel. +39-0290352.1 fax. +39-0290390466	
		http://www.mosa.it e-mail: info@mosa.it	
	Made in UE-ITALY	TYPE	
		SERIAL N°	
		X	
		I ₂ (A)	
		U ₂ (V)	
		I ₂ (A)	
		U ₂ (V)	
Hz	kVA		
P.F.	V (V)		
	I (A)		
	n	RPM	n ₁
	n ₀	RPM	P _{max}
		KW	I. CL.
			IP

MOSA		V.le Europa, 59-20090 CUSAGO (MI) ITALY	
		tel. +39-0290352.1 fax. +39-0290390466	
		http://www.mosa.it e-mail: info@mosa.it	
	Made in UE-ITALY	TYPE	
		SERIAL N°	
		Generating Set ISO 8528	
KVA			
V			
I			
Hz	P.F.	LTP POWER IN ACCORDANCE WITH ISO 8528	
RPM	I. CL.		IP
ALTIT. 100 m	TEMP. 25 °C		MASS

Furthermore, on each model it is shown the noise level value; the symbol used is the following:

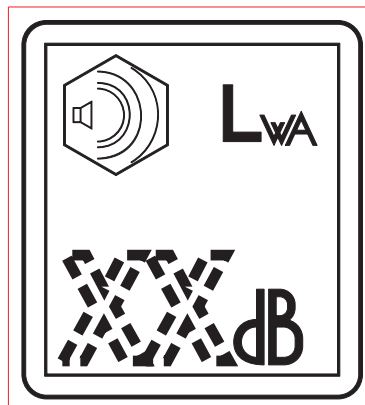



The indication is shown in a clear, readable and indeleble way on a sticker.

The generating set GE 145 is a unit which transforms the mechanical energy, generated by endothermic engine, into electric energy, through an alternator.

Is meant for industrial and professional use, powered by an endothermic engine; it is composed of various main parts such as: engine, alternator, electric and electronic controls, the fairing or a protective structure.

The assembling is made on a steel structure, on which are provided elastic support which must damp the vibrations and also eliminate sounds which would produce noise.

Technical data	GE 145 PS/PMS	GE 145 PSX/PMSX	GE 145 P SKID
GENERATOR			
Power three-phase Stand-by	152 kVA (121.6 kW) / 400 V / 219.4 A		
Power three-phase PR.P.	137 kVA (109.6 kW) / 400 V / 197.7 A		
Power single-phase PR.P.	50 kVA / 230 V / 217.4 A		
Frequency	50 Hz		
Cos φ	0.8		
ALTERNATOR			
Type	Self-excited, self-regulated, brushless		
Insulation class	three-phase, synchronous H		
ENGINE			
Make / Model	PERKINS / 1106C-E66TAG2		
Type / Cooling system	Diesel 4-Stroke / water		
Cylinders / Displacement	6 / 6600 cm ³		
Power net Stand-by	132.9 kW (180.7 HP)		
Power net PR.P.	119.5 kW (162.5 HP)		
Speed	1500 rpm		
Fuel consumption (75% of PR.P.)	24.3 l/h		
Engine oil capacity	15.5 l		
Starter	electric		
GENERAL SPECIFICATIONS			
Battery	12V - 105Ah		
Tank capacity	230 l		
Running time (75% of PR.P.)	9.5 h		
Protection	IP 44		
Dimensions Lxwxh (mm) *	3000x1200x1800	3400x1200x1800	2600x1200x1800
Weight *	2130 Kg / 2060 Kg	2200 Kg / 2130 Kg	1770 Kg
Measured acoustic power LWA (pressure LpA)	96 dB(A) (70 dB(A) @ 7 m)	93 dB(A) (68 dB(A)@7 m)	-
Guaranteed acoustic power LWA (pressure LpA)	97 dB(A) (71 dB(A) @ 7 m) 	94 dB(A) (69 dB(A)@7 m) 	-
* Dimensions and weight are inclusive of all parts.			

OUTPUT

Declared power according to ISO 8528-1 (temperature 25°C, 30% relative humidity, altitude 100 m above sea level).

(*Stand-by) = maximum available power for use at variable loads for a yearly number of hours limited at 500 h. No overload is admitted.

(**Prime power PR.P.) = maximum available power for use at variable loads for a yearly illimited number of hours. The average power to be taken during a period of 24 h must not be over 80% of the PR.P.

It's admitted overload of 10% each hour every 12 h.

In an **approximative** way one reduces: of 1% every 100 m altitude and of 2.5% for every 5°C above 25°C.

ACOUSTIC POWER LEVEL

ATTENTION: The concrete risk due to the machine depends on the conditions in which it is used. Therefore, it is up to the end-user and under his direct responsibility to make a correct evaluation of the same risk and to adopt specific precautions (for instance, adopting a I.P.D. -Individual Protection Device)

Acoustic Noise Level (L_{WA}) - Measure Unit dB(A): it stands for acoustic noise released in a certain delay of time. This is not submitted to the distance of measurement.

Acoustic Pressure (L_p) - Measure Unit dB(A): it measures the pressure originated by sound waves emission. Its value changes in proportion to the distance of measurement.


The here below table shows examples of acoustic pressure (L_p) at different distances from a machine with Acoustic Noise Level (L_{WA}) of 95 dB(A)

Lp a 1 meter = 95 dB(A) - 8 dB(A) = 87 dB(A)

Lp a 7 meters = 95 dB(A) - 25 dB(A) = 70 dB(A)

Lp a 4 meters = 95 dB(A) - 20 dB(A) = 75 dB(A)

Lp a 10 meters = 95 dB(A) - 28 dB(A) = 67 dB(A)

PLEASE NOTE: the symbol  when with acoustic noise values, indicates that the device respects noise emission limits according to 2000/14/CE directive.

The generating set GE 165 is a unit which transforms the mechanical energy, generated by endothermic engine, into electric energy, through an alternator.
Is meant for industrial and professional use, powered by an endothermic engine; it is composed of various main parts such as: engine, alternator, electric and electronic controls, the fairing or a protective structure.
The assembling is made on a steel structure, on which are provided elastic support which must damp the vibrations and also eliminate sounds which would produce noise.

Technical data	GE 165 PS/PMS	GE 165 PSX/PMSX	GE 165 P SKID
GENERATOR			
Power three-phase Stand-by	165 kVA (132 kW) / 400 V / 238.1 A		
Power three-phase PR.P.	150 kVA (120 kW) / 400 V / 216.5 A		
Power single-phase PR.P.	55 kVA / 230 V / 239.1 A		
Frequency	50 Hz		
Cos φ	0.8		
ALTERNATOR		Self-excited, self-regulated, brushless	
Type	three-phase, synchronous		
Insulation class	H		
ENGINE			
Make / Model	PERKINS / 1106C-E66TAG3		
Type / Cooling system	Diesel I4-Stroke / water		
Cylinders / Displacement	6 / 6600 cm ³		
Power net Stand-by	143,9 kW (195.7 HP)		
Power net PR.P.	129,5 kW (176.1 HP)		
Speed	1500 rpm		
Fuel consumption (75% of PR.P.)	25.8 l/h		
Engine oil capacity	15.5 l		
Starter	electric		
GENERAL SPECIFICATIONS			
Battery	12V - 105Ah		
Tank capacity	230 l		
Running time (75% of PR.P.)	9 h		
Protection	IP 44		
Dimensions Lxwxh (mm) *	3000x1200x1800	3400x1200x1800	2600x1200x1800
Weight *	2160 Kg	2230 Kg	1800 Kg
Measured acoustic power LWA (pressure LpA)	96 dB(A)(71 dB(A)@7 m)	94 @ (69 dB(A) @ 7 m)	-
Guaranteed acoustic power LWA (pressure LpA)	97 dB(A)(72 dB(A)@7 m)	94 @ (69 dB(A) @ 7 m)	-
* Dimensions and weight are inclusive of all parts.			

OUTPUT

Declared power according to ISO 8528-1 (temperature 25°C, 30% relative humidity, altitude 100 m above sea level).
(*Stand-by) = maximum available power for use at variable loads for a yearly number of hours limited at 500 h. No overload is admitted.
(**Prime power PR.P.) = maximum available power for use at variable loads for a yearly illimited number of hours. The average power to be taken during a period of 24 h must not be over 80% of the PR.P.
It's admitted overload of 10% each hour every 12 h.
In an **approximative** way one reduces: of 1% every 100 m altitude and of 2.5% for every 5°C above 25°C.

ACOUSTIC POWER LEVEL

ATTENTION: The concrete risk due to the machine depends on the conditions in which it is used. Therefore, it is up to the end-user and under his direct responsibility to make a correct evaluation of the same risk and to adopt specific precautions (for instance, adopting a I.P.D. -Individual Protection Device)


Acoustic Noise Level (L_{WA}) - Measure Unit dB(A): it stands for acoustic noise released in a certain delay of time. This is not submitted to the distance of measurement.

Acoustic Pressure (L_p) - Measure Unit dB(A): it measures the pressure originated by sound waves emission. Its value changes in proportion to the distance of measurement.

The here below table shows examples of acoustic pressure (L_p) at different distances from a machine with Acoustic Noise Level (L_{WA}) of 95 dB(A)

Lp a 1 meter = 95 dB(A) - 8 dB(A) = 87 dB(A)
Lp a 4 meters = 95 dB(A) - 20 dB(A) = 75 dB(A)

Lp a 7 meters = 95 dB(A) - 25 dB(A) = 70 dB(A)
Lp a 10 meters = 95 dB(A) - 28 dB(A) = 67 dB(A)

PLEASE NOTE: the symbol  when with acoustic noise values, indicates that the device respects noise emission limits according to 2000/14/CE directive.

SYMBOLS IN THIS MANUAL

- The symbols used in this manual are designed to call your attention to important aspects of the operation of the machine as well as potential hazards and dangers for persons and things.

IMPORTANT ADVICE

- Advice to the User about the safety:

☞ N.B.: The information contained in the manual can be changed without notice. Potential damages caused in relation to the use of these instructions will not be considered because these are only indicative. Remember that the non observance of the indications reported by us might cause damage to persons or things. It is understood, that local dispositions and/or laws must be respected.

WARNING



Situations of danger - no harm to persons or things

Do not use without protective devices provided

Removing or disabling protective devices on the machine is prohibited.

Do not use the machine if it is not in good technical condition

The machine must be in good working order before being used. Defects, especially those which regard the safety of the machine, must be repaired before using the machine.

SAFETY PRECAUTIONS



DANGEROUS

This heading warns of an immediate danger for persons as well for things. Not following the advice can result in serious injury or death.



WARNING

This heading warns of situations which could result in injury for persons or damage to things.



CAUTION

To this advice can appear a danger for persons as well as for things, for which can appear situations bringing material damage to things.



IMPORTANT



NOTE



ATTENTION

These headings refer to information which will assist you in the correct use of the machine and/or accessories.

SYMBOLS



STOP - Read absolutely and be duly attentive



Read and pay due attention



GENERAL ADVICE - If the advice is not respected damage can happen to persons or things.



HIGH VOLTAGE - Attention High Voltage. There can be parts in voltage, dangerous to touch. The non observance of the advice implies life danger.



FIRE - Danger of flame or fire. If the advice is not respected fires can happen.



HEAT - Hot surfaces. If the advice is not respected burns or damage to things can be caused.



EXPLOSION - Explosive material or danger of explosion. in general. If the advice is not respected there can be explosions.



WATER - Danger of shortcircuit. If the advice is not respected fires or damage to persons can be caused.



SMOKING - The cigarette can cause fire or explosion. If the advice is not respected fires or explosions can be caused.



ACIDS - Danger of corrosion. If the advice is not respected the acids can cause corrosions with damage to persons or things.



WRENCH - Use of the tools. If the advice is not respected damage can be caused to things and even to persons.



PRESSION - Danger of burns caused by the expulsion of hot liquids under pressure.



ACCES FORBIDDEN to non authorizad people.

PROHIBITIONS No harm for persons

Use only with safety clothing -



It is compulsory to use the personal protection means given in equipment.

Use only with safety clothing -



It is compulsory to use the personal protection means given in equipment.

Use only with safety protections -



It is a must to use protection means suitable for the different welding works.

Use with only safety material -



It is prohibited to use water to quench fires on the electric machines.

Use only with non inserted voltage -



It is prohibited to make interventions before having disinserted the voltage.

No smoking -



It is prohibited to smoke while filling the tank with fuel.

No welding -



It is forbidden to weld in rooms containing explosive gases.

ADVICE No harm for persons and things

Use only with safety tools, adapted to the specific use -

It is advisable to use tools adapted to the various maintenance works.

Use only with safety protections, specifically suitable



It is advisable to use protections suitable for the different welding works.

Use only with safety protections -



It is advisable to use protections suitable for the different daily checking works.

Use only with safety protections -




It is advisable to use all protections while shifting the machine.

Use only with safety protections -



It is advisable to use protections suitable for the different daily checking works.and/or of maintenance.

 The installation and the general advice concerning the operations, are finalized to the correct use of the machine, in the place where it is used as generator group and/or welder.

ENGINE	Stop engine when fueling	CHECKING BOARD	Do not touch electric devices if you are barefoot or with wet clothes.
	Do not smoke, avoid flames, sparks or electric tools when fueling.		Always keep off leaning surfaces during work operations.
	Unscrew the cap slowly to let out the fuel vapours.		Static electricity can damage the parts on the circuit.
	Slowly unscrew the cooling liquid tap if the liquid must be topped up.		An electric shock can kill
	The vapor and the heated cooling liquid under pressure can burn face, eyes, skin.		
	Do not fill tank completely.		
	Wipe up spilled fuel before starting engine.		
	Shut off fuel of tank when moving machine (where it is assembled).		
	Avoid spilling fuel on hot engine.		
Sparks may cause the explosion of battery vapours			



FIRST AID. In case the operator should be sprayed by accident, from corrosive liquids a/o hot toxic gas or whatever event which may cause serious injuries or death, predispose the first aid in accordance with the ruling labour accident standards or of local instructions.

Skin contact	Wash with water and soap
Eyes contact	Irrigate with plenty of water, if the irritation persists contact a specialist
Ingestion	Do not induce vomit as to avoid the intake of vomit into the lungs, send for a doctor
Suction of liquids from lungs	If you suppose that vomit has entered the lungs (as in case of spontaneous vomit) take the subject to the hospital with the utmost urgency
Inhalation	In case of exposure to high concentration of vapours take immediately to a non polluted zone the person involved



FIRE PREVENTION. In case the working zone, for whatsoever cause goes on fire with flames liable to cause severe wounds or death, follow the first aid as described by the ruling norms or local ones.

EXTINCTION MEANS	
Appropriated	Carbonate anhydride (or carbon dioxide) powder, foam, nebulized water
Not to be used	Avoid the use of water jets
Other indications	Cover eventual shedding not on fire with foam or sand, use water jets to cool off the surfaces close to the fire
Particular protection	Wear an autorespiratory mask when heavy smoke is present
Useful warnings	Avoid, by appropriate means to have oil sprays over metallic hot surfaces or over electric contacts (switches, plugs, etc.). In case of oil sprinkling from pressure circuits, keep in mind that the inflammability point is very low.

WARNING					CAUTION		DANGER

WARNING **THE MACHINE MUST NOT BE USED IN AREAS WITH EXPLOSIVE ATMOSPHERE**





INSTALLATION AND ADVICE BEFORE USE

GASOLINE ENGINES

- ☞ Use in open space, air swept or vent exhaust gases, which contain the deadly carbone oxyde, far from the work area.


DIESEL ENGINES

- ☞ Use in open space, air swept or vent exhaust gases far from the work area.

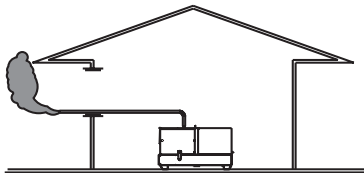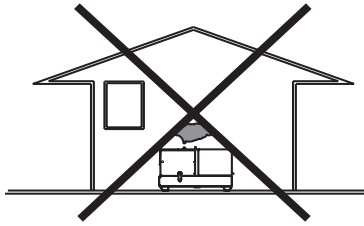


POSITION


Place the machine on a level surface at a distance of at least 1,5 m from buildings or other plants.

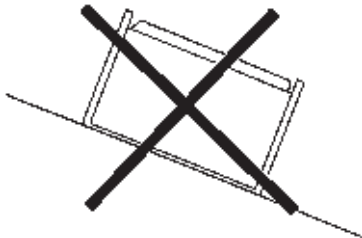

Maximum leaning of the machine (in case of dislevel)

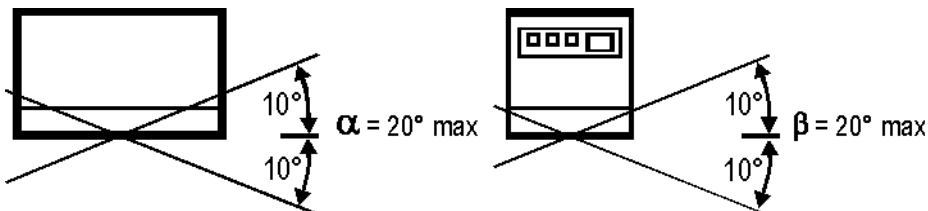

Check that the air gets changed completely and the hot air sent out does not come back inside the set so as to cause a dangerous increase of the temperature.

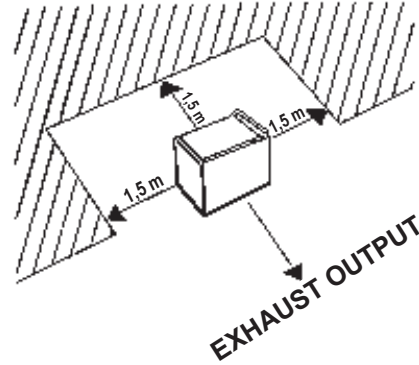

- ☞ Make sure that the machine does not move during the work: **block** it possibly with tools and/or devices made to this purpose.

MOVES OF THE MACHINE

- ☞ At any move check that the engine is **off**, that there are no connections with cables which impede the moves.

PLACE OF THE MACHINE






ATTENTION







For a safer use from the operator **DO NOT** fit the machine in locations with high risk of flood.


Please do not use the machine in weather conditions which are beyond IP protection shown both in the data plate and on page named "technical data" in this same manual.

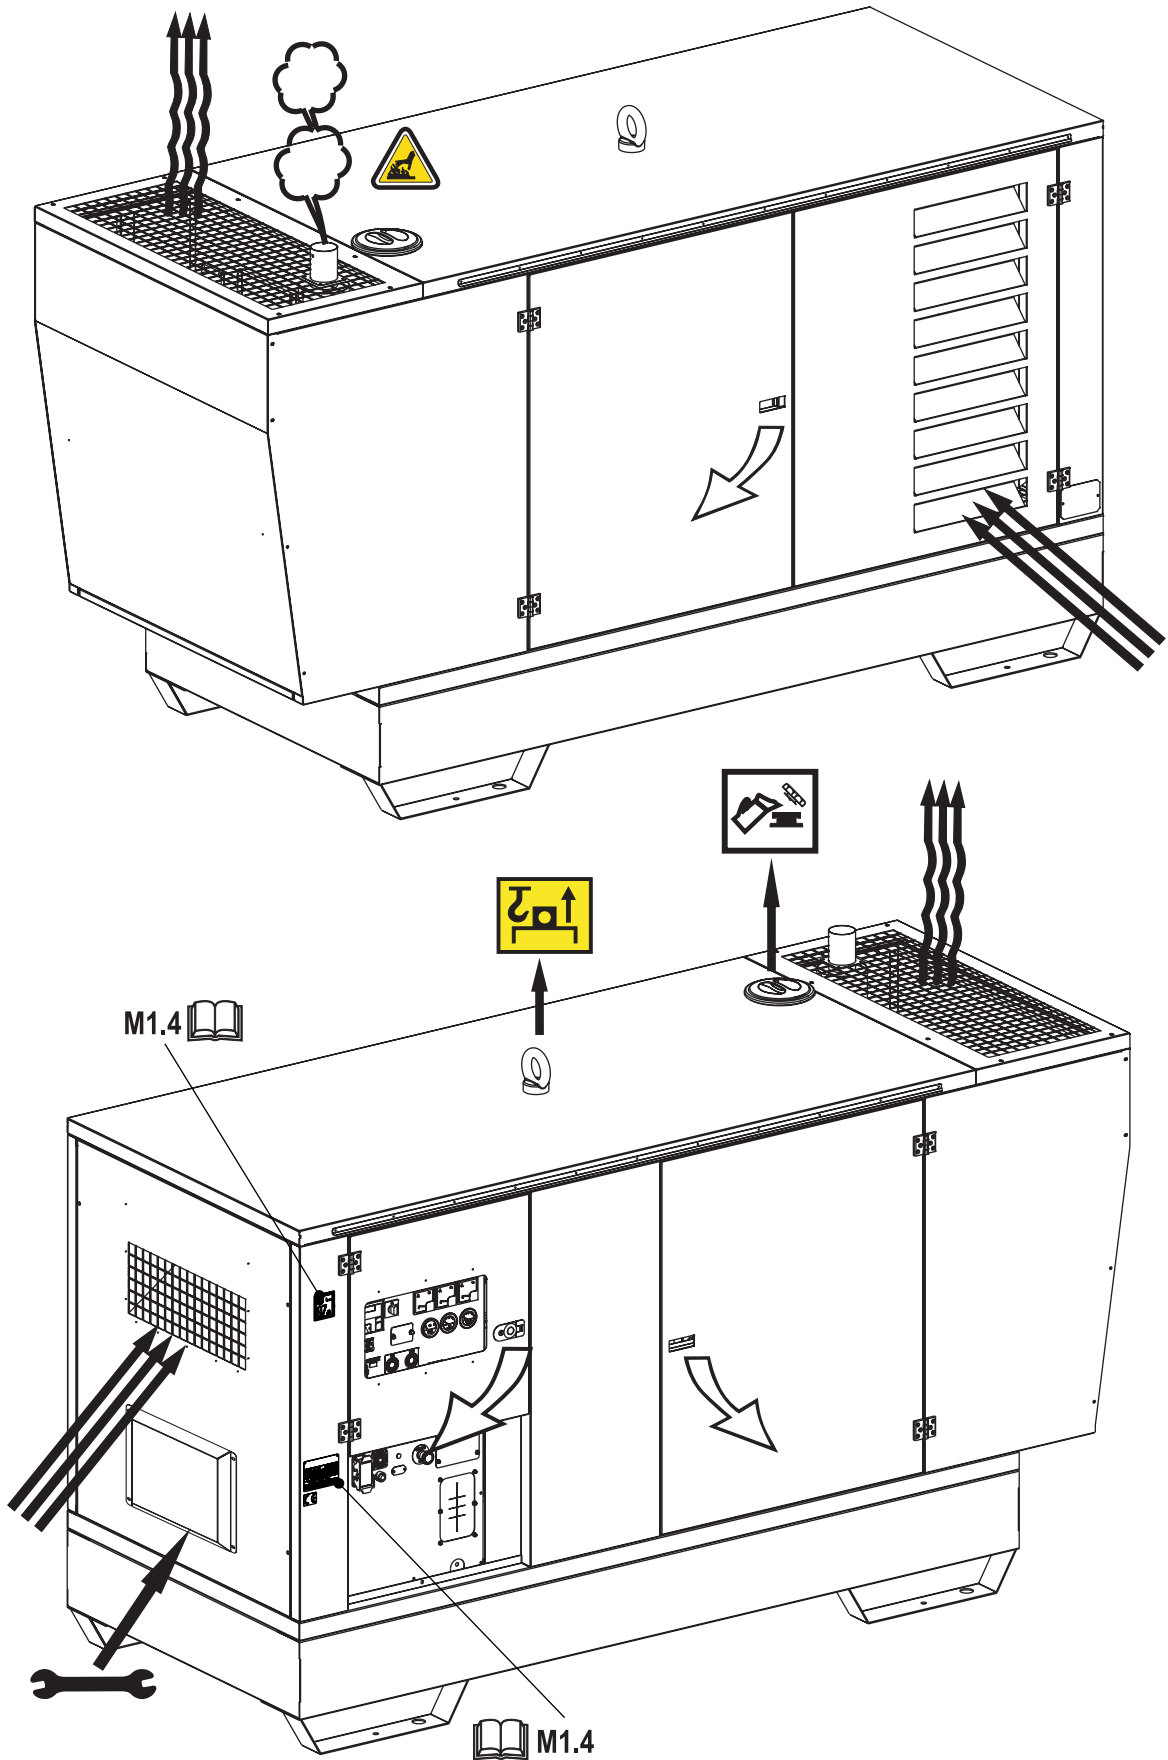

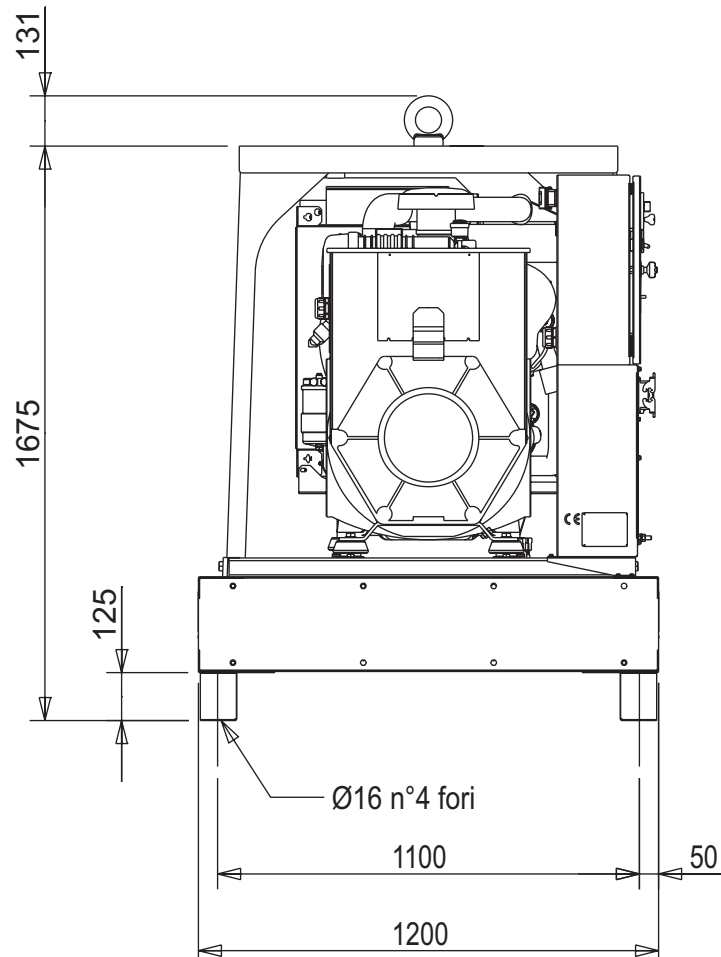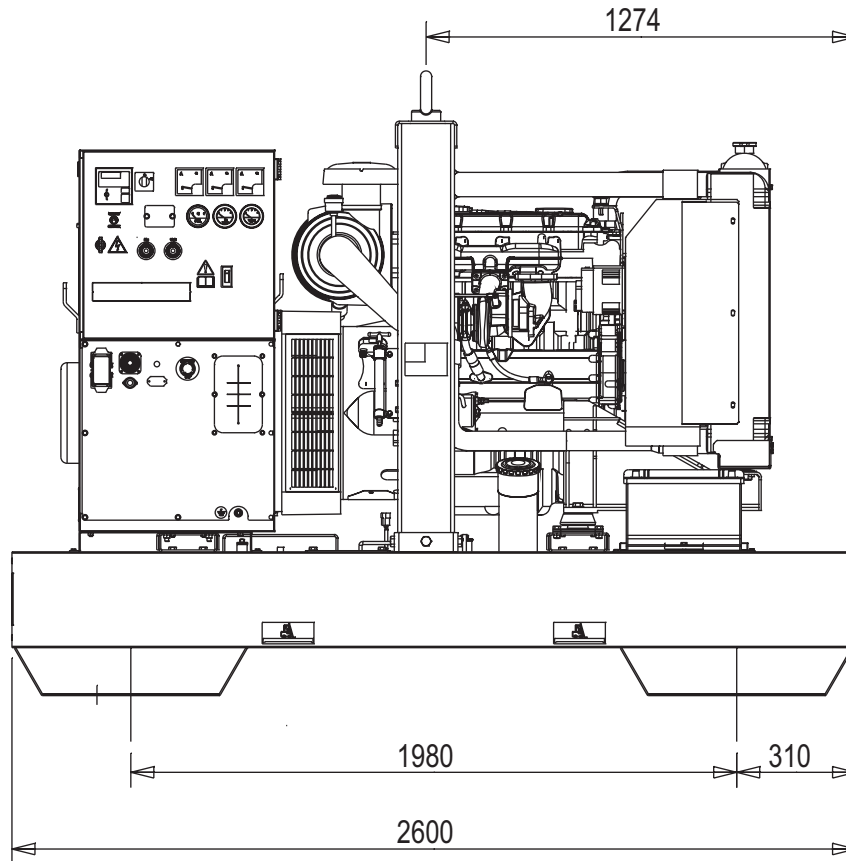


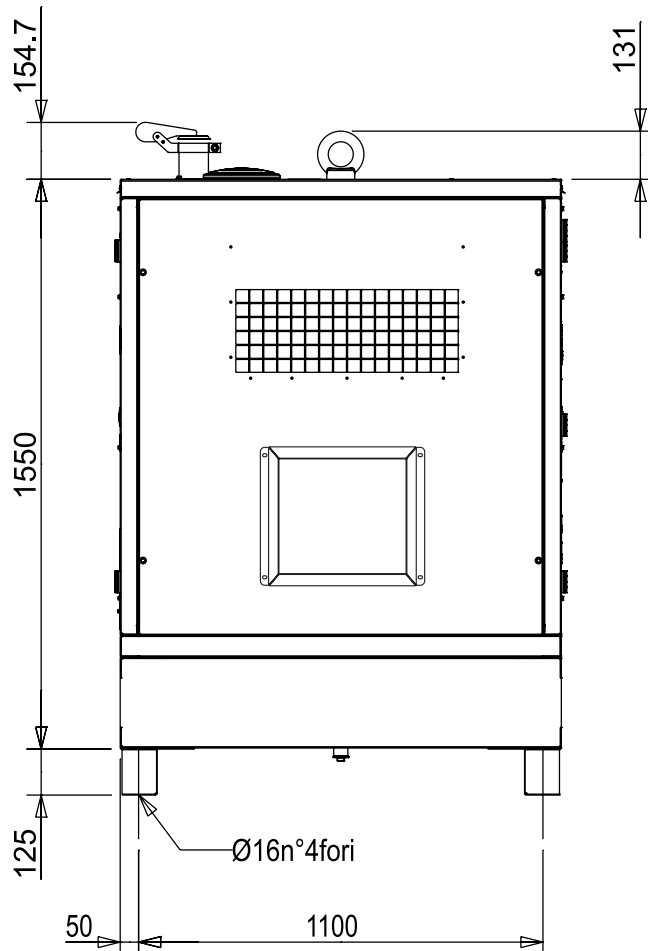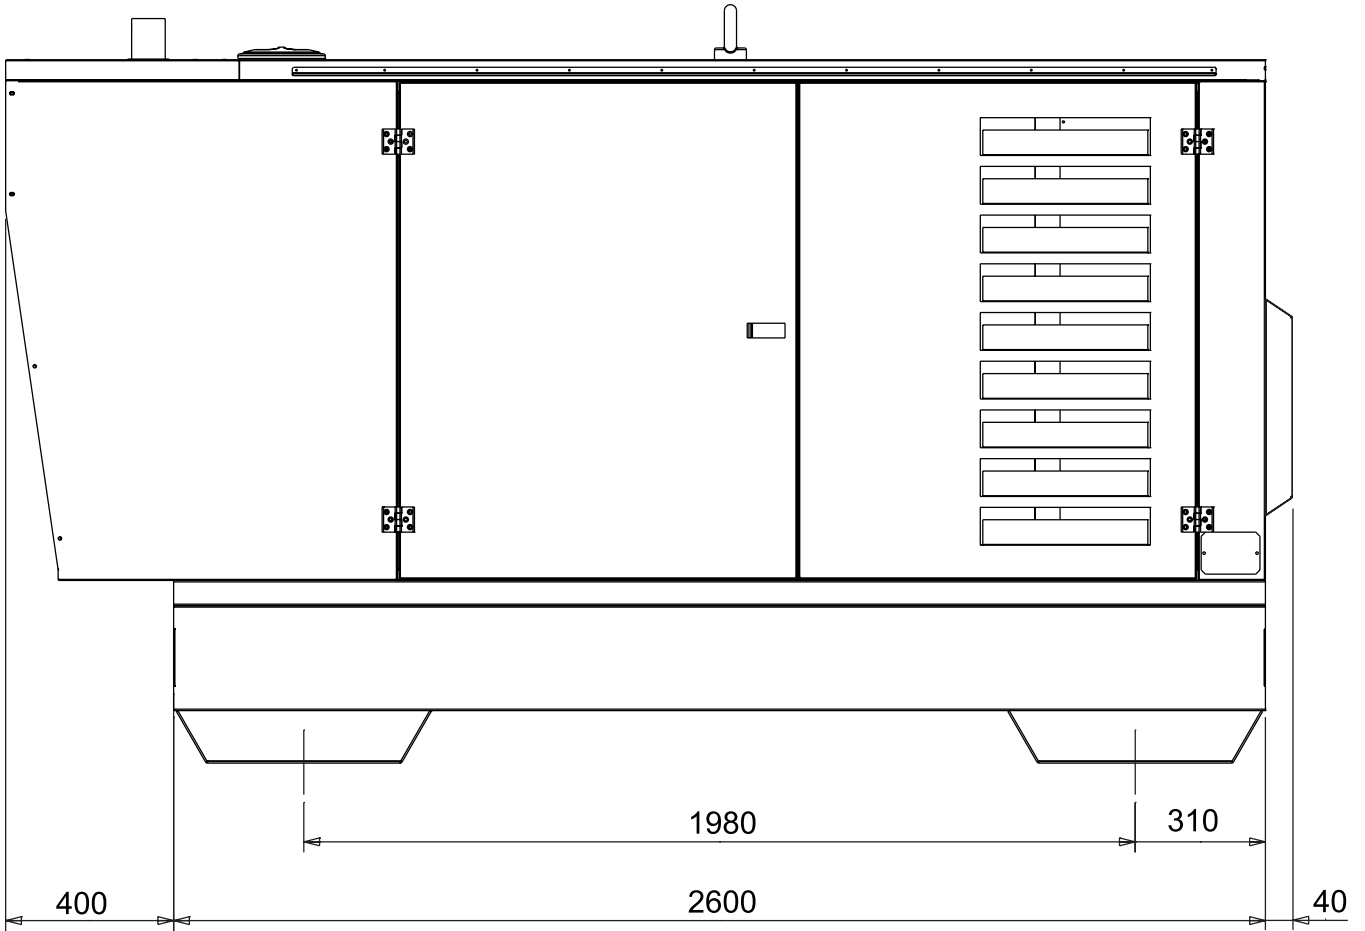

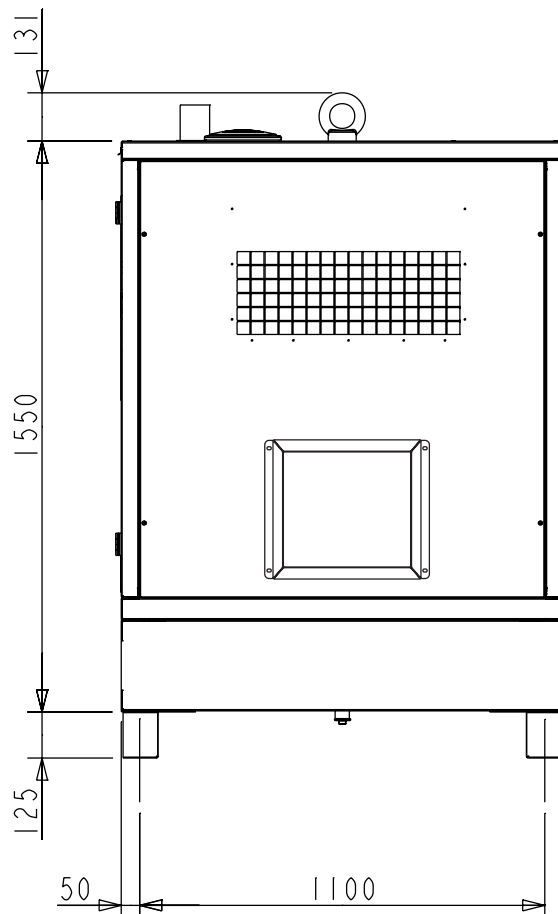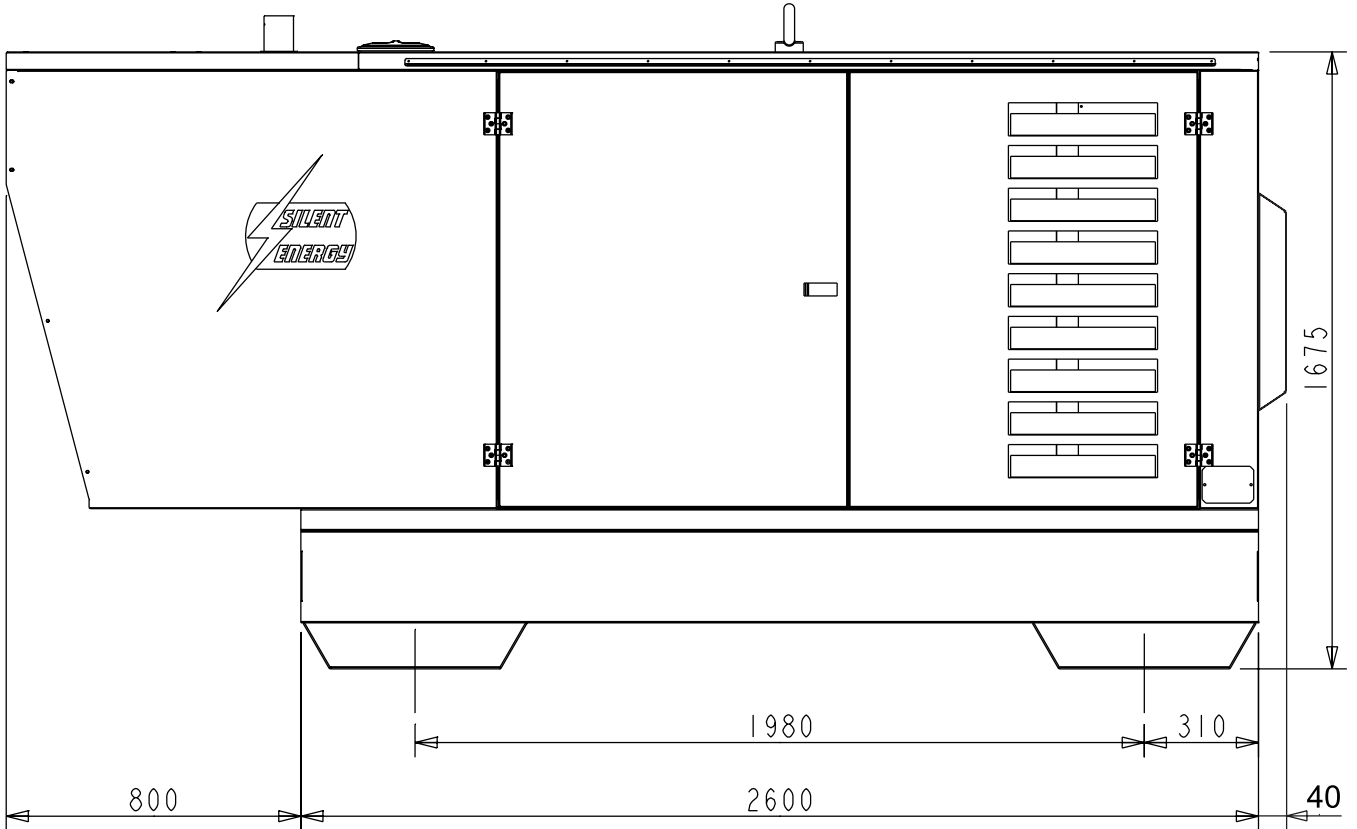

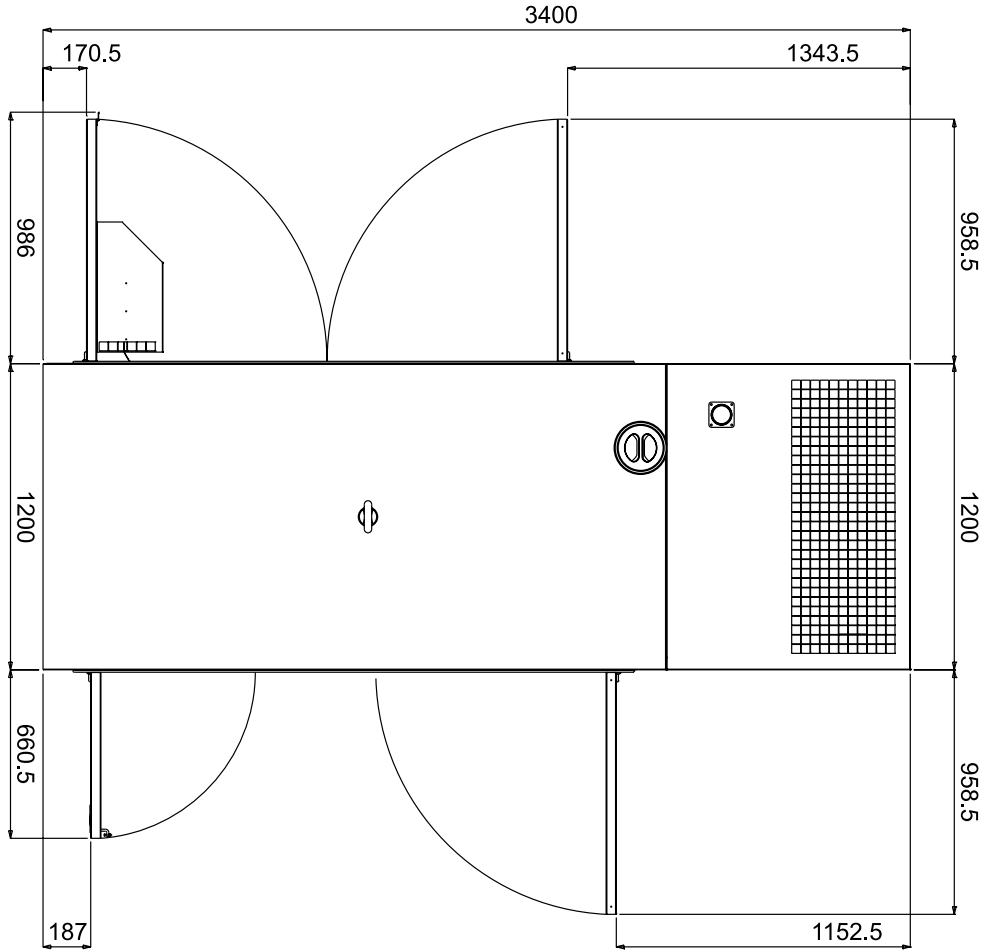


VERSIONE "SX"
"SX" VERSION

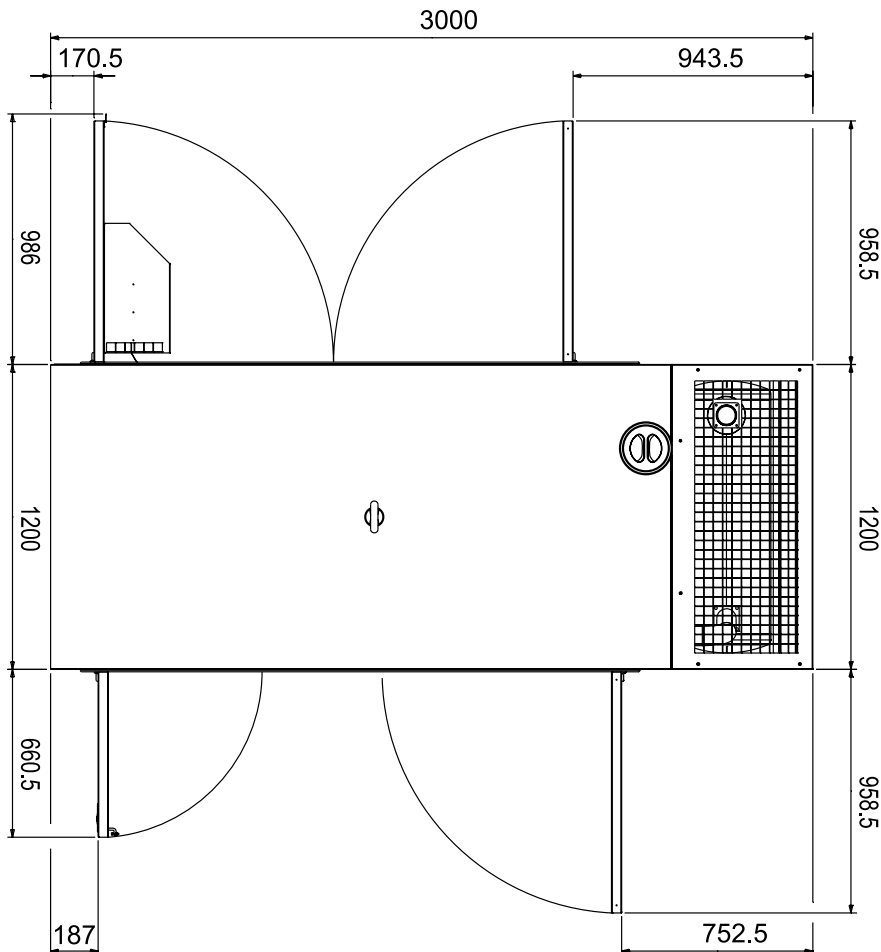

VERSIONE "S"
"S" VERSION






NOTE



Be sure that the lifting devices are: correctly mounted, adequate for the weight of the machine with its packaging, and conforms to local rules and regulations. When receiving the goods make sure that the product has not suffered damage during the transport, that there has not been rough handling or taking away of parts contained inside the packing or in the set. In case you find damages, rough handling or absence of parts (envelopes, manuals, etc.), we advise you to inform immediately our Technical Service.

For eliminating the packing materials, the User must keep to the norms in force in his country.

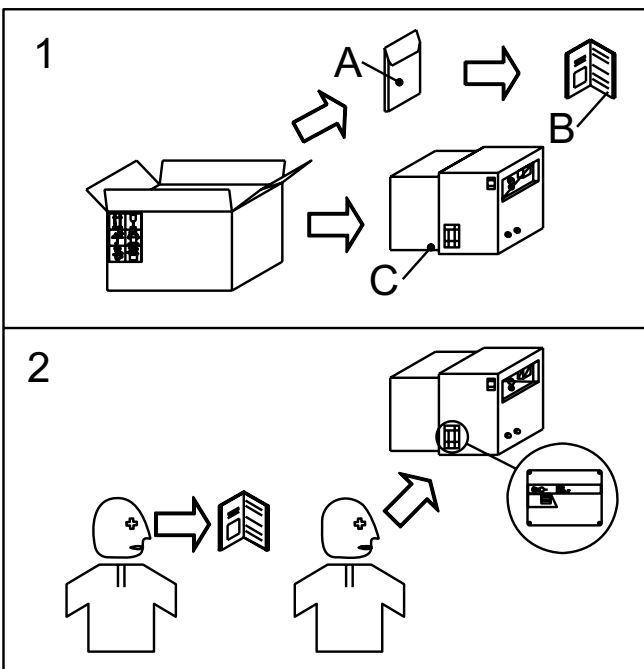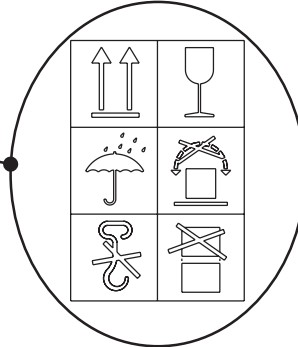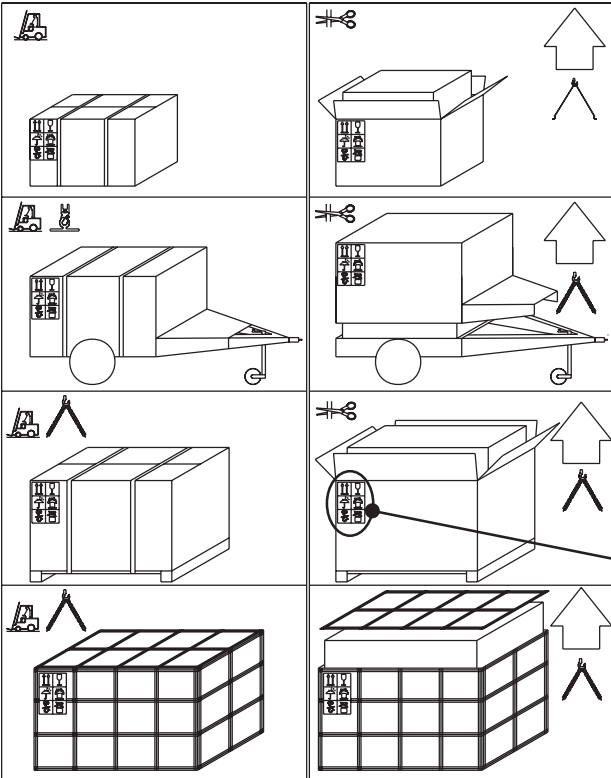

- 1) Take the machine (C) out of the shipment packing. Take out of the envelope (A) the user's manual (B).
- 2) Read: the user's manual (B), the plates fixed on the machine, the data plate.





NOTE

Transportation must always take place with the engine off, electrical cables and starting battery disconnected and fuel tank empty.











Be sure that the lifting devices are: correctly mounted, adequate for the weight of the machine with it's packaging, and conform to local rules and regulations.

Only authorized persons involved in the transport of the machine should be in the area of movement.

DO NOT LOAD OTHER PARTS WHICH CAN MODIFY WEIGHT AND BARICENTER POSITION.

IT IS STRICTLY FORBIDDEN TO DRAG THE MACHINE MANUALLY OR TOW IT BY ANY VEHICLE (model with no CTL accessory).

If you did not keep to the instructions, you could damage the structure of the machine.

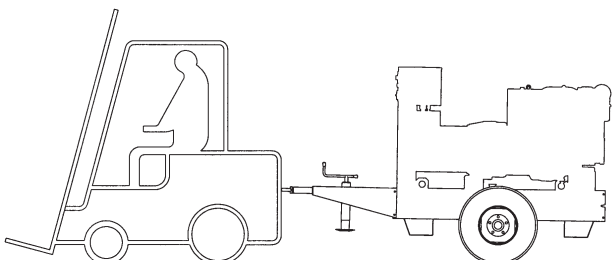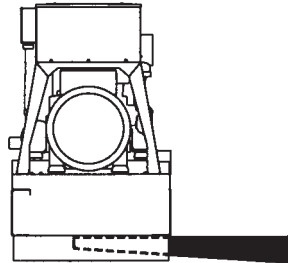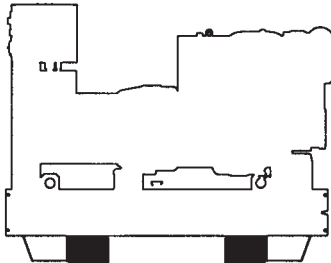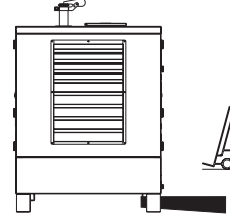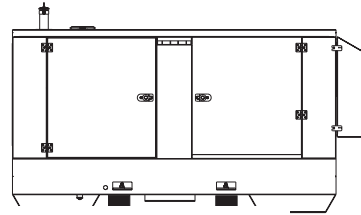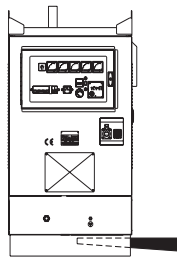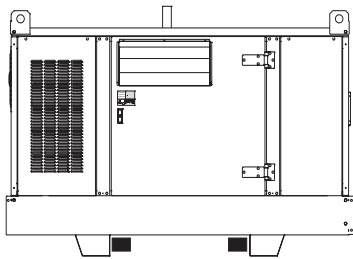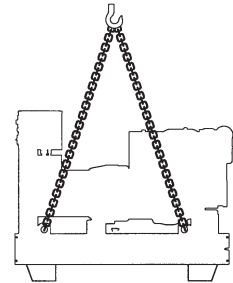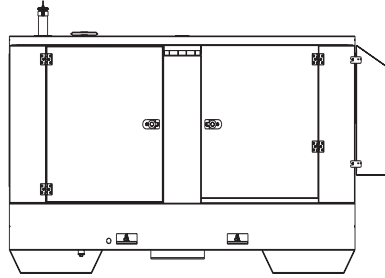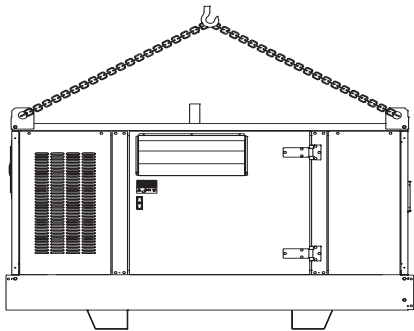



BATTERY WITHOUT MAINTENANCE



Connect the cable + (positive) to the pole + (positive) of the battery (after having taken away the protection), by properly tightening the clamp.

Check the state of the battery from the colour of the warning light which is in the upper part.

- Green colour: battery OK
- Black colour: battery to be recharged
- White colour: battery to be replaced

DO NOT OPEN THE BATTERY.



LUBRICANT

RECOMMENDED OIL

MOSA recommends selecting **AGIP** engine oil. Refer to the label on the motor for the recommended products.

 PRODOTTI RACCOMANDATI RECOMMENDED PRODUCTS	
AGIP SIGMA TURBO PLUS 15W/40 API CG4 - ACEA E3	OLIO MOTORE DIESEL DIESEL ENGINE OIL
AGIP SUPERMOTOROIL 20W/50 API CC-SF	OLIO MOTORE BENZINA GASOLINE ENGINE OIL
AGIP ANTIFREEZE EXTRA INIBITE ETHYLENE GLYCOL (50% + 50% + H ₂ O)	CIRCUITO DI RAFFREDDAMENTO COOLING CIRCUIT (CUNA NC 956-16 ED 97)

Please refer to the motor operating manual for the recommended viscosity.

REFUELLING AND CONTROL:

Carry out refuelling and controls with motor at level position.

1. Remove the oil-fill tap (24)
2. Pour oil and replace the tap
3. Check the oil level using the dipstick (23); the oil level must be comprised between the minimum and maximum indicators.



AIR FILTER

Check that the dry air filter is correctly installed and that there are no leaks around the filter which could lead to infiltrations of non-filtered air to the inside of the motor.



FUEL



ATTENTION



Do not smoke or use open flames during refuelling operations, in order to avoid explosions or fire hazards.

Fuel fumes are highly toxic; carry out operations outdoors only, or in a well-ventilated environment.



Avoid accidentally spilling fuel. Clean any eventual leaks before starting up motor.

Refill the tank with good quality diesel fuel, such as automobile type diesel fuel, for example.

For further details on the type of diesel fuel to use, see the motor operating manual supplied.

Do not fill the tank completely; leave a space of approx. 10 mm between the fuel level and the wall of the tank to allow for expansion.

In rigid environmental temperature conditions, use special winterized diesel fuels or specific additives in order to avoid the formation of paraffin.



ATTENTION

It is dangerous to fill the motor with too much oil, as its combustion can provoke a sudden increase in rotation speed.





COOLING LIQUID



ATTENTION



Do not remove the radiator tap with the motor in operation or still hot, as the liquid coolant may spurt out and cause serious burns. Remove the tap very carefully.

Remove the tap and pour the liquid coolant into the radiator; the quantity and composition of the liquid coolant are indicated in the motor operating manual. Replace the tap, ensuring it is perfectly closed. After refilling operations, allow the motor to run for a brief time and check the level, as it may have diminished due to air bubbles present in the cooling circuit; restore the level with water. To replace the liquid coolant, follow the operations described in the motor operating manual.

ATTENTION:

The engine cooling system is originally filled with coolant type:
AGIP ANTIFREEZE EXTRA

During the engine life it is strongly recommended to use the same coolant type. This is because a coolant change would require a careful cleaning of the cooling system, which is not an easy job. A lack in tacking these precautions would result in the mix of different additives used in different coolants which would originate gelatinous substances capable of obstructing the cooling system.

 PRODOTTI RACCOMANDATI RECOMMENDED PRODUCTS	
AGIP SIGMA TURBO PLUS 15W/40 API CG4 - ACEA E3	OLIO MOTORE DIESEL DIESEL ENGINE OIL
AGIP SUPERMOTOROIL 20W/50 API CC-SF	OLIO MOTORE BENZINA GASOLINE ENGINE OIL
AGIP ANTIFREEZE EXTRA INIBITE ETHYLENE GLYCOL (50% + 50% + H ₂ O)	CIRCUITO DI RAFFREDDAMENTO COOLING CIRCUIT (CUNA NC 956-16 ED 97)



GROUNDING CONNECTION

The grounding connection to an earthed installation **is obligatory** for all models equipped with a differential switch (circuit breaker). In these groups the generator star point is generally connected to the machine's earthing; by employing the TN or TT distribution system, the differential switch guarantees protection against indirect contacts.

In the case of powering complex installations requiring or employing additional electrical protection devices, the coordination between the protection devices must be verified.

For the grounding connection, use the terminal (12); comply to local and/or current regulations in force for electrical installations and safety.





Check daily



NOTE

Do not alter the primary conditions of regulation and do not touch the sealed parts.


ENGINES WITH MANUAL RECOIL



reduced speed for some minutes.



Accelerate the engine at max., set lever on maximum position and




then take up load.

Hold the starting handle firmly.
Pull the rope hard and fast. Pull it all the way out.
Use two hands if necessary.
Then returning it slowly.

ENGINES WITH ACCELERATOR LEVER

Make sure that the accelerator lever or the switch (16) is at its minimum setting.

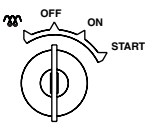

Insert the electric protection device (D-Z2-N2) lever towards above and, where mounted, check the isolation monitor (A3) see page M37 –


Introduce the key (Q1), turn it clockwise completely, leaving it as soon as the engine starts and/or the push button (32) (models without key) leaving it as soon as the engine starts.

NB.: for safety reason the key must be kept by qualified personnel.

Once the engine has started leave it running at a

ENGINES WITHOUT ACCELERATOR LEVER

Insert the electric protection device (D-Z2-N2) lever towards above and, where mounted, check the isolation monitor (A3) see page M37 –

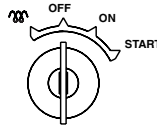

Introduce the key (Q1), turn it clockwise completely, leaving it as soon as the engine starts.

NB.: for safety reason the key must be kept by qualified personnel.

Let the engine run for some minutes before drawing the load.

Open the fuel cock (where it is assembled).



CAUTION


RUNNING-IN

During the first 50 hours of operation, do not use more than 60% of the maximum output power of the unit and check the oil level frequently, in any case please stick to the rules given in the engine use manual.




NOTE


The machines with E.P.1 engine protection device (D1), use the accelerator lever ONLY IN EMERGENCY when the engine protection does not work. In this case turn immediately to our Authorized Assistance Centers.

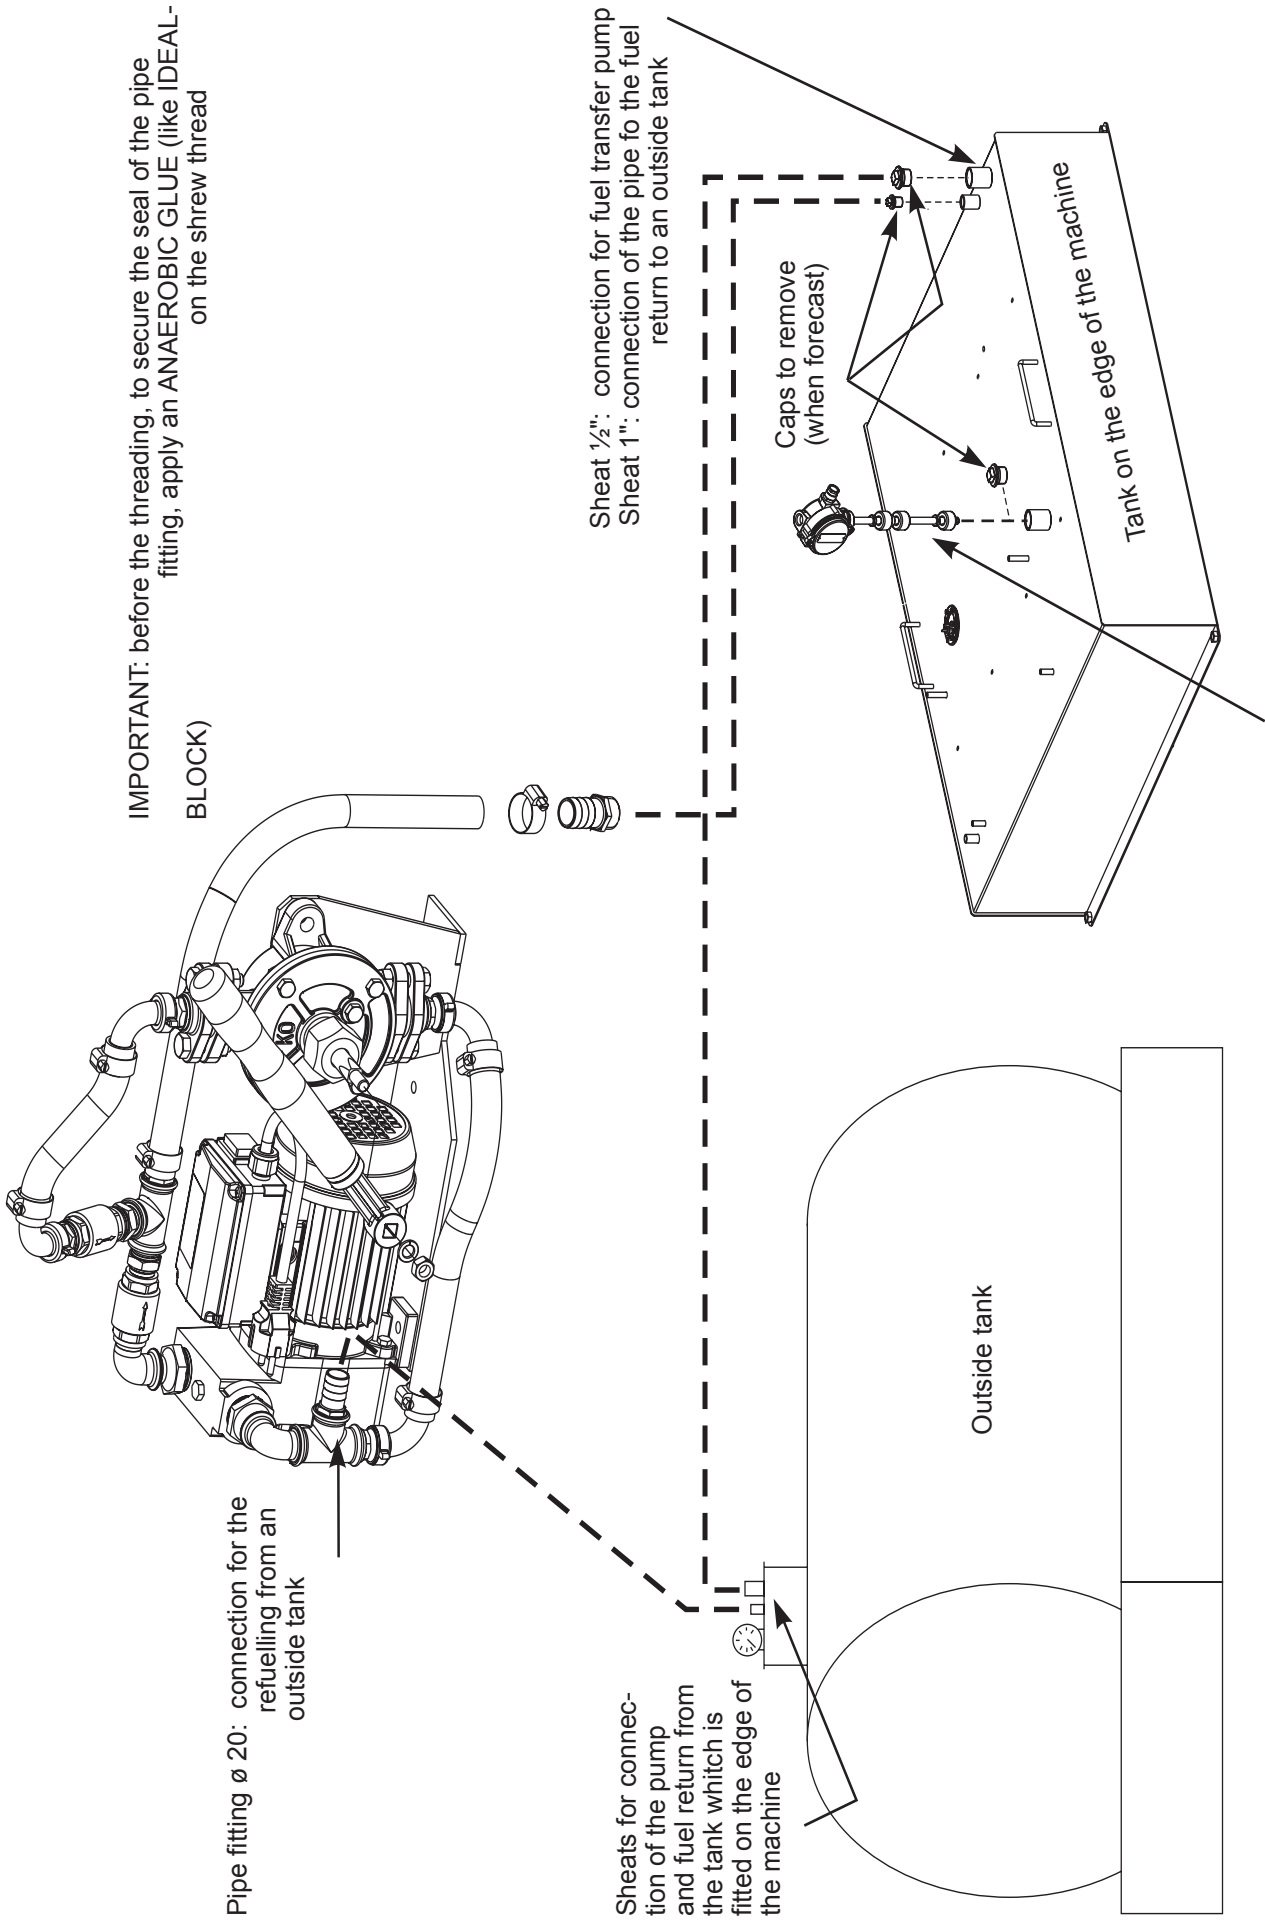


4A	Hydraulic oil level light	A4	Button indicating light 30 I/1' PTO HI	W5	Battery voltmeter
9	Welding socket (+)	B2	Engine control unit EP2	X1	Remote control socket
10	Welding socket (-)	B3	E.A.S. connector	Y3	Button indicating light 20 I/1' PTO HI
12	Earth terminal	B4	Exclusion indicating light PTO HI	Y5	Commutator/switch, serial/parallel
15	A.C. socket	B5	Auxiliary current push button	Z2	Thermal-magnetic circuit breaker
16	Accelerator lever	C2	Fuel level light	Z3	Selection push button 20 I/1' PTO HI
17	Feed pump	C3	E.A.S. PCB	Z5	Water temperature indicator
19	48V D.C. socket	C6	Control unit for generating sets QEA		
22	Engine air filter	D	Ground fault interrupter (30 mA)		
23	Oil level dipstick	D1	Engine control unit and economiser EP1		
24	Engine oil reservoir cap	D2	Ammeter		
24A	Hydraulic oil reservoir cap	E2	Frequency meter		
24B	Water filling cap	F	Fuse		
25	Fuel prefilter	F3	Stop switch		
26	Fuel tank cap	F5	Warning light, high temperature		
27	Muffler	F6	Arc-Force selector		
28	Stop control	G1	Fuel level transmitter		
29	Engine protection cover	H2	Voltage commutator		
30	Engine cooling/alternator fan belt	H6	Fuel electro pump		
31	Oil drain tap	H8	Engine control unit EP7		
31A	Hydraulic oil drain tap	I2	48V A.C. socket		
31B	Water drain tap	I3	Welding scale switch		
31C	Exhaust tap for tank fuel	I4	Preheating indicator		
32	Button	I5	Y/▲ switch		
33	Start button	I6	Start Local/Remote selector		
34	Booster socket 12V	I8	AUTOIDLE switch		
34A	Booster socket 24V	L	A.C. output indicator		
35	Battery charge fuse	L5	Emergency button		
36	Space for remote control	L6	Choke button		
37	Remote control	M	Hour counter		
42	Space for E.A.S.	M1	Warning level light		
42A	Space for PAC	M2	Contactora		
47	Fuel pump	M5	Engine control unit EP5		
49	Electric start socket	M6	CC/CV switch		
54	Reset button PTO HI	N	Voltmeter		
55	Quick coupling m. PTO HI	N1	Battery charge warning light		
55A	Quick coupling f. PTO HI	N2	Thermal-magnetic circuit breaker/ Ground fault interrupter		
56	Hydraulic oil filter		Pre-heat push-button		
59	Battery charger thermal switch	N5	Connector - wire feeder		
59A	Engine thermal switch	O1	Oil pressure warning light/Oil alert		
59B	Aux current thermal switch	P	Welding arc regulator		
59C	Supply thermal switch wire feeder- 42V	Q1	Starter key		
59D	Pre-heater (spark plug) thermal switch	Q3	Derivation box		
59E	Supply thermal switch oil/water heater	Q4	Battery charge sockets		
59F	Electropump thermal switch	Q7	Welding selector mode		
63	No load voltage control	R3	Siren		
66	Choke control	S	Welding ammeter		
67A	Auxiliary / welding current control	S1	Battery		
68	Cellulosic electrodes control	S3	Engine control unit EP4		
69A	Voltmeter relay	S6	Wire feeder supply switch		
70	Warning lights	S7	Plug 230V singlephase		
71	Selecting knob	T	Welding current regulator		
72	Load commut. push button	T4	Dirty air filter warning light/indicator		
73	Starting push button	T5	Earth leakage relay		
74	Operating mode selector	T7	Analogic instrument V/Hz		
75	Power on warning light	U	Current transformer		
76	Display	U3	R.P.M. adjuster		
79	Wire connection unit	U4	Polarity inverter remote control		
86	Selector	U5	Release coil		
86A	Setting confirmation	U7	Engine control unit EP6		
87	Fuel valve	V	Welding voltage voltmeter		
88	Oil syringe	V4	Polarity inverter control		
A3	Insulation monitoring	V5	Oil pressure indicator		
		W1	Remote control switch		
		W3	Selection push button 30 I/1' PTO HI		

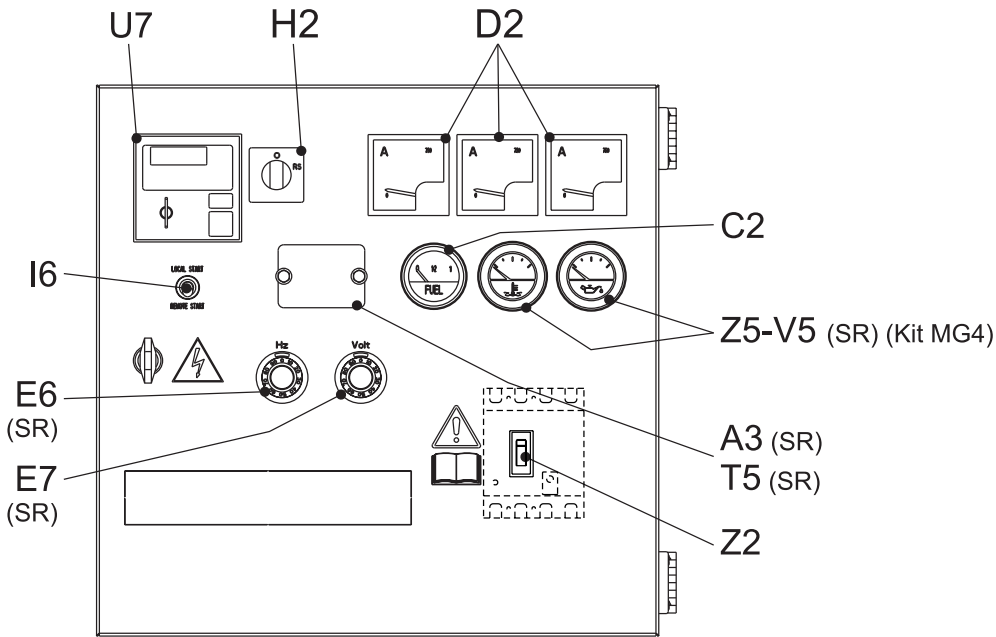

**VERSIONE STANDARD
STANDARD VERSION**

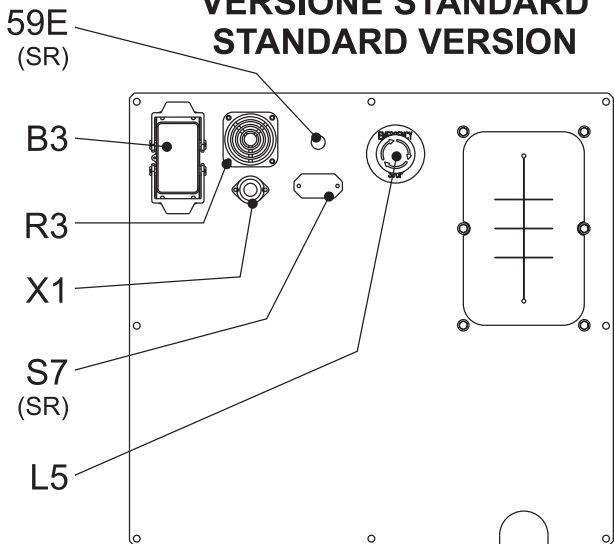

**KIT 6 PRESE
6 SOCKETS KIT
(SR)**

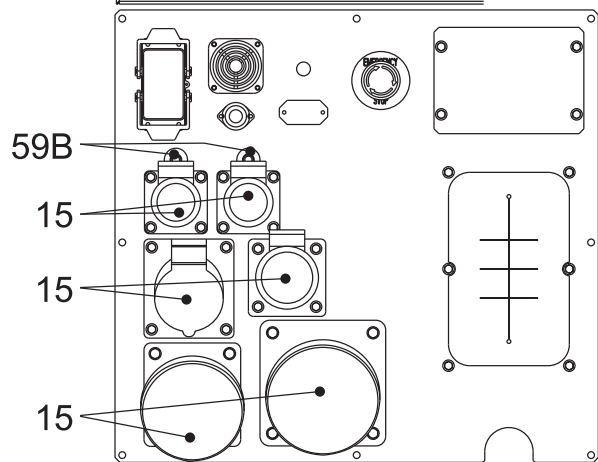



WARNING

It is absolutely forbidden to connect the unit to the public mains and/or another electrical power source .



Access forbidden to area adjacent to electricity-generating group for all non-authorized personnel.

The electricity-generating groups are to be considered electrical energy producing stations.

The dangers of electrical energy must be considered together with those related to the presence of chemical substances (fuels, oils, etc.), rotating parts and waste products (fumes, discharge gases, heat, etc.).

GENERATION IN AC (ALTERNATING CURRENT)

Before each work session check the efficiency of the ground connection for the electricity-generating group if the distribution system adopted requires it, such as, for example, the TT and TN systems.

Check that the electrical specifications for the units to be powered - voltage, power, frequency - are compatible with those of the generator. Values that are too high or too low for voltage and frequency can damage electrical equipment irreparably.

In some cases, for the powering of three-phase loads, it is necessary to ensure that the cyclic direction of the phases corresponds to the installation's requirements.

Connect the electric devices to be powered to the AC sockets, using suitable plugs and cables in prime condition.

Before starting up the group, make certain no dangerous situations exist on the installation to be powered.

Check that the thermal-magnetic switch (Z2) is in the OFF position (input lever in downward position).

Start up the electricity-generating group, positioning the thermal-magnetic switch (Z2) and differential switch (D) to ON (input lever in upward position).

Before powering on the utilities, check that the voltmeter (N) and frequency meter (E2) indicate nominal values; in addition, check on the voltmeter change-over switch (H2) (where it is assembled) that the three line voltages are the same.

In the absence of a load, the values for voltage and frequency can be greater than their nominal values. See sections on VOLTAGE and FREQUENCY.

OPERATING CONDITIONS

POWER

The electrical power expressed in kVA on an electricity-generating group is the available output power to the reference environmental conditions and nominal values for: voltage, frequency, power factors ($\cos \varphi$).

There are various types of power: PRIME POWER

(PRP), STAND-BY POWER established by ISO 8528-1 and 3046/1 Norms, and their definitions are listed in the manual's TECHNICAL SPECIFICATIONS page.

During the use of the electricity-generating group **NEVER EXCEED** the power indications, paying careful attention when several loads are powered simultaneously.

VOLTAGE

GENERATORS WITH COMPOUND SETTING (THREEPHASE)

GENERATORS WITH CONDENSER SETTING (SINGLEPHASE)

In these types of generators, the no-load voltage is generally greater than 3–5% with respect to its nominal value; f.e. for nominal voltage, threephase 400Vac or singlephase 230Vac, the no-load voltage can be comprised between 410-420V (threephase) and 235-245V (singlephase). The precision of the load voltage is maintained within $\pm 5\%$ with balanced loads and with a rotation speed variation of 4%. Particularly, with resistive loads ($\cos \varphi = 1$), a voltage over-elevation occurs which, with the machine cold and at full load, can even attain +10 %, a value which in any case is halved after the first 10-15 minutes of operation.

The insertion and release of the full load, under constant rotation speed, provokes a transitory voltage variation that is less than 10%; the voltage returns to its nominal value within 0.1 seconds.

GENERATORS WITH ELECTRONIC SETTING (A.V.R.)

In these types of generators, the voltage precision is maintained within $\pm 1,5\%$, with speed variations comprised from -10% to +30%, and with balanced loads. The voltage is the same both with no-load and with load; the insertion and release of the full load provokes a transitory voltage variation that is less than 15%; the voltage returns to its nominal value within 0.2–0.3 seconds.

FREQUENCY

The frequency is a parameter that is directly dependent on the motor's rotation speed. Depending on the type of alternator, 2 or 4 pole, we will have a frequency of 50/60 Hz with a rotation speed of 3000/3600 or 1500/1800 revolutions per minute.

The frequency, and therefore the number of motor revolutions, is maintained constant by the motor's speed regulation system.

Generally, this regulator is of a mechanical type and presents a droop from no-load to nominal load which is less than 5 % (static or droop), while under static conditions precision is maintained within $\pm 1\%$. Therefore, for generators at 50Hz the no-load frequency can be 52–52.5 Hz, while for generators at 60Hz the no-load frequency can be 62.5-63Hz.



In some motors or for special requirements the speed regulator is electronic; in these cases, precision under static operating conditions attains $\pm 0.25\%$, and the frequency is maintained constant in operation from no-load to load (isochronal operation).

POWER FACTOR - COS φ

The power factor is a value which depends on the load's electrical specifications; it indicates the ratio between the Active Power (kW) and Apparent Power (kVA). The apparent power is the total power necessary for the load, achieved from the sum of the active power supplied by the motor (after the alternator has transformed the mechanical power into electrical power), and the Reactive Power (kVAR) supplied by the alternator. The nominal value for the power factor is $\cos \varphi = 0,8$; for different values comprised between 0.8 and 1 it is important during usage not to exceed the declared active power (kW), so as to not overload the electricity-generating group motor; the apparent power (kVA) will diminish proportionally to the increase of $\cos \varphi$.

For $\cos \varphi$ values of less than 0.8 the alternator must be downgraded, since at equal apparent power the alternator should supply a greater reactive power. For reduction coefficients, contact the Technical Service Department.

START-UP OF ASYNCHRONOUS MOTORS

The start-up of asynchronous motors from an electricity-generating group can prove critical because of high start-up currents the asynchronous motor requires (I start-up = up to 8 times the nominal current I_n). The start-up current must not exceed the alternator's admissible overload current for brief periods, generally in the order of 250–300% for 10–15 seconds.

To avoid a group oversize, we recommend following these precautionary measures:

- in the case of a start-up of several motors, subdivide the motors into groups and set up their start-up at intervals of 30–60 seconds.
- when the operating machine coupled to the motor allows it, see to a start-up with reduced voltage, star point/triangle start-up or with autotransformer, or use a soft-start system.

In all cases, when the user circuit requires the start-up of an asynchronous motor, it is necessary to check that there are no utilities inserted into the installation, which in the case of a voltage droop can cause more or less serious disservices (opening of contact points, temporary lack of power to control and command systems, etc.).

SINGLE-PHASE LOADS

Power to monophasic utilities by means of three-phase generators requires some operating limitations.

- In single-phase operation, the declared voltage tolerance can no longer be maintained by the regulator (compound or electronic regulator), since the system becomes highly unbalanced. **The voltage variation on the phases not affected by the power can prove dangerous; we recommend sectioning the other loads eventually connected.**


- The maximum power which can be drawn between Neutral and Phase (start connection) is generally 1/3 of the nominal three-phase power; some types of alternators even allow for 40%. Between two Phases (triangle connection) the maximum power cannot exceed 2/3 of the declared three-phase power.
- In electricity-generating groups equipped with monophasic sockets, use these sockets for connecting the loads. In other cases, always use the "R" phase and Neutral.

ELECTRIC PROTECTIONS

THERMAL-MAGNETIC SWITCH

The electricity-generating group is protected against short-circuits and against overloads by a thermal-magnetic switch (Z2) situated upstream from the installation. Operating currents, both thermic and magnetic, can be fixed or adjustable in relation to the switch model.


In models with adjustable operating current **do not modify** the settings, since doing so can compromise the installation's protection or the electricity-generating

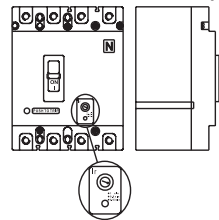

group's output characteristics. For eventual variations, contact our Technical Service Department.

The intervention of the protection feature against overloads is not instantaneous, but follows a current overload/time outline; the greater the overload the less the intervention.

Furthermore, keep in mind that the nominal operating current refers to an operating temperature of 30°C, so that each variation of 10°C roughly corresponds to a variation of 5% on the value of nominal current.

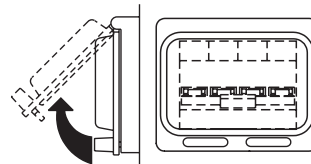



In case of an intervention on the part of the thermal magnetic protection device,

check that the total absorption does not exceed the electricity-generating group's nominal current.

DIFFERENTIAL SWITCH

The differential switch or differential relay guarantee protection against indirect contacts due to malfunction currents towards the ground. When the device detects a malfunction current that is higher than the nominal current or the set current, it intervenes by cutting off power to the circuit connected.

In the case of an intervention

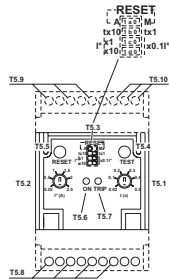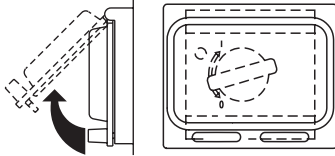

by the differential switch, check that there are no sheathing defects in the installation: connection cables, sockets and plugs, utilities connected.

Before each work session, check the operation of the differential protection device by pressing the test key. The electricity-generating group must be in operation, and the lever on the differential switch must be in the ON position.

THERMIC PROTECTION

Generally present to protect against overloads on an individual power socket c.a.

When the nominal operating current has been exceeded, the protection device intervenes by cutting off power to the socket.

The intervention of the protection device against overloads is not instantaneous, but follows a current overload/time outline; the greater the overload the less the intervention.

In case of an intervention, check that the current absorbed by the load does not exceed the protection's nominal operating current.

Allow the protection to cool off for a few minutes before resetting by pressing the central pole.

USAGE WITH EAS AUTOMATIC START-UP PANEL

The electricity-generating group in combination with the EAS automatic start-up panel forms a unit for distributing electrical energy within a few seconds of a power failure from the commercial electrical power line.

Below is some general operating information; refer to the automatic panel's specific manual for details on installation, command, control and signalling operations.

- Perform connections on the installation in safety conditions. Position the automatic panel in RESET or LOCKED mode.
- Carry out the first start-up in MANUAL mode. Check that the generator's LOCAL START / REMOTE START switch (I6) is in the REMOTE position. Check that the generator switches are enabled (input lever in upward position). Position the EAS panel in manual mode by pressing MAN. key, and only after having checked that there are no dangerous situations, press the START key to start the electricity-generating group.
- During the operation of the generator, all controls and signals from both the automatic panel and group are enabled; it is therefore possible to control its operation from both positions.

In case of an alarm with a shutdown of the motor (low pressure, high temperature, etc.), the automatic panel will indicate the malfunction that has caused the stoppage, while the generator's front panel will be disabled and will no longer supply any information.



ATTENTION

Do not keep the central pole on the thermic protection forcefully pressed to prevent its intervention.

**MAKE SURE**


- The selector LOCAL START/REMOTE START (I6) of the generating set must be switched on LOCALSTART.
- Put the selector „switch board (N7)“ on ON.

The coupling of the TCM 35 with the generating set, ready for remot starting, permits to work far from the set itself.

The remote control is connected to the front plate (X1), and/or rear plate, with a multiple connector.

N.B. The remote control TCM 35 can be used only with machines equipped with control and protection device EP6 (U7).

For use of TCM 35 see page M21 (start and stop) of this manual.

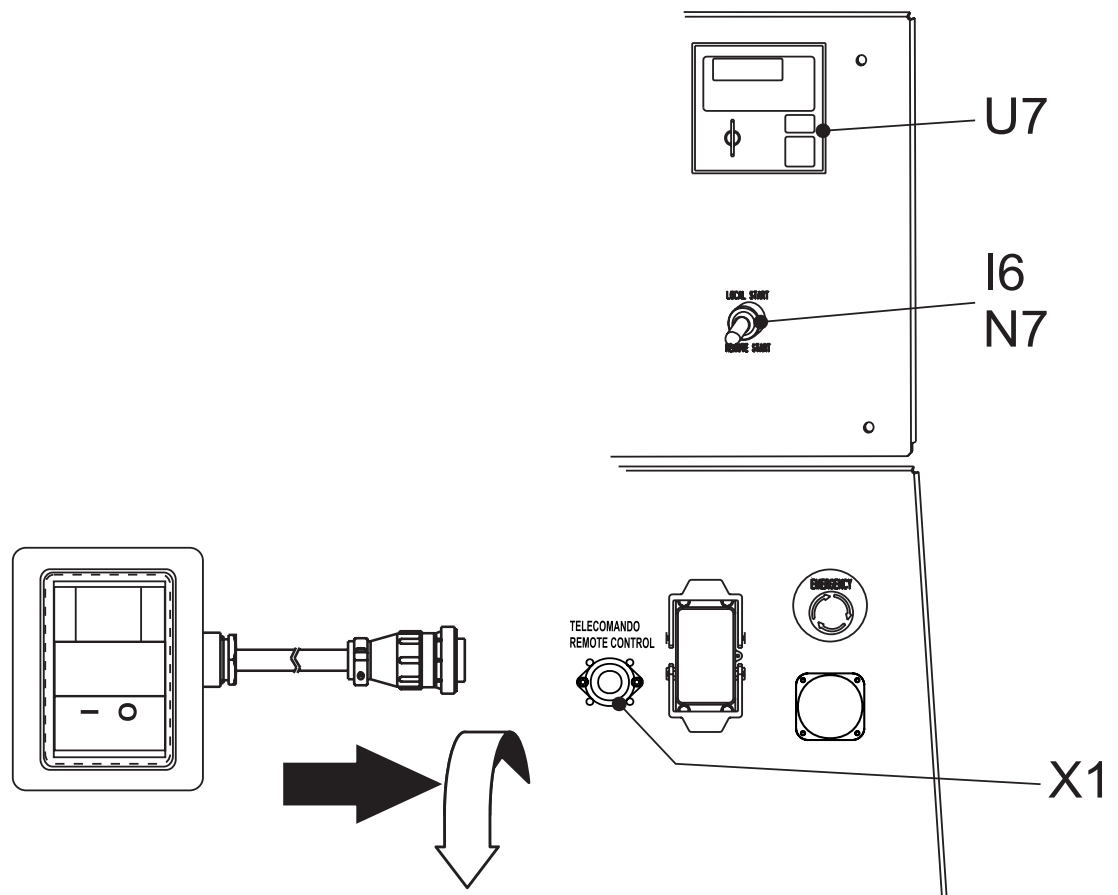



NOTE

The setting modifications of GFI are executed by qualified personnel. In case, contact After Sales Support. Before using the machine check the ON warning lamp lighting.

The relay allows to select the tripping current value so as to keep values of contact voltage of the limits indicated by the electrical security norms.

These adjustments allow to perform a tripping selectivity or either current or delay when more relays are located along the same line in protection of the different starting signals.

EXCLUDING THE G.F.I.

it is possible to put off GFI supply so to be able to operate in the control panel.

BEWARE: this operation is allowed only under the responsibility of personnel able to activate different solutions to ensure electrical protection of the system powered by the gen-set.

USE OF THE DER3 / 0D MODEL (MOSA SET UP)

- 1) Manual reset
- 2) Regulation of intervention time: INST (instantaneous)
- 3) Regulation of fault current: 30 mA
- 4) Output relay: N.De


The GFI is equipped with 2 tests, 1 of which is effected automatically by the instrument:

1. manual test (trial push button)
2. automatic test of the toroid/relay connection and of the release coil.

It is able to work correctly even in presence of harmonic distortion or anyway with very disturbed signals. In case the internal temperature goes over the threshold for a good functioning, the Fault led will twinkle. Its interruption due to a fault of the toroid (break of the connection wire) or a fault in the internal circuits brings to the automatic intervention of the protection

LEGEND:

- D1 Potentiometer for earthing fault current regulation
- D2 Potentiometer for intervention time regulation
- D3 Multifunction led for indication of: internal electronics fault / internal temperature out of range/ t(s) centred correctly.
- D4 Led indicating presence of feeding
- D5 Led indicating intervention of GFI relay
- D6 Micro-switches for setting up of the instrument
- D7 Trial push-button
- D8 Push-button for the manual reset

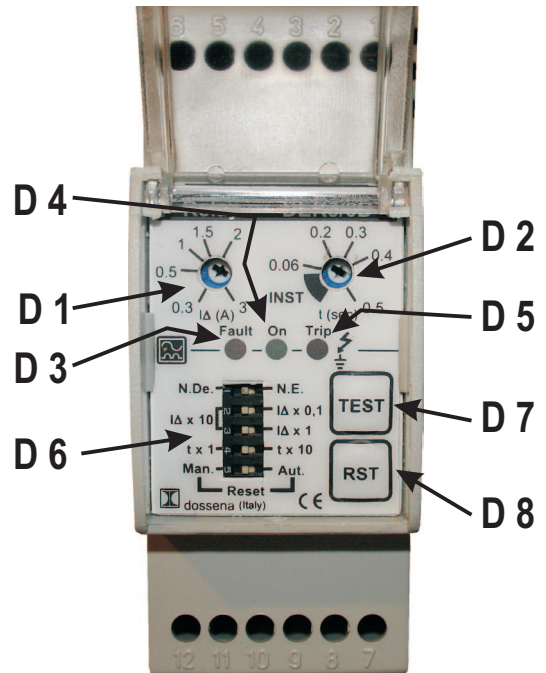

EP6 user manual

1.0 Introduction	M39.12
2.0 Operating Mode selection	M39.12
2.1 AUTO operating mode	M39.12
2.2 MANUAL operating mode	M39.12
2.3 OFF operating mode	M39.12
3.0 DISPLAY features	M39.12
4.0 ALARM messages	M39.12.1
4.1 Operating Messages	M39.12.1
5.0 LEDs for visual indication	M39.12.1
5.1 LEDs and Display Test	M39.12.1
6.0 Parameters and Settings	M39.12.1
7.0 Remote Start	M39.12.4
8.0 Safety	M39.12.4
9.0 Automatic Periodic Test	M39.12.4
10.0 Front Panel Description	M39.12.4
11.0 Dimensions and Rear View	M39.12.4

1.0 INTRODUCTION

The EP6 features Engine and Generating Set control and monitoring. The EP6 provides visual indication by means of LEDs (solid state lamps) and a Display (see section 10.0). It features OFF, MAN and AUTO operating modes. The display gives Messages for alarms and Measurement indications.

2.0 OPERATING MODE selection

The EP6 features AUTO (section 2.1), MANUAL (section 2.2) and OFF (section 2.3) operating modes. When the power supply is switched on, the EP6 behaves as follow:

- A) if the KEY-SWITCH is in the **OFF position**, the EP6 enters the OFF operating mode.
- B) if the KEY-SWITCH is in the **ON position**, the EP6 enters the AUTO operating mode. That is, if the EP6 was in AUTO prior to the supply removal. If not, the EP6 enters the MANUAL operating mode.

2.1 AUTO operating mode

To enter the 'AUTO' operating mode use the following instructions:

- A) - Turn ON the key switch: the Display and LEDs illuminate for 1 second.
- B) - Wait for the end of the LAMP test, then push the AUTO pushbutton after the [UUUU] (Pre-glow) or [Sta-] (Start prompt) has been displayed. After this, the yellow Led AUTO will illuminate. If the REMOTE START input is not operative, the LED will flash. If operative, the LED illuminates continuously and a start cycle will take place (**NOTE**: the EP6 shuts down the display during the crank).
- C) - In order to cancel the AUTO operating mode, push the AUTO pushbutton (the yellow Led will turn OFF) or turn the KEY-SWITCH to OFF.

Once in AUTO, the EP6 waits for a REMOTE START activation (see section 7.0).

In case of an Automatic Periodic Test (A.P.T.), the display will show the message [tEst].

2.2 MANUAL operating mode

To start the engine follow the instructions:

- A) - Turn ON the KEY-SWITCH; the EP6 illuminates the LEDs and Display.
- B) - If the display shows the message [uuuu], the EP6 is counting the PRE-GLOW time; wait until the message disappears.
- C) - After the display shows the flashing message [StA-] (**NOTE**), turn the Key to START position (momentary position with spring-loaded return) until the engine starts. The message [. . .] indicates a MANUAL start.
- D) - To stop the engine, turn the KEY SWITCH to OFF.

NOTE: EP6 shows the blinking [StA-] message for 20 seconds. After this time, if the engine does not start, the EP6 displays the message [FAIL] (Fail to start, see section 4.07). To clear the alarm, turn the KEY-SWITCH to OFF.

2.3 OFF operating mode

This function is obtained by turning the KEY SWITCH to OFF. The OFF operating mode clears the fault alarms and shuts down the Display after 5 seconds. A blinking dot indicates the presence of the power supply. Press one of the pushbuttons to energize the display. In OFF operating mode, the EP6 allows reading of the parameters (see section 6.0)

3.0 DISPLAY features

The EP6 features a 4 Digit Display (section 10.0) to show measurements, settings and error messages. The [UP-DOWN] pushbutton selects one of the following menus:

- [Axxx] (*) Generator Current measurement
- [Uxxx] The Voltage of the Generating Set
- [rPM] [xxxx] Speed of the engine
- [Hxx.X] Frequency of the Generator
- [bxx.X] Battery Voltage
- [cxx.X] Charger Alternator Voltage
- [h] [xxxx] HOUR METER (the message [h] appears for a moment, and then, the counter will be displayed continuously)

(*): the symbol 'X' means a numerical field.

4.0 ALARM messages

The alarms are displayed by means of messages. In case of alarm consult your Generating Set manufacturer. To remove the message, turn OFF the KEY-SWITCH. The EP6 may show one of the following:

[OIL]	Low Oil Pressure
[°C]	High Temperature
[O.SPd.]	Over Speed of the engine
[U.SPd]	Under Speed of the engine
[bELt]	Failure of the belt
[ALAR]	External Emergency Stop
[FUEL](1)	Low Fuel in the tank
[FAIL]	Starting Failure Alarm
[E 04]	Alternator Failure
[E 05](2)	Generator Overload
[Hi H](2)	Generator Over Frequency
[Lo H](2)	Generator Under Frequency
[Hi U] (2)	Generator Under Voltage
[Lo U](2)	Generator Under Voltage
[XX.X]	Battery Voltage
[Err]	Memory error

(1) **[FUEL]** This message indicates Low Fuel in the tank . The engine stops if the contacts remain closed for 5 minutes continuously. To clear the alarm, follow the instructions:

- turn OFF the key switch and fill the tank
- turn ON the key to select the MANUAL or AUTO operating mode

(2) To determine the value that caused the failure, push the [F1] pushbutton.

4.1 OPERATING messages

EP6 features messages to inform you about the following:

- [uuuu] Glow-plugs timing
- [U—] Voltage out of range
- [StA-] Start prompt
- [. . .] Starting by key switch
- [rEst] Rest timing
- [tEst] Automatic Test
- [CAL] Calibration
- [ProG] Programming
- [StOP] Stopping cycle

5.0 LEDs for visual indication

The EP6 features two LEDs (**see section 10.0**) to indicate the following conditions:

[ENGINE RUNNING]: this green led illuminates when the engine is running.

[AUTO]: this yellow LED blinks to indicate a standby mode. The EP6 monitors the REMOTE CONTROL and expects a command. The LED illuminates continuously when the REMOTE START is activated.

5.1 LEDs and Display Test

A test of the LEDs and DISPLAY is obtained automatically anytime the key switch is turned ON. The LEDs and DISPLAY light up for about 1 second.

6.0 Parameters and settings

The unit is programmed by the supplier of the Generating Set. Contact the Generator manufacturer in order to have the permission to program the module. It is possible to read the status of the internal programming at anytime. Follow the instructions:

- Turn the Key in OFF (if the display indicates [STOP], wait until it disappears)
- Push the pushbutton [F1] the display will show the first programmable parameter **[P.0]**.
- Push the pushbutton [F1] the display will indicate the value of the parameter ([1"]).
- Push the pushbutton [UP-DOWN] to select a parameter. Push [F1] to display the setting.
- The display returns to menu mode if you have not used the pushbuttons for 2 minutes.

The list of the parameters follows (['] means minutes and ["] means seconds). Some parameters may differ according to the programming done by the genset manufacturer.

Display	Parameter [Default]
[P.0]	Remote Start Delay Timing (Input #7) [1"] Range: 1-59 secs or 1-15 mins Seconds or minutes of continuous REMOTE START command to initiate the automatic engine start (see section 7.0 and [P20] in this section).
[P.1]	Remote Stop Delay Timing (Input #7) [1"] Range: 1-59 secs or 1-15 mins Seconds or minutes of continuous absence of the REMOTE START command to initiate the stop cycle (see section 7.0 and [P.20] in this section).
[P.2]	Crank Timing (Output #10) [5"] Range:1-20 seconds Maximum insertion time of the <i>Starter Motor</i> .
[P.3]	Engine Running Trigger (Input#1) [8.0] Range: 3V-24V,[inh] If the voltage of the Charger Alternator rises above the [setting], the <i>Starter Motor</i> is disconnected.
[P.4]	Rest Timing [3"] Range: 3-20 secs. Time interval between starting attempts
[P. 5]	Starting Attempts [3] Range: 1-10 This parameter sets the number of attempts in the automatic start cycle
[P.6]	Generator UnderVoltage, short-circuit [inh.] Range: 80-400V. If the voltage drops under the [setting] for at least 6 secs, or under [setting]-20% for 1 sec, the Under-Voltage protection [Lo U] will shut down the engine.
[P.7]	Generator Over-Voltage [500V] Range: 110-550V or [inh.]. If the Generator voltage rises above the [setting] for at least 2 seconds, the EP6 will energize the over voltage protection [Hi U] (see section 4.0) to stop the engine. The [inh.] code inhibits the over voltage.
[P.8]	Generator Under-Frequency [Inh.] [inh.] 1 to 99Hz ([inh]=disables the under frequency) This protection is delayed by about 6 seconds. The EP6 shuts down the engine and the display will show the [Lo H] message.
[P.9]	Generator Over-Frequency [55] 45 Hz to [inh.] ([inh.] disables the over frequency) This protection is delayed by about 2 seconds. The EP6 shuts down the engine and displays [Hi H]
[P.10]	Current Transformer Size [...] The range is 10/5 up to 1000/5
[P.11]	Generator Overload Setting [inh.] Range: [inh.] to 1000 AThe EP6 shuts down the engine after a delay of 6 secs and shows the message [E05].
[P.12][OFF]	Generator Failure Alarm selection: [on] or [OFF].The code [on] enables the <i>Generator</i> failure alarm. The EP6 shows the [E04] message and the engine will shut down.
[P.13]	Glow Plugs/Choke Control (Output #11) [5"] Range: 1 to 99 secs.The EP6 energizes the output #11 for the programmed time.
[P.14]	Output Control [0] The following options are available: [0] None [1] Choke Control [2] Glow Plugs Control [3] Choke Control
[P.15]	Belt Break Control [ON] Selection: [on] or [OFF]. The Belt Break alarm is indicated by means of the message [bELt]
[P.16]	Stop Solenoid Timing [2"]

- Range: 2-99 secs. Duration of the Stop cycle.
- [P.17] **Alarm Output Timing [1']**
[inh.]-59 secs 1-15 mins and [cont]. Time-out of the alarm output. The code [cont] disables the time-out, and the alarm remains energized until the OFF operating mode is selected. The [inh.] mode enables the use of the external contactor
- [P.18] **Temperature Switch [n.o.]**
Selection: [n.o.] or [n.c.]
[n.o.] the engine shuts down if the contact closes
[n.c.] the engine shuts down if the contact opens
- [P.19] **ALARM Control [n.c.]**
Selection: [n.o.] or [n.c.]
[n.o.] the engine shuts down if the contact closes
[n.c.] the engine shuts down if the contact opens
- [P.20] **Remote Start [n.o.]**
Selection: [n.o.] or [n.c.]
[n.o.] the engine starts if the contact closes
[n.c.] the engine starts if the contact opens
- [P.21] **Under Speed setting [1200]**
[Inh.] or 100-4000 r.p.m. The [Inh.] code disables the Under Speed shut down.
- [P.22] **Over Speed setting [1700]**
100-4000 rpm or [Inh.]. The EP6 provides one second bypass delay. The [Inh.] code (>4000 r.p.m.) disables the Over Speed shut down.
- [P.23] **Number of Teeth of the Flywheel [Inh.]**
[Inh.] or 1-500 teeth.
The [Inh.] code disables the reading of the Speed (section 3.0), the Over/Under Speed alarms, and the Crank termination (see [P.24]).
- [P.24] **Crank OFF [Inh.]**
Crank Termination setting: 100-800 rpm
If the speed rises above the setting, the EP6 terminates the crank cycle. One second delay avoids false termination. The code [Inh.] inhibits the crank termination
- [P.25] **Low Oil Pressure Alarm By-Pass [6"]**
Range: 0-99 secs. By-Pass Delay to ignore the Oil Pressure (input #3) during the engine starting cycle. This input requires normally closed contact
- [P.26] **Automatic Periodic Test Cycle [inh.]**
Range: [inh.], 1-99 days
This is the interval time between the automatic periodic tests of the engine. The code [inh.] disables the Automatic Periodic Test (see section 19.0)
- [P.27] **Automatic Engine Test Duration [10']**
Range: 1-99 minutes.
This is the duration of the automatic engine test.
- [P.28] **Generator warm-up timing [20"]**
Range [inh.] 1-59 secs or 1-15 mins ([inh.]=No warm-up)
Active only when [P17]=[inh.] and the ALARM output is used to drive the contactor
- [P.29] **Generator cooling timing [30"]**
Range [inh.] 1-59 secs or 1-15 mins ([inh.]=No cooling)
Active only when [P28]=[inh.] and the ALARM output is used to drive the GEN-SET contactor
- [P.30] **N° poles of the alternator [...]**
Range [inh.] - [2] = 2 pole alternator - [4] = 4 pole alternator
- [P.31] **Engine shut-down delay for low fuel [S']**
Range [inh.] = provides only optical - acoustical warning - 1 - 99 min.

7.0 REMOTE START

The EP6 features REMOTE START only in AUTO operating mode.

To operate the REMOTE START, follow the instructions.

- A) - Turn the KEY-SWITCH to the ON position; the Display and LEDs illuminate for 1 sec.
- B) - Wait until the end of the LEDs test.
- C) - Push the AUTO pushbutton as soon as possible (otherwise, after 20 seconds the EP6 enters the STARTING FAILURE); the [AUTO] yellow LED will illuminate as described in the next section

7.1 - REMOTE START SWITCH:

If the REMOTE START input is activated, the [AUTO] yellow LED illuminates continuously and the display will indicate the count down of the internal **start delay** timer. The engine will start after the programmed **start delay** time. If the REMOTE START is deactivated, the EP6 drives the **stop delay time**. The display will indicate the count down and the [AUTO] yellow LED will flash. The engine will stop after the programmed **stop delay** time.

Note start delay time: see section 6.0 parameter [P.0]

Note stop delay time: see section 6.0 parameter [P.1]

8.0 SAFETY



NOTE

High voltage is present inside the EP6. To avoid electric-shock hazard, operating personnel must not remove the protective cover. Do not disconnect the grounding connection. Any interruption of the grounding connection can create an electric shock hazard. Before making external connections, always ground the PANEL first by connecting the control panel to ground.

9.0 Automatic periodic TEST

The EP6 does not use a clock to count the programmed days ([P.26] setting, section 6.0). The maximum error and drift of the counter is +/-0,5%. The user may experiment with shifting the periodic tests. To avoid error accumulation, and in case your unit is programmed to allow Automatic Periodic Test, we recommend the following procedures.

- disconnect the power supply of the EP6 (consult your genset supplier)

- wait for the desired start time (external clock reference)
- apply the power supply to the EP6 (consult your genset supplier)


- select the 'AUTO' operating mode

The EP6 will start the engine after the programmed number of days and the engine will run for the programmed time. To determine how the Automatic Periodic Test is programmed enter the Reading Mode (section 6.0 parameter [P.26] and [P.27]).


IMPORTANT NOTES

If the supply (battery voltage) is removed, the EP6 loses the counts and timings. If the supply restores, the EP6 starts to count the A.P.T. according to the programmed parameters [P.26] and [P.27]. It is important to synchronize the power on sequence with the desired Automatic Periodic Test.

10.0 FRONT PANEL

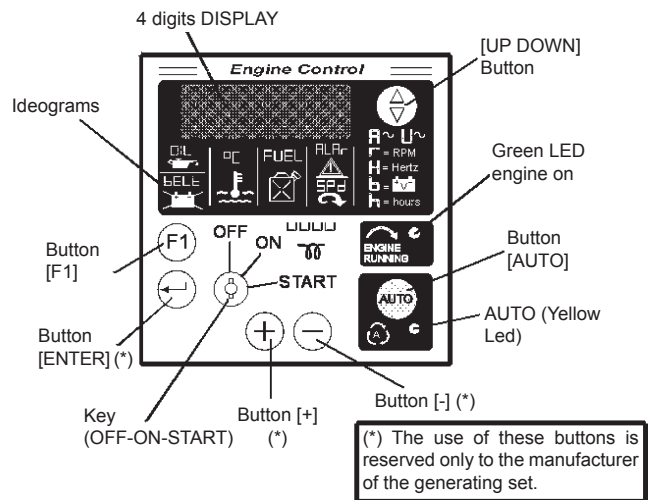

11.0 DIMENSIONS

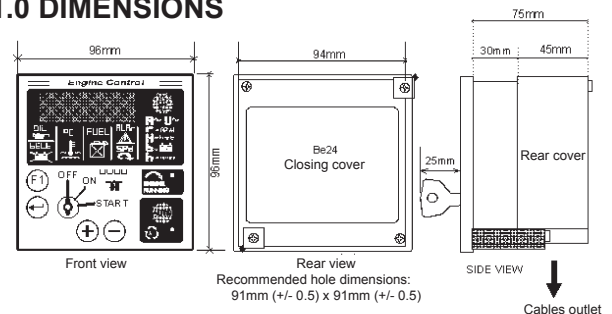

Problem	Possible cause	Solution
ENGINE		
The motor does not start up	<ol style="list-style-type: none"> 1) Start-up switch (I6) (where it is assembled) in incorrect position 2) Emergency button (L5) pressed 3) Preheating (where it is assembled) 4) Engine control unit or starting key faulty. 5) Battery low 6) Battery cable terminals loose or corroded 7) Start-up motor defective 8) No fuel or air in feed circuit 9) Malfunction on feed circuit: defective pump, injector blocked, etc. 10) Air filter or fuel filter clogged 11) Air in the gasoil filter. 12) Motor stopping device defective 13) Malfunction on electrical power circuit on generator control panel 	<ol style="list-style-type: none"> 1) Check position 2) Unblock 3) Lacking or insufficient preheating phase for sparkplugs. Malfunction in circuit: repair. 4) Replace 5) Recharge or replace. Check the battery charge circuit on motor and automatic panel. 6) Tighten and clean. Replace if corroded. 7) Repair or replace. 8) Refill tank, un-aerate the circuit. 9) Ask for intervention of Service Department. 10) Clean or replace 11) Take the air out filling the filter with gasoil. 12) Replace. 13) Check and repair.
The motor does not accelerate. Inconstant speed.	<ol style="list-style-type: none"> 1) Air filter or fuel filter clogged. 2) Malfunction on feed circuit: defective pump, injector blocked, etc. 3) Oil level too high. 4) Motor speed regulator defective. 	<ol style="list-style-type: none"> 1) Clean or replace. 2) Ask for intervention of Service Department. 3) Eliminate excess oil. 4) Ask for intervention of Service Department
Black smoke	<ol style="list-style-type: none"> 1) Air filter clogged. 2) Overload. 3) Injectors defective. Injection pump requires calibration. 	<ol style="list-style-type: none"> 1) Clean or replace 2) Check the load connected and diminish. 3) Ask for intervention of Service Department.
White smoke	<ol style="list-style-type: none"> 1) Oil level too high. 2) Motor cold or in prolonged operation with little or no load. 3) Segments and/or cylinders worn out. 	<ol style="list-style-type: none"> 1) Eliminate excess oil. 2) Insert load only with motor sufficiently hot 3) Ask for intervention of Service Department.
Too little power provided by motor.	<ol style="list-style-type: none"> 1) Air filter clogged. 2) Insufficient fuel distribution, impurities or water in feed circuit. 3) Injectors dirty or defective. 	<ol style="list-style-type: none"> 1) Clean or replace. 2) Check the feed circuit, clean and refill once again. 3) Ask for intervention of Service Department.
Low oil pressure	<ol style="list-style-type: none"> 1) Oil level insufficient 2) Air filter clogged. 3) Oil pump defective. 4) Alarm malfunction. 	<ol style="list-style-type: none"> 1) Reset level. Check for leaks. 2) Replace filter. 3) Ask for intervention of Service Department. 4) Check the sensor and electrical circuit.
High temperature	<ol style="list-style-type: none"> 1) Overload 2) Insufficient ventilation. 3) Insufficient coolant liquid (Only for water cooled motors) 4) Water radiator or oil clogged (where it is assembled) 5) Water circulating pump defective (Only for water cooled motors) 6) Injectors defective. Injection pump requires calibration 7) Alarm malfunction 	<ol style="list-style-type: none"> 1) Check the load connected and diminish. 2) Check the cooling vent and relative transmission belts 3) Restore level. Check for leaks or breakage in the entire cooling circuit, pipes, couplings, etc. 4) Clean cooling fins on radiator 5) Ask for intervention of Service Department 6) Ask for intervention of Service Department 7) Check the sensor and electrical circuit

<i>Problem</i>	<i>Possible cause</i>	<i>Solution</i>
GENERATOR		
Absence of output voltage	<ol style="list-style-type: none"> 1) Voltage switch in position 0 2) Voltage switch faulty 3) Protection tripped due to overload 4) Differential protection device tripped. (Differential switch, differential relay) 5) Protection devices defective 6) Alternator not sparked 7) Alternator defective 	<ol style="list-style-type: none"> 1) Check position 2) Check connections and working of the switch, repair or replace 3) Check the load connected and diminish 4) Check on the entire installation: cables, connections, utilities connected have no defective sheathing which may cause incorrect currents to ground 5) Replace 6) Carry out external spark test as indicated in alternator manual. Ask for intervention of Service Department 7) Check winding, diodes, etc. on alternator (Refer to alternator manual) Repair or replace. Ask for intervention of Service Department
No-load voltage too low or too high	<ol style="list-style-type: none"> 1) Incorrect motor running speed 2) Voltage regulating device (where it is assembled) defective or requires calibration 3) Alternator defective 	<ol style="list-style-type: none"> 1) Regulate speed to its nominal no-load value 2) Adjust regulator device as indicated in alternator manual, or replace. For all generating sets with double regulating system, AVR and COMPOUND, please set the excitation circuit as instructed on the alternator use and maintenance manual 3) Check winding, diodes, etc. on alternator (Refer to alternator manual) Repair or replace Ask for intervention of Service Department
Corrected no-load voltage too low with load	<ol style="list-style-type: none"> 1) Incorrect motor running speed due to overload 2) Load with $\cos \varphi$ less than 0.8 3) Alternator defective 	<ol style="list-style-type: none"> 1) Check the load connected and diminish 2) Reduce or rephase load 3) Check winding, diodes, etc. on alternator (Refer to alternator manual) Repair or replace Ask for intervention of Service Department
Unstable tension	<ol style="list-style-type: none"> 1) Contacts malfunctioning 2) Irregular rotation of motor 3) Alternator defective 	<ol style="list-style-type: none"> 1) Check electrical connections and tighten 2) Ask for intervention of Service Department 3) Check winding, diodes, etc. on alternator (Refer to alternator manual) Repair or replace Ask for intervention of Service Department

 **WARNING**



MOVING PARTS can injure

- Have **qualified** personnel do maintenance and troubleshooting work.
- Stop the engine before doing any work inside the machine. If for any reason the machine must be operated while working inside, **pay attention** moving parts, hot parts (exhaust manifold and muffler, etc.) electrical parts which may be unprotected when the machine is open.
 - Remove guards only when necessary to perform maintenance, and replace them when the maintenance requiring their removal is complete.
 - Use suitable tools and clothes.
 - Do not modify the components if not authorized.
- See pag. M1.1 -



HOT surface can hurt you

NOTE

By maintenance at care of the utilizer we intend all the operatios concerning the verification of mechanical parts, electrical parts and of the fluids subject to use or consumption during the normal operation of the machine.

For what concerns the fluids we must consider as maintenance even the periodical change and or the refills eventually necessary.

Maintenance operations also include machine cleaning operations when carried out on a periodic basis outside of the normal work cycle.

The repairs **cannot be considered** among the maintenance activities, i.e. the replacement of parts subject to occasional damages and the replacement of electric and mechanic components consumed in normal use, by the Assistance Authorized Center as well as by MOSA.

The replacement of tires (for machines equipped with trolleys) must be considered as repair since it is not delivered as standard equipment any lifting system.

The periodic maintenance should be performed according to the schedule shown in the engine manual. An optional hour counter (M) is available to simplify the determination of the working hours.

maintenance intervals and specific checks for each model: it is necessary to consult the specific engine or alternator USER AND MAINTENANCE manual.

VENTILATION

Make certain there are no obstructions (rags, leaves or other) in the air inlet and outlet openings on the machine, alternator and motor.

ELECTRICAL PANELS

Check condition of cables and connections daily. Clean periodically using a vacuum cleaner, **DO NOT USE COMPRESSED AIR.**

DECALS AND LABELS

All warning and decals should be checked once a year and **replaced** if missing or unreadable.

STRENUOUS OPERATING CONDITIONS

Under extreme operating conditions (frequent stops and starts, dusty environment, cold weather, extended periods of no load operation, fuel with over 0.5% sulphur content) do maintenance more frequently.

BATTERY WITHOUT MAINTENANCE DO NOT OPEN THE BATTERY

The battery is charged automatically from the battery charger circuit supplied with the engine.

Check the state of the battery from the colour of the warning light which is in the upper part.

- Green colour: battery OK
- Black colour: battery to be recharged
- White colour: battery to be replaced

 **IMPORTANT**



In the maintenance operations avoid that polluting substances, liquids, exhausted oils, etc. bring damage to people or things or can cause negative effects to surroundings, health or safety respecting completely the laws and/or dispositions in force in the place.

ENGINE and ALTERNATOR

PLEASE REFER TO THE SPECIFIC MANUALS PROVIDED.

Every engine and alternator manufacturer has

 **NOTE**

THE ENGINE PROTECTION NOT WORK WHEN THE OIL IS OF LOW QUALITY BECAUSE NOT CHARGED REGULARLY AT INTERVALS AS PRESCRIBED IN THE OWNER'S ENGINE MANUAL.




ATTENTION

- Maintenance operations on the electricity-generating group prearranged for automatic operation must be carried out with the panel in RESET mode.
- Maintenance operations on the installation's electrical panels must be carried out in complete safety by cutting off all external power sources: ELECTRICAL POWER, GROUP and BATTERY.

For the electricity-generating groups prearranged for automatic operation, in addition to carrying out all periodic maintenance operations foreseen for normal usage, various operations must be carried out that are necessary in relation to the specific type of use. The electricity-generating group in fact must be continuously prepared for operation, even after prolonged periods of inactivity.

MAINTENANCE GENERATING SET WITH AUTOMATIC BOARD

	EVERY WEEK	EVERY MONTH AND/OR AFTER INTERVENTION ON LOAD	EVERY YEAR
1. TEST or AUTOMATIC TEST cycle to keep the generating set constantly operative	NO-LOAD X	WITH LOAD X	
2. Check all levels: engine oil, fuel level, battery electrolyte,, if necessary top it up.	X	X	
3. Control of electrical connections and cleaning of control panel		X	X

👉 Carry out motor oil change at least once a year, even if the requested number of hours has not been attained.

In case the machine should not be used for more than 30 days, make sure that the room in which it is stored presents a suitable shelter from heat sources, weather changes or anything which can cause rust, corrosion or damages to the machine.

☞ Have **qualified** personnel prepare the machine for storage.

GASOLINE ENGINE

Start the engine: It will run until it stops due to the lack of fuel.

Drain the oil from the engine sump and fill it with new oil (see page M25).

Pour about 10 cc of oil into the spark plug hole and screw the spark plug, after having rotated the crankshaft several times.

Rotate the crankshaft slowly until you feel a certain compression, then leave it.

In case the battery, for the electric start, is assembled, disconnect it.

Clean the covers and all the other parts of the machine carefully.

Protect the machine with a plastic hood and store it in a dry place.

DIESEL ENGINE

For short periods of time it is advisable, about every 10 days, to make the machine work with load for 15-30 minutes, for a correct distribution of the lubricant, to recharge the battery and to prevent any possible blocking of the injection system.

For long periods of inactivity, turn to the after sales service of the engine manufacturer.

Clean the covers and all the other parts of the machine carefully.

Protect the machine with a plastic hood and store it in a dry place.

In case of necessity for first aid and of fire prevention, see page. M2.5.



IMPORTANT



In the storage operations avoid that polluting substances, liquids, exhausted oils, etc. bring damage to people or things or can cause negative effects to surroundings, health or safety respecting completely the laws and/or dispositions in force in the place.

☞ Have **qualified** personnel disassemble the machine and dispose of the parts, including the oil, fuel, etc., in a correct manner when it is to be taken out of service.

In case of necessity for first aid and fire prevention, see page M2.5.

As cust off we intend all operations to be made, at utilizer's care, at the end of the use of the machine. This comprises the dismantling of the machine, the subdivision of the several components for a further reutilization or for getting rid of them, the eventual packing and transportation of the eliminated parts up to their delivery to the store, or to the bureau entrusted to the cust off or to the storage office, etc.

The several operations concerning the cust off, involve the manipulation of fluids potentially dangerous such as: lubricating oil and battery electrolyte.

The dismantling of metallic parts liable to cause injuries or wounds, must be made wearing heavy gloves and using suitable tools.

The getting rid of the various components of the machine must be made accordingly to rules in force of law a/o local rules.

Particular attention must be paid when getting rid of:

lubricating oils, battery electrolyte, and inflammable liquids such as fuel, cooling liquid.

The machine user is responsible for the observance of the norms concerning the environment conditions with regard to the elimination of the machine being cust off and of all its components.

In case the machine should be cust off without any previous disassembly it is however compulsory to remove:


- tank fuel
- engine lubricating oil
- cooling liquid from the engine
- battery

NOTE: BCS is involved with custing off the machine **only** for the second hand ones, when not reparable. This, of course, after authorization.


IMPORTANT

In the cust-off operations avoid that polluting substances, liquids, exhausted oils, etc. bring damage to people or things or can cause negative effects to surroundings, health or safety respecting completely the laws and/or dispositions in force in the place.

A	: Alternator	F3	: Stop push-button	L6	: Choke button
B	: Wire connection unit	G3	: Ignition coil	M6	: Switch CC/CV
C	: Capacitor	H3	: Spark plug	N6	: Connector – wire feeder
D	: G.F.I.	I3	: Range switch	O6	: 420V/110V 3-phase transformer
E	: Welding PCB transformer	L3	: Oil shut-down button	P6	: Switch IDLE/RUN
F	: Fuse	M3	: Battery charge diode	Q6	: Hz/V/A analogic instrument
G	: 400V 3-phase socket	N3	: Relay	R6	: EMC filter
H	: 230V 1phase socket	O3	: Resistor	S6	: Wire feeder supply switch
I	: 110V 1-phase socket	P3	: Sparkler reactor	T6	: Wire feeder socket
L	: Socket warning light	Q3	: Output power unit	U6	: DSP chopper PCB
M	: Hour-counter	R3	: Electric siren	V6	: Power chopper supply PCB
N	: Voltmeter	S3	: E.P.4 engine protection	Z6	: Switch and leds PCB
P	: Welding arc regulator	T3	: Engine control PCB	W6	: Hall sensor
Q	: 230V 3-phase socket	U3	: R.P.M. electronic regulator	X6	: Water heather indicator
R	: Welding control PCB	V3	: PTO HI control PCB	Y6	: Battery charge indicator
S	: Welding current ammeter	Z3	: PTO HI 20 l/min push-button	A7	: Transfer pump selector AUT-0-MAN
T	: Welding current regulator	W3	: PTO HI 30 l/min push-button	B7	: Fuel transfer pump
U	: Current transformer	X3	: PTO HI reset push-button	C7	: "GECO" generating set test
V	: Welding voltage voltmeter	Y3	: PTO HI 20 l/min indicator	D7	: Flooting with level switches
Z	: Welding sockets	A4	: PTO HI 30 l/min indicator	E7	: Voltmeter regulator
X	: Shunt	B4	: PTO HI reset indicator	F7	: WELD/AUX switch
W	: D.C. inductor	C4	: PTO HI 20 l/min solenoid valve	G7	: Reactor, 3-phase
Y	: Welding diode bridge	D4	: PTO HI 30 l/min solenoid valve	H7	: Switch disconnecter
A1	: Arc striking resistor	E4	: Hydraulic oil pressure switch	I7	: Solenoid stop timer
B1	: Arc striking circuit	F4	: Hydraulic oil level gauge	L7	: "VODIA" connector
C1	: 110V D.C./48V D.C. diode bridge	G4	: Preheating glow plugs	M7	: "F" EDC4 connector
D1	: E.P.1 engine protection	H4	: Preheating gearbox	N7	: OFF-ON-DIAGN. selector
E1	: Engine stop solenoid	I4	: Preheating indicator	O7	: DIAGNOSTIC push-button
F1	: Acceleration solenoid	L4	: R.C. filter	P7	: DIAGNOSTIC indicator
G1	: Fuel level transmitter	M4	: Heater with thermostat	Q7	: Welding selector mode
H1	: Oil or water thermostat	N4	: Choke solenoid	R7	: VRD load
I1	: 48V D.C. socket	O4	: Step relay	S7	: 230V 1-phase plug
L1	: Oil pressure switch	P4	: Circuit breaker	T7	: V/Hz analogic instrument
M1	: Fuel warning light	Q4	: Battery charge sockets	U7	: Engine protection EP6
N1	: Battery charge warning light	R4	: Sensor, cooling liquid temperature	V7	: G.F.I. relay supply switch
O1	: Oil pressure warning light	S4	: Sensor, air filter clogging	Z7	: Radio remote control receiver
P1	: Fuse	T4	: Warning light, air filter clogging	W7	: Radio remote control transmitter
Q1	: Starter key	U4	: Polarity inverter remote control	X7	: Isometer test push-button
R1	: Starter motor	V4	: Polarity inverter switch	Y7	: Remote start socket
S1	: Battery	Z4	: Transformer 230/48V	A8	: Transfer fuel pump control
T1	: Battery charge alternator	W4	: Diode bridge, polarity change	B8	: Ammeter selector switch
U1	: Battery charge voltage regulator	X4	: Base current diode bridge	C8	: 400V/230V/115V commutator
V1	: Solenoid valve control PCB	Y4	: PCB control unit, polarity inverter	D8	: 50/60 Hz switch
Z1	: Solenoid valve	A5	: Base current switch	E8	: Cold start advance with temp. switch
W1	: Remote control switch	B5	: Auxilliary push-button ON/OFF	F8	: START/STOP switch
X1	: Remote control and/or wire feeder socket	C5	: Accelerator electronic control	G8	: Polarity inverter two way switch
Y1	: Remote control plug	D5	: Actuator	H8	: Engine protection EP7
A2	: Remote control welding regulator	E5	: Pick-up	I8	: AUTOIDLE switch
B2	: E.P.2 engine protection	F5	: Warning light, high temperature	L8	: AUTOIDLE PCB
C2	: Fuel level gauge	G5	: Commutator auxiliary power	M8	: A4E2 ECM engine PCB
D2	: Ammeter	H5	: 24V diode bridge	N8	: Remote emergency stop connector
E2	: Frequency meter	I5	: Y/▲ commutator	O8	: V/A digital instruments and led VRD PCB
F2	: Battery charge transformer	L5	: Emergency stop button	P8	: Water in fuel
G2	: Battery charge PCB	M5	: Engine protection EP5	Q8	: Battery disconnect switch
H2	: Voltage selector switch	N5	: Pre-heat push-button	R8	: Inverter
I2	: 48V a.c. socket	O5	: Accelerator solenoid PCB	S8	: Overload led
L2	: Thermal relay	P5	: Oil pressure switch	T8	: Main IT/TN selector
M2	: Contactor	Q5	: Water temperature switch	U8	: NATO socket 12V
N2	: G.F.I. and circuit breaker	R5	: Water heater	V8	: Diesel pressure switch
O2	: 42V EEC socket	S5	: Engine connector 24 poles	Z8	: Remote control PCB
P2	: G.F.I. resistor	T5	: Electronic GFI relais	W8	: Pressure turbo protection
Q2	: T.E.P. engine protection	U5	: Release coil, circuit breaker	X8	: Water in fuel sender
R2	: Solenoid control PCB	V5	: Oil pressure indicator	Y8	: EDC7-UC31 engine PCB
S2	: Oil level transmitter	Z5	: Water temperature indicator	A9	: Low water level sender
T2	: Engine stop push-button T.C.1	W5	: Battery voltmeter	B9	: Interface card
U2	: Engine start push-button T.C.1	X5	: Contactor, polarity change	C9	: Limit switch
V2	: 24V c.a. socket	Y5	: Commutator/switch, series/parallel	D9	: Starter timing card
Z2	: Thermal magnetic circuit breaker	A6	: Commutator/switch	E9	: Luquid pouring level float
W2	: S.C.R. protection unit	B6	: Key switch, on/off	F9	: Under voltage coil
X2	: Remote control socket	C6	: QEA control unit	G9	: Low water level warning light
Y2	: Remote control plug	D6	: Connector, PAC	H9	: Chopper driver PCB
A3	: Insulation moitoring	E6	: Frequency rpm regulator	I9	:
B3	: E.A.S. connector	F6	: Arc-Force selector	L9	:
C3	: E.A.S. PCB	G6	: Device starting motor		
D3	: Booster socket	H6	: Fuel electro pump 12V c.c.		
E3	: Open circuit voltage switch	I6	: Start Local/Remote selector		

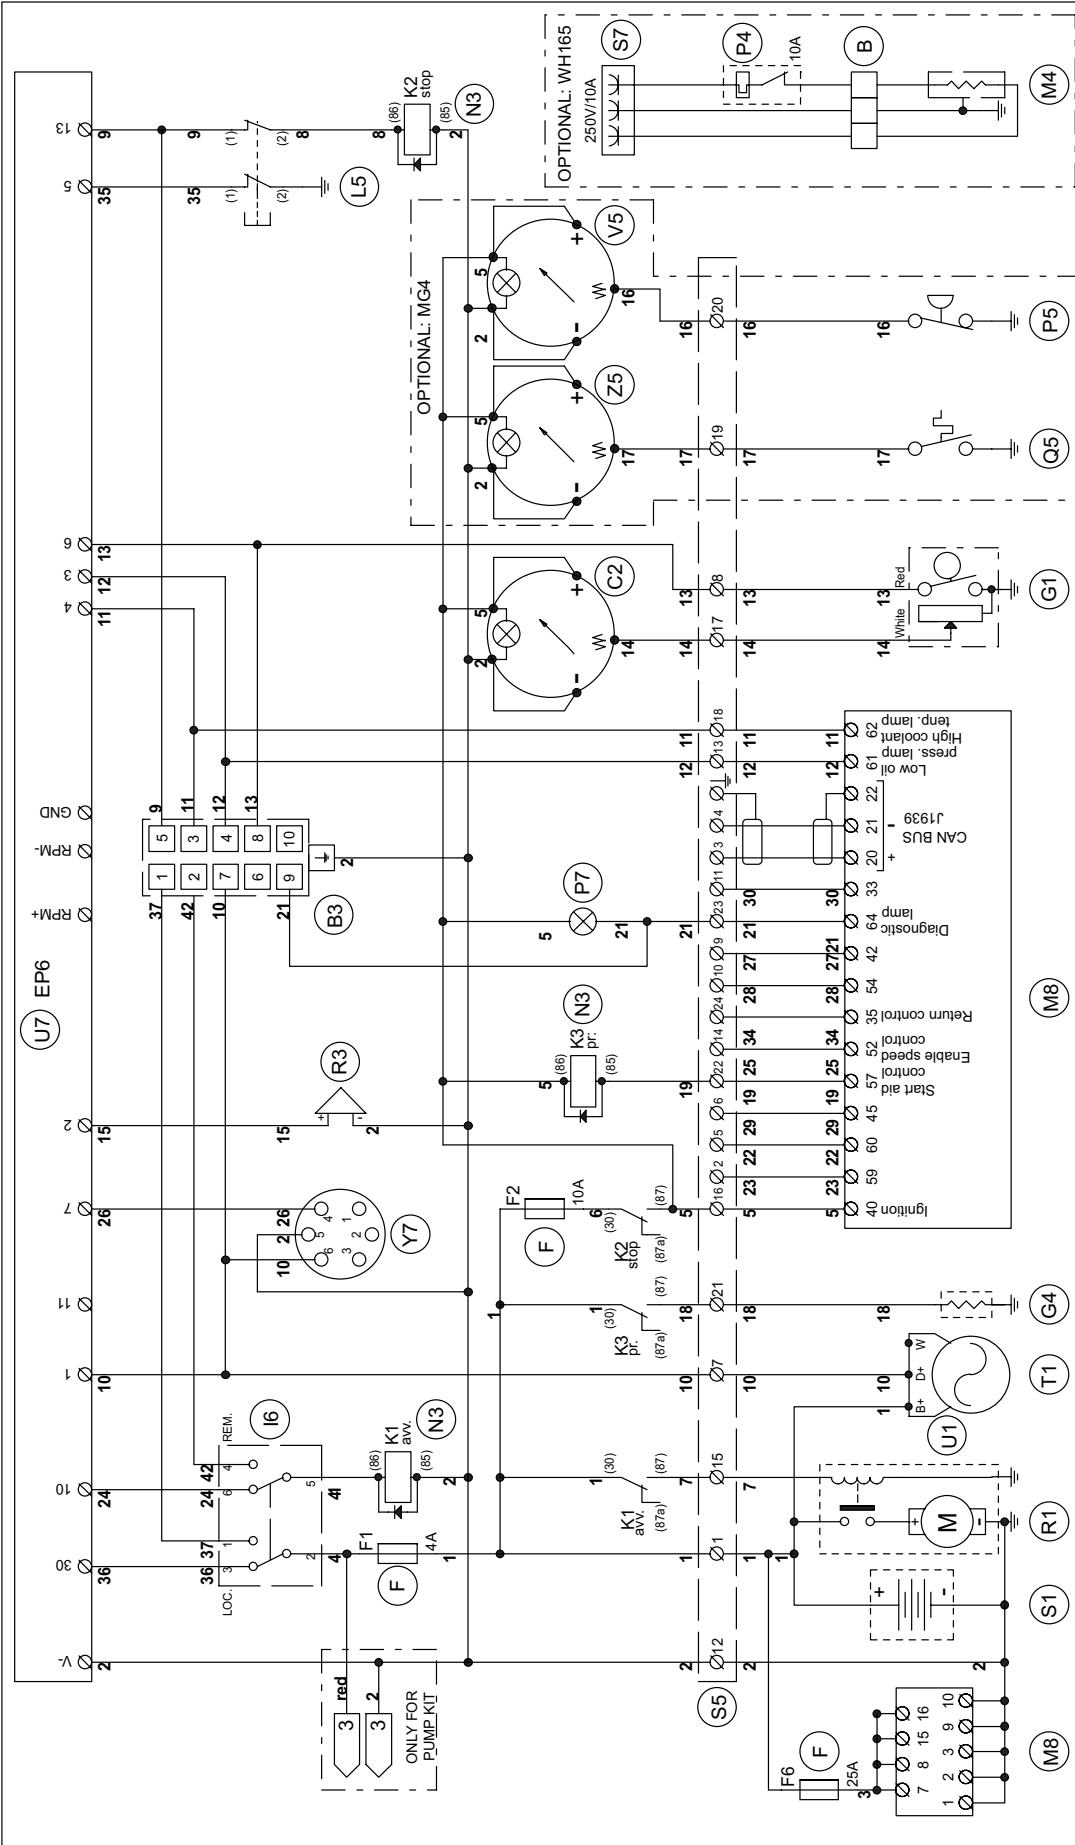

Exp. Ekv.	Modifica Modification	Data Date	Dis. Desi.	Appr. Appr.
Da Pag. From Page	Denominazione: Denomination:	Progetto: Project:	Dis. n.° Dwg. n.°	Appr. n.° Appr. n.°
106C-33TAG3	Engine Perkins 1106C-33TAG3	84165.prg	2	9
Alia Pag. to Page	Macchina: Machine:	Dis. n.° Dwg. n.°	Approvato: Approved:	
20090-CUSAGO (MI)-ITALY http://www.mosa.it	GE 165 PSX	23.10.2007	84165.S.010	
<p>La MOSA si riserva a termini di legge la proprietà del presente disegno con divieto di riprodurlo o comunicarlo a terzi senza sua autorizzazione.</p>				

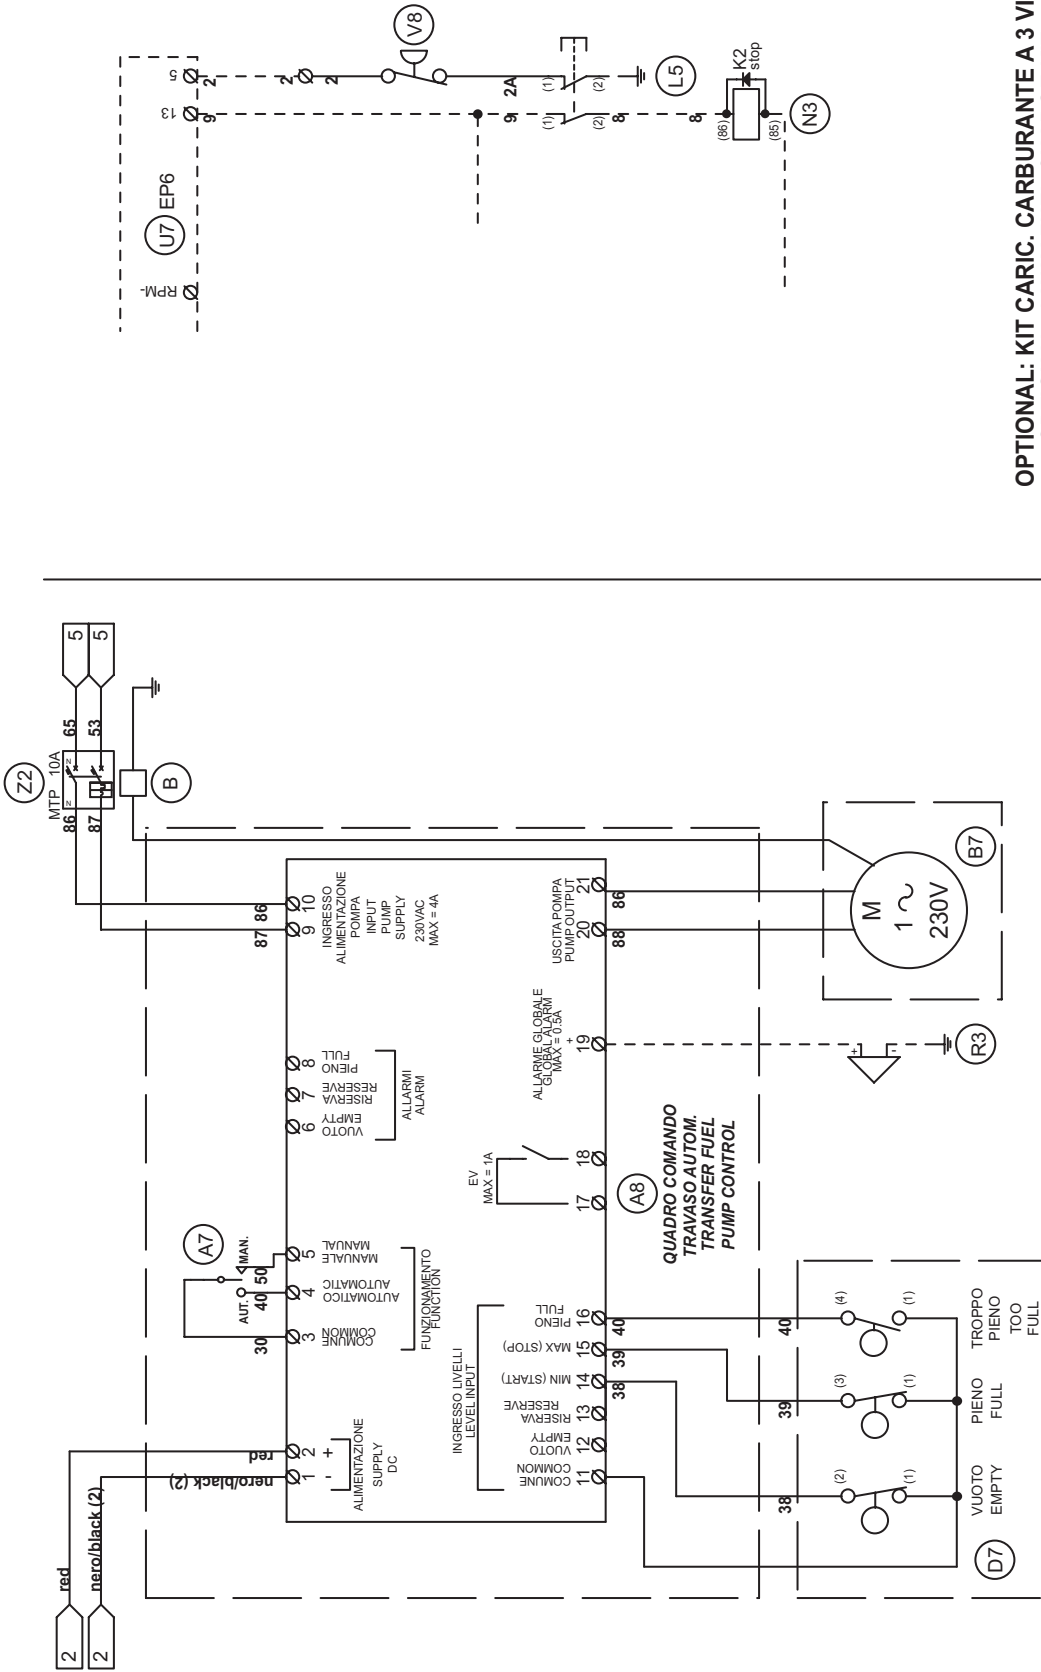


OPTIONAL: KIT CARIC. CARBURANTE A 3 VIE
OPTIONAL: 3 WAY FUEL CHARGE KIT

B	Aggiunto kit caricamento carbur. a 3 vie	24.03.2009	N.L.
A	Modificato colleg. di terra motore pompa e unificato schema con GE 85/115/165.	29.10.2007	N.L.
Esp. Ekv.	Modifica Modification	Data Date	Dis. Dess.
Denominazione: Denomination: Transfer fuel pump kit		Progetto: Project: 84116.prg	di n° of n° 3
Alia. Pag. to Page: 20090-CUSAGO (MI)-ITALY		Data: Date: 16.10.2006	Dis. n°: 84116.S.015-B
http://www.mosa.it		Macchine: Machine: GE 115 PSX	Leoporece N. Designer: 16.10.2006
La MOSA si riserva a termini di legge la proprietà del presente disegno con divieto di riproduzione o comunicato a terzi senza sua autorizzazione.			


OPTIONAL: KIT POMPA CARBURANTE
OPTIONAL: FUEL PUMP KIT

OPTIONAL

50/60 Hz Kit

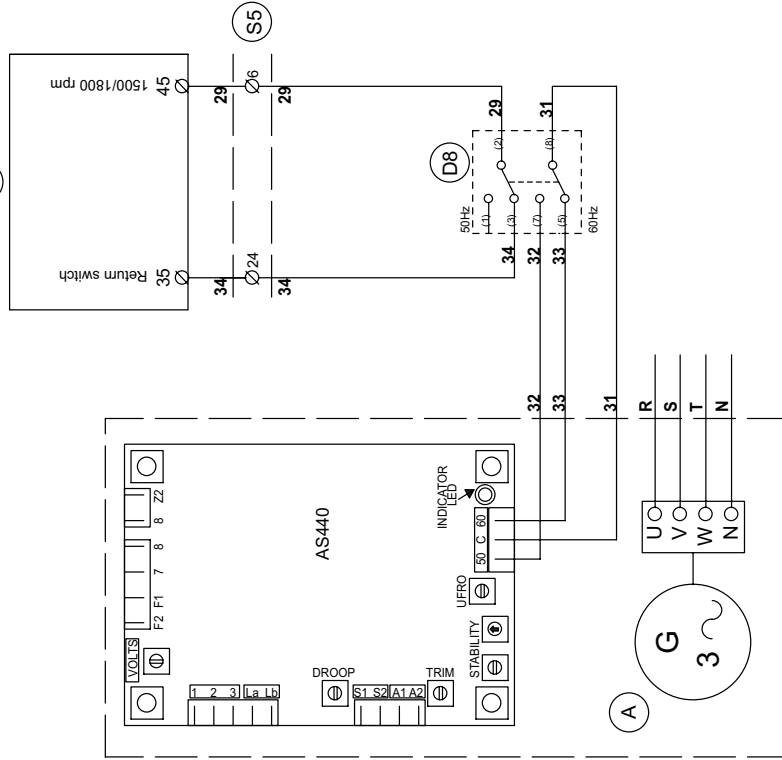

REVR 4 Kit

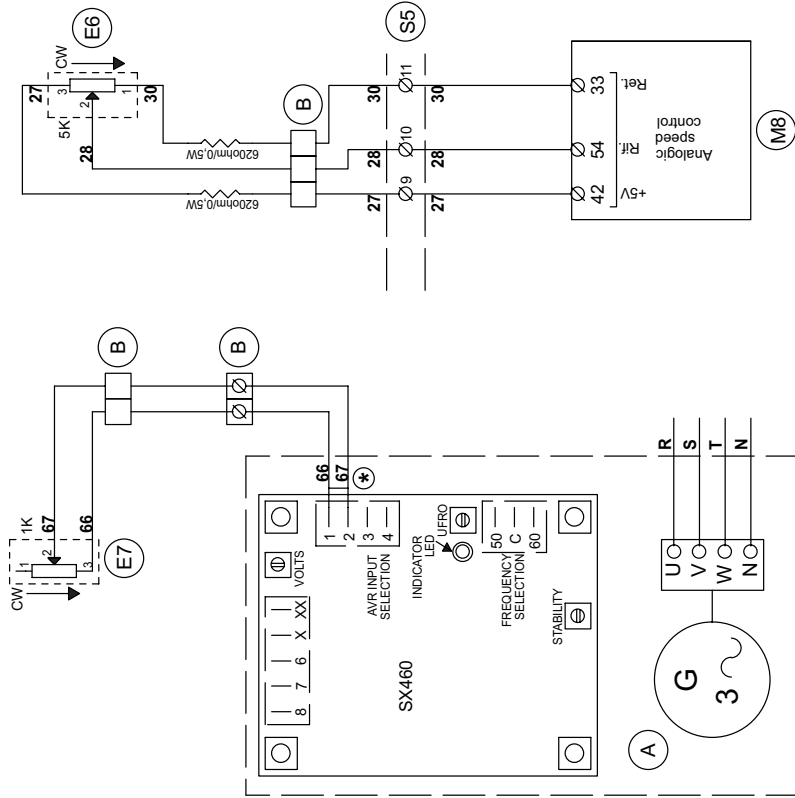


- ⊛ - TOGLIERE PONTICELLO E COLLEGARE CAVI 66-67 DEL POTENZIOMETRO
- REMOVE LINK AND CONNECT HAND TRIMMER BY CABLES 66-67

Esp. Eqp.	Modifica Modification	Data Date	Dis. Desi. Appr. Page n° of n°
	Denominazione: Denomination:	Project: 84.165.prg	4 9
	Da Pag. From Page		
	Alia Pag. To Page		
	Macchina: Machine:	Dis. n°: 84.165.S.016	Approvato: Approver:
	http://www.mosa.it	Date: 24.10.2007	Design: Designer:
			Leporace N.

La MOSA si riserva a termini di legge la proprietà del presente disegno con divieto di riprodurlo o comunicarlo a terzi senza sua autorizzazione.


OPTIONAL

50/60 Hz Kit

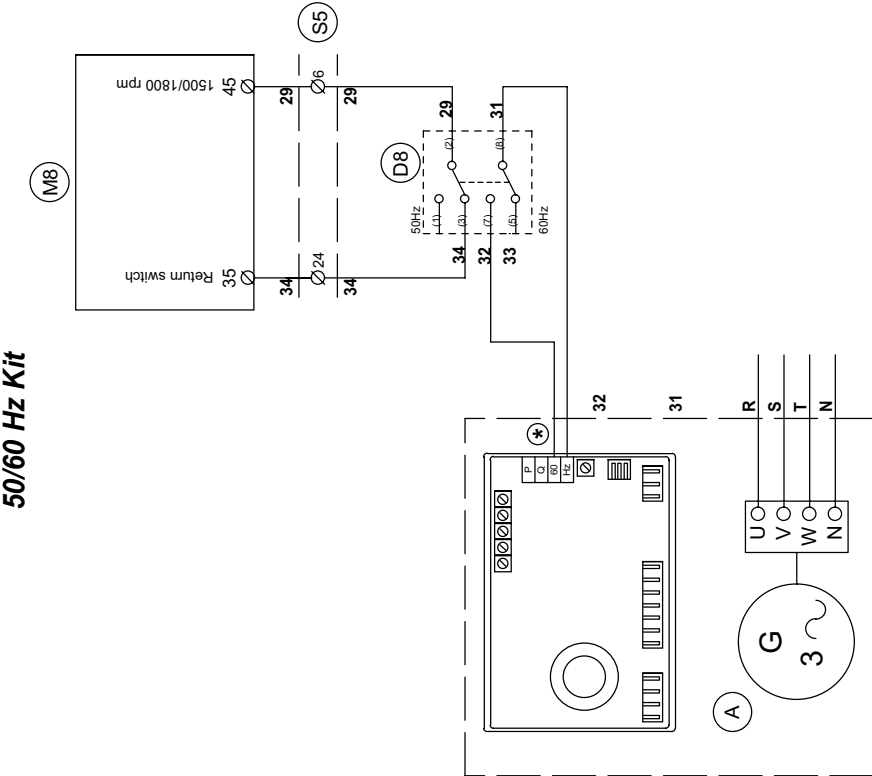

- ⊛ - TOGLIERE PONTICELLO ARANCIONE E COLLEGARE CAVI N° 31-32
- REMOVE ORANGE LINK AND CONNECT CABLES N° 31-32


REVR5 Kit

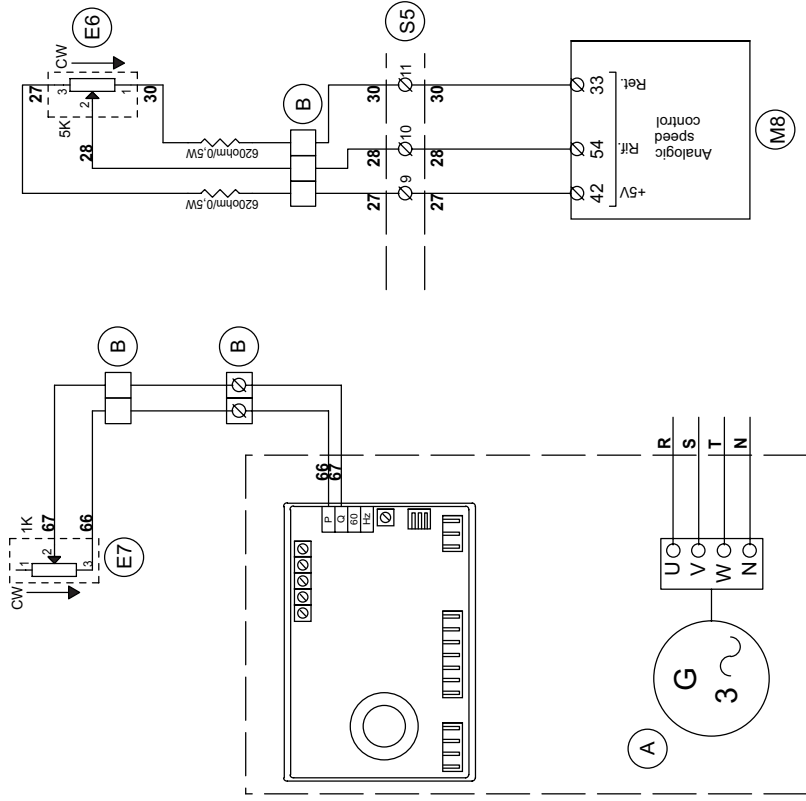

- ⊛ - TOGLIERE PONTICELLO E COLLEGARE CAVI 66-67 DEL POTENZIOMETRO
- REMOVE LINK AND CONNECT HAND TRIMMER BY CABLES 66-67


ESP. EVO.	Modifica Modification	Data Date	Dis. Dess.	Appr. Appr.
	Da Pag. From Page		Progetto: Project	
	To Page		Page n° of n°	
	Ala Pag. To Page		Dis. n° of n°	
	Macchina: Machine:	Data: Date:	Dis. n° of n°	Appr. Appr.:
	GE 165 PMSX	24.10.2007	84166.S.016	
	Designatore: Designer:			
	Leporace N.			

La MOSA si riserva a termini di legge la proprietà del presente disegno con divieto di riprodurre o comunicare a terzi senza sua autorizzazione.

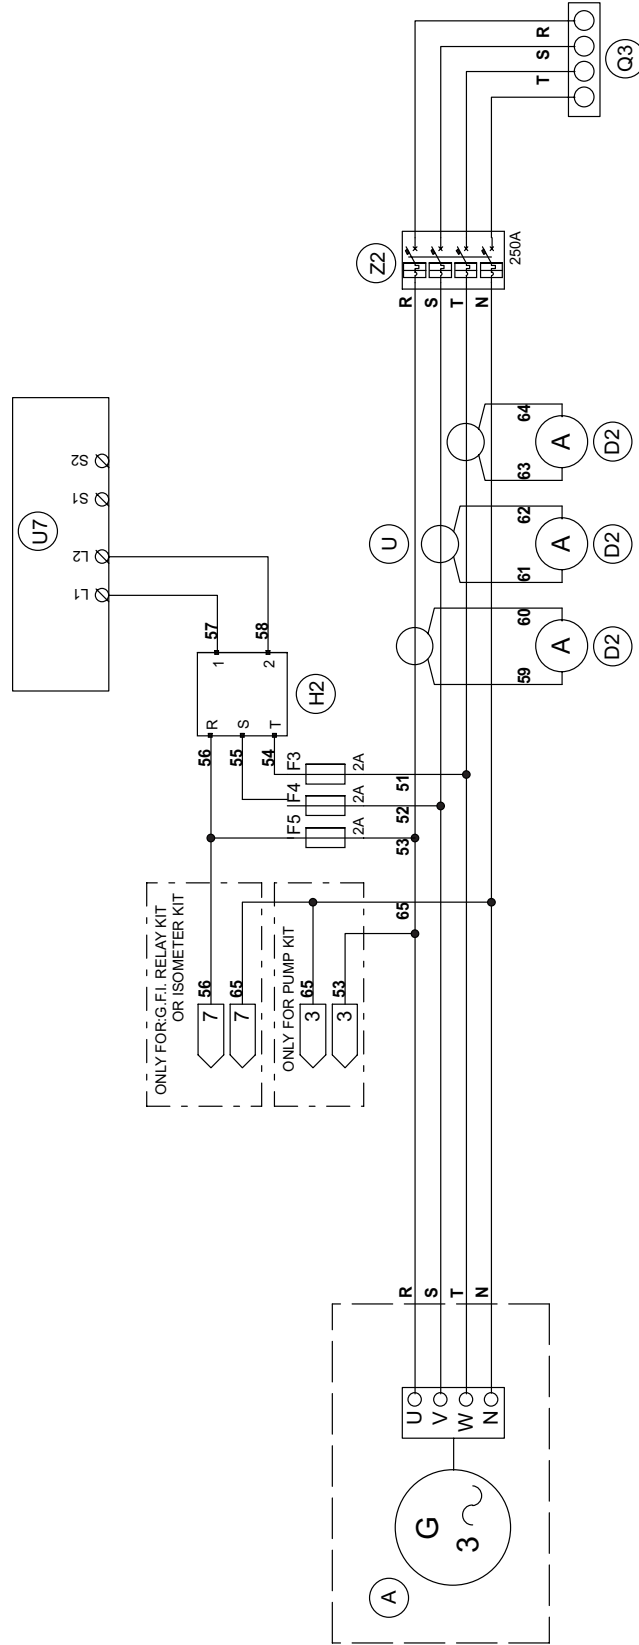

Esp. / Exp.	Modifica / Modification	Data / Date	Dis. / Des. / Appr. / Appr.
	Denominazione: / Denomination: / Aux. (400T/230M) M	Progetto: / Project: / 84165.prg	Dis. n° / Dwg. n° / 5
	Da Pag. / From Page /		Page n° / of n° / 9
	Alta Pag. / To Page /		Approvato: / Approved: /
	Macchina: / Machine: / GE 165 PSX	Data: / Date: / 24.10.2007	Dis. n° / Dwg. n° / 84165.S.020
	Disegnatore: / Designer: / Leporace N.		

La MOSA si riserva a termini di legge la proprietà dei presente disegno con divieto di riprodurlo o comunicarlo a terzi senza sua autorizzazione.

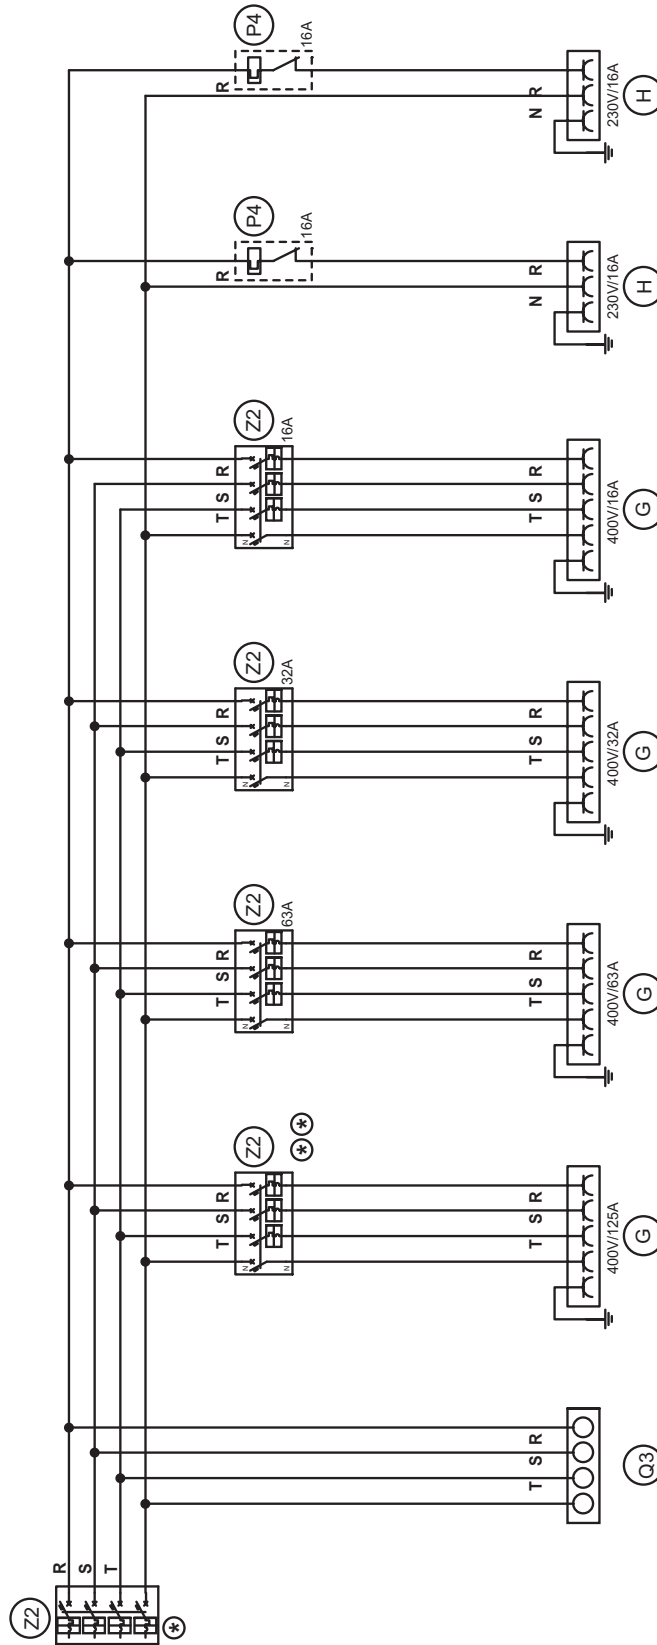

⊛

In	GE 65	GE 85	GE 115	GE 125	GE 145	GE 165
100A	X					
125A		X		X	X	
160A						
250A					X	


⊛

In	GE 65	GE 85	GE 115	GE 125	GE 145	GE 165
80A	X					
100A		X		X	X	
125A						X

B	Unificato schema tra GE 65/85/115/145/165.	12.11.2009	N.L.	
A	Unificato schema tra GE 85/115/165.	15.10.2007	N.L.	
Es. n°				
E. n°				
Modifica				
Modification				
Data				
From				
Page				
Denominazione:		IM023-prg		
Denomination:		Aux. version with sockets (400Tx5/230x3M) MT		
Disegnatore:		Dis. n°	Dis. n°	Dis. n°
Designer:		Dwg. n°	Dwg. n°	Dwg. n°
Leporace N.		16.10.2006	84116.S.021-B	84116.S.021-B
Macchina:		GE 65 JSX		
Machine:				
Data:				
Date:				
Disegnato:				
Designed:				
Approvato:				
Approved:				
Pag. n°		4		
Page n°		5		
di n°		5		
of n°		5		

La MOSA si riserva a termini di legge la proprietà dei presenti disegni con divieto di riprodurli o comunicarli a terzi senza sua autorizzazione.


G.F.I. RELAY

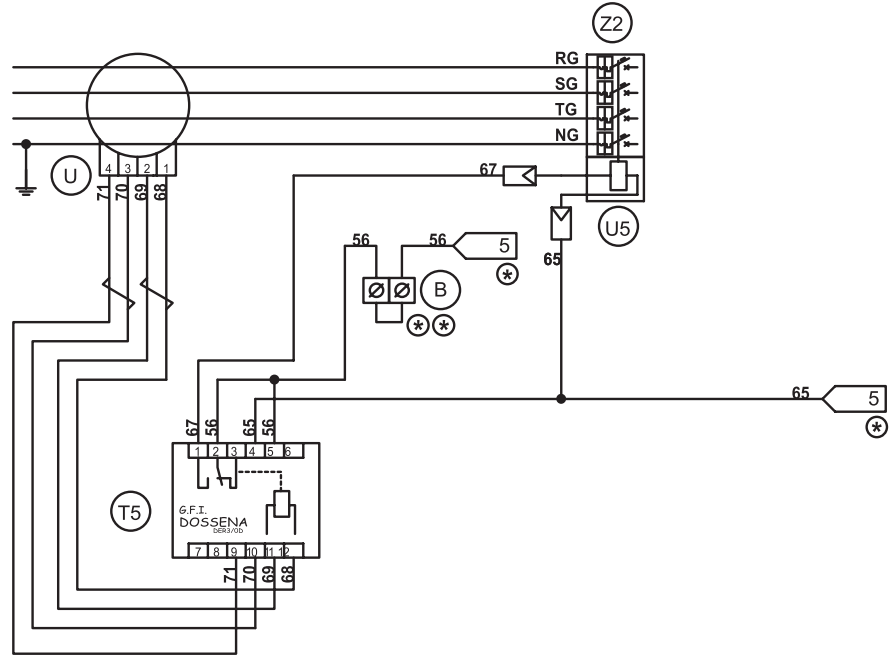


⊛⊛ **ATTENZIONE:**
Scollegare ponticello
per disabilitare G.F.I.
ATTENTION:
To disable G.F.I.
disconnect jumper

ISOMETER

⊛ **ATTENZIONE:**
Per GE 55 - GE 65
da pag. 4
ATTENTION:
From page 4
for GE 55 - GE 65

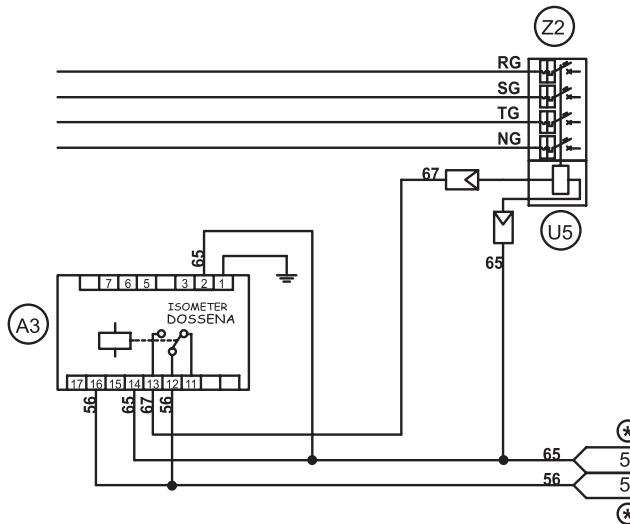

A		Aggiornato disegno con nuovo relè differenziale (T5)		30.03.2010	B.F.	
Esp.	Exp.	Modifica Modification		Data Date	Dis. Dest.	Appr. Appr.
Da Pag. From Page	Denominazione: Denomination:	Progetto: Project:		Pag.n° Page n°	di n° of n°	
Ala Pag. To Page	Macchina: Machine:	Disegnatore: Designer:	Data: Date:	Dis. n°: Dwg. n°:	Approvato: Approved:	
		Leporace N.	16.10.2006	84116.S.025-A		

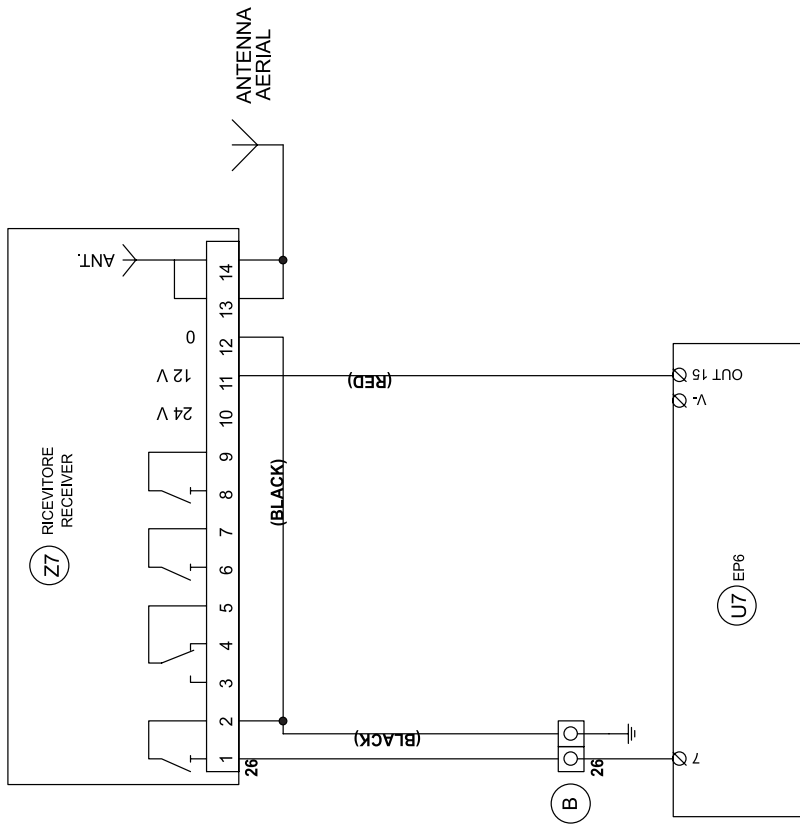

Esp. Eqp.	Modifica Modification	Data Date	Dis. Desig.	Appr. Appr.
	Denominazione: Denomination:	Progetto: Project:	Pag. n° Page n°	di n° of n°
	Da Pag. From Page	84 165.prg	8	9
	Alta Pag. to Page	Dis. n° Dwg. n°	Approvato: Approver:	
	Macchina: Machine:	15.11.2005	84076.S.052	
	GE 165 PSX	Disegnatore: Designer:	Leporace N.	
<p>MOSA 20090-CUSAGO (MI)-ITALY http://www.mosa.it</p>				

La MOSA si riserva a termini di legge la proprietà del presente disegno con divieto di riprodurlo o comunicarlo a terzi senza sua autorizzazione.

SETTAGGIO RICEVITORE:


- TUTTI I DIPSWITCH DEVONO ESSERE SULLA POSIZIONE DI ON.
- INSERIRE NEL CANALE "A" (CH.A) 1 STRIPP RELE' A MEMORIA CODICE: 840769767

- MORSETTI 1-2 CANALE A (NA)
- MORSETTI 3-4-5 CANALE B (IN SCAMBIO NA-NC)
- MORSETTI 6-7 CANALE C (NA)
- MORSETTI 8-9 CANALE D (NA)
- MORSETTI 10-11-12 ALIMENTAZIONE
- MORSETTI 13-14 ANTENNA

SETTING THE RECEIVER

- ALL DIPSWITCHES MUST BE SET ON "ON" POSITION.
- INSERT 1 STRIPP RELAY WITH MEMORY CODE: 840769767

- CONTACTS 1-2 CHANEL A (NA)
- CONTACTS 3-4-5 CHANEL B (IN EXCHANGE NA-NC)
- CONTACTS 6-7 CHANEL C (NA)
- CONTACTS 8-9 CHANEL D (NA)
- CONTACTS 10-11-12 SUPPLY
- CONTACTS 13-14 AERIAL

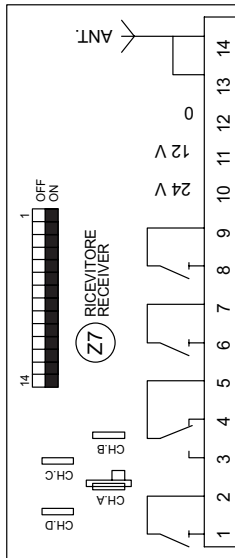


SETTAGGIO TRASMETTITORE:

- TUTTI I DIPSWITCH DELLA FILA DA 14 DEVONO ESSERE SULLA POSIZIONE DI ON.
- I DIPSWITCH DA 2 DEVONO ESSERE SULLA POSIZIONE N° 1= OFF N° 2= OFF
- IL PONTICELLO NERO DEVE ESSERE TOLTO.

SETTING THE TRANSMITTER:

- ALL DIPSWITCHES IN THE 14 UNIT ROW MUST BE SET ON "ON" POSITION.
- THE DIPSWITCH IN THE 2 UNIT ROW MUST BE ON THE FOLLOWING POSITION: N° 1= OFF N° 2= OFF
- THE BLACK CABLE BRIDGE MUST BE REMOVED.

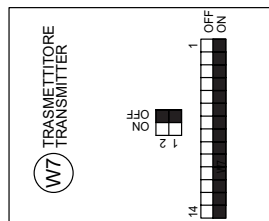


Es. n°	Modifica	Data	Dis.	Appr.
Esp.	Modification	Date	Desi.	Appr.
Denominazione: Set-up radio remote control diagram		Progetto: 84165.prg	Paq. n° di n°	9 9
Da Pag. From Page		Project: 84165.prg	Page n°	9 9
Alq. Pag. To Page		Disegnatore: Leporace N.	Dis. n° Dvg. n°	84076.S.090
MOSCA		Macchina: GE 165 PSX	Approvato: <i>[Signature]</i>	
20090-CUSAGO (MI)-ITALY		Data: 15.11.2005		Approvato: <i>[Signature]</i>
http://www.mosa.it		Data: 15.11.2005		Approvato: <i>[Signature]</i>

La MOSA si riserva a termini di legge la proprietà del presente disegno con divieto di riprodurlo o comunicarlo a terzi senza sua autorizzazione.



MOSA guarantees that any request for spare parts will be satisfied.

To keep the machine in full working order, when replacement of MOSA spare parts is required, always ask for genuine parts only.

 The requested data are to be found on the data plate located on the machine structure, quite visible and easy to consult. *


When ordering the spare parts, it is recommended to indicate:

- 1) * serial number
- 2) * model of welder and/or generating set
- 3) ◆ n. table
- 4) ◆ n. position
- 5) quantity

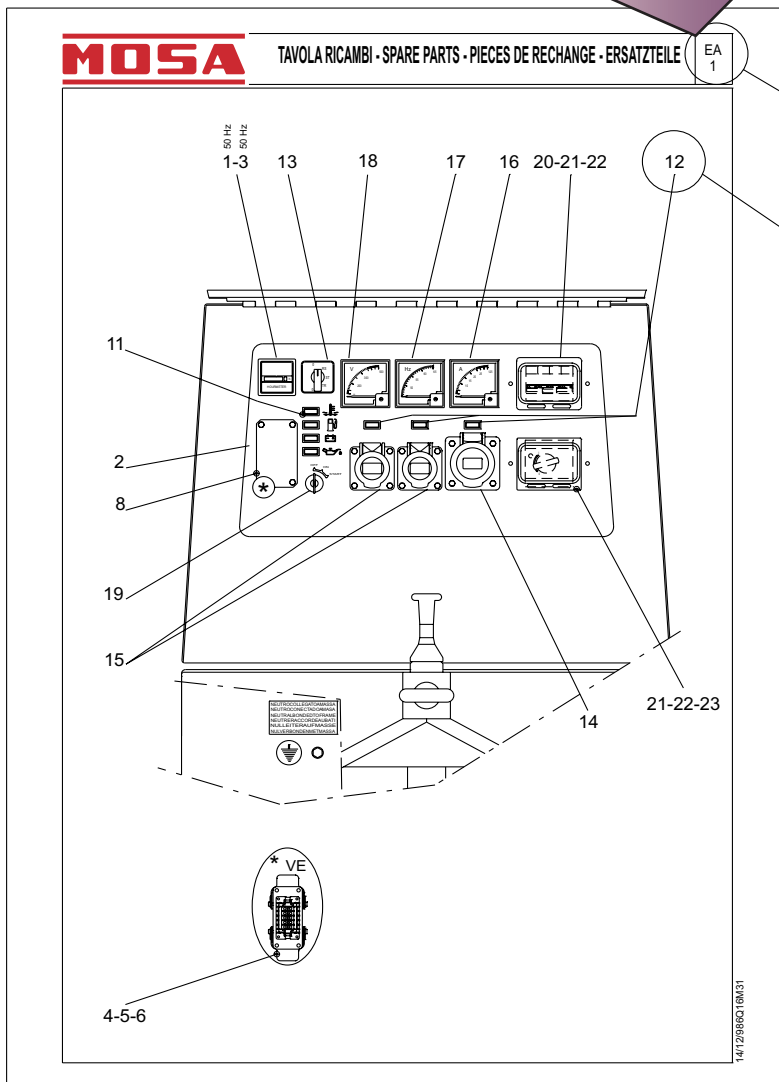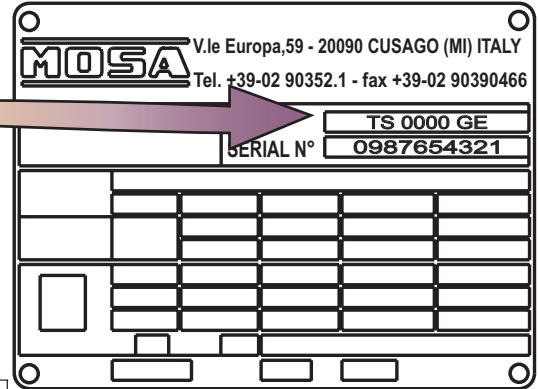


ABBREVIATIONS AND SYMBOLS:

- (EV) When ordering, specify the engine type and the auxiliary voltage
- (ER) Engine with recoil starter only
- (ES) Engine with electric starter only
- (VE) E.A.S version only.
- (QM) When ordering, specify the length in meters
- (VS) Special version only
- (SR) By request only

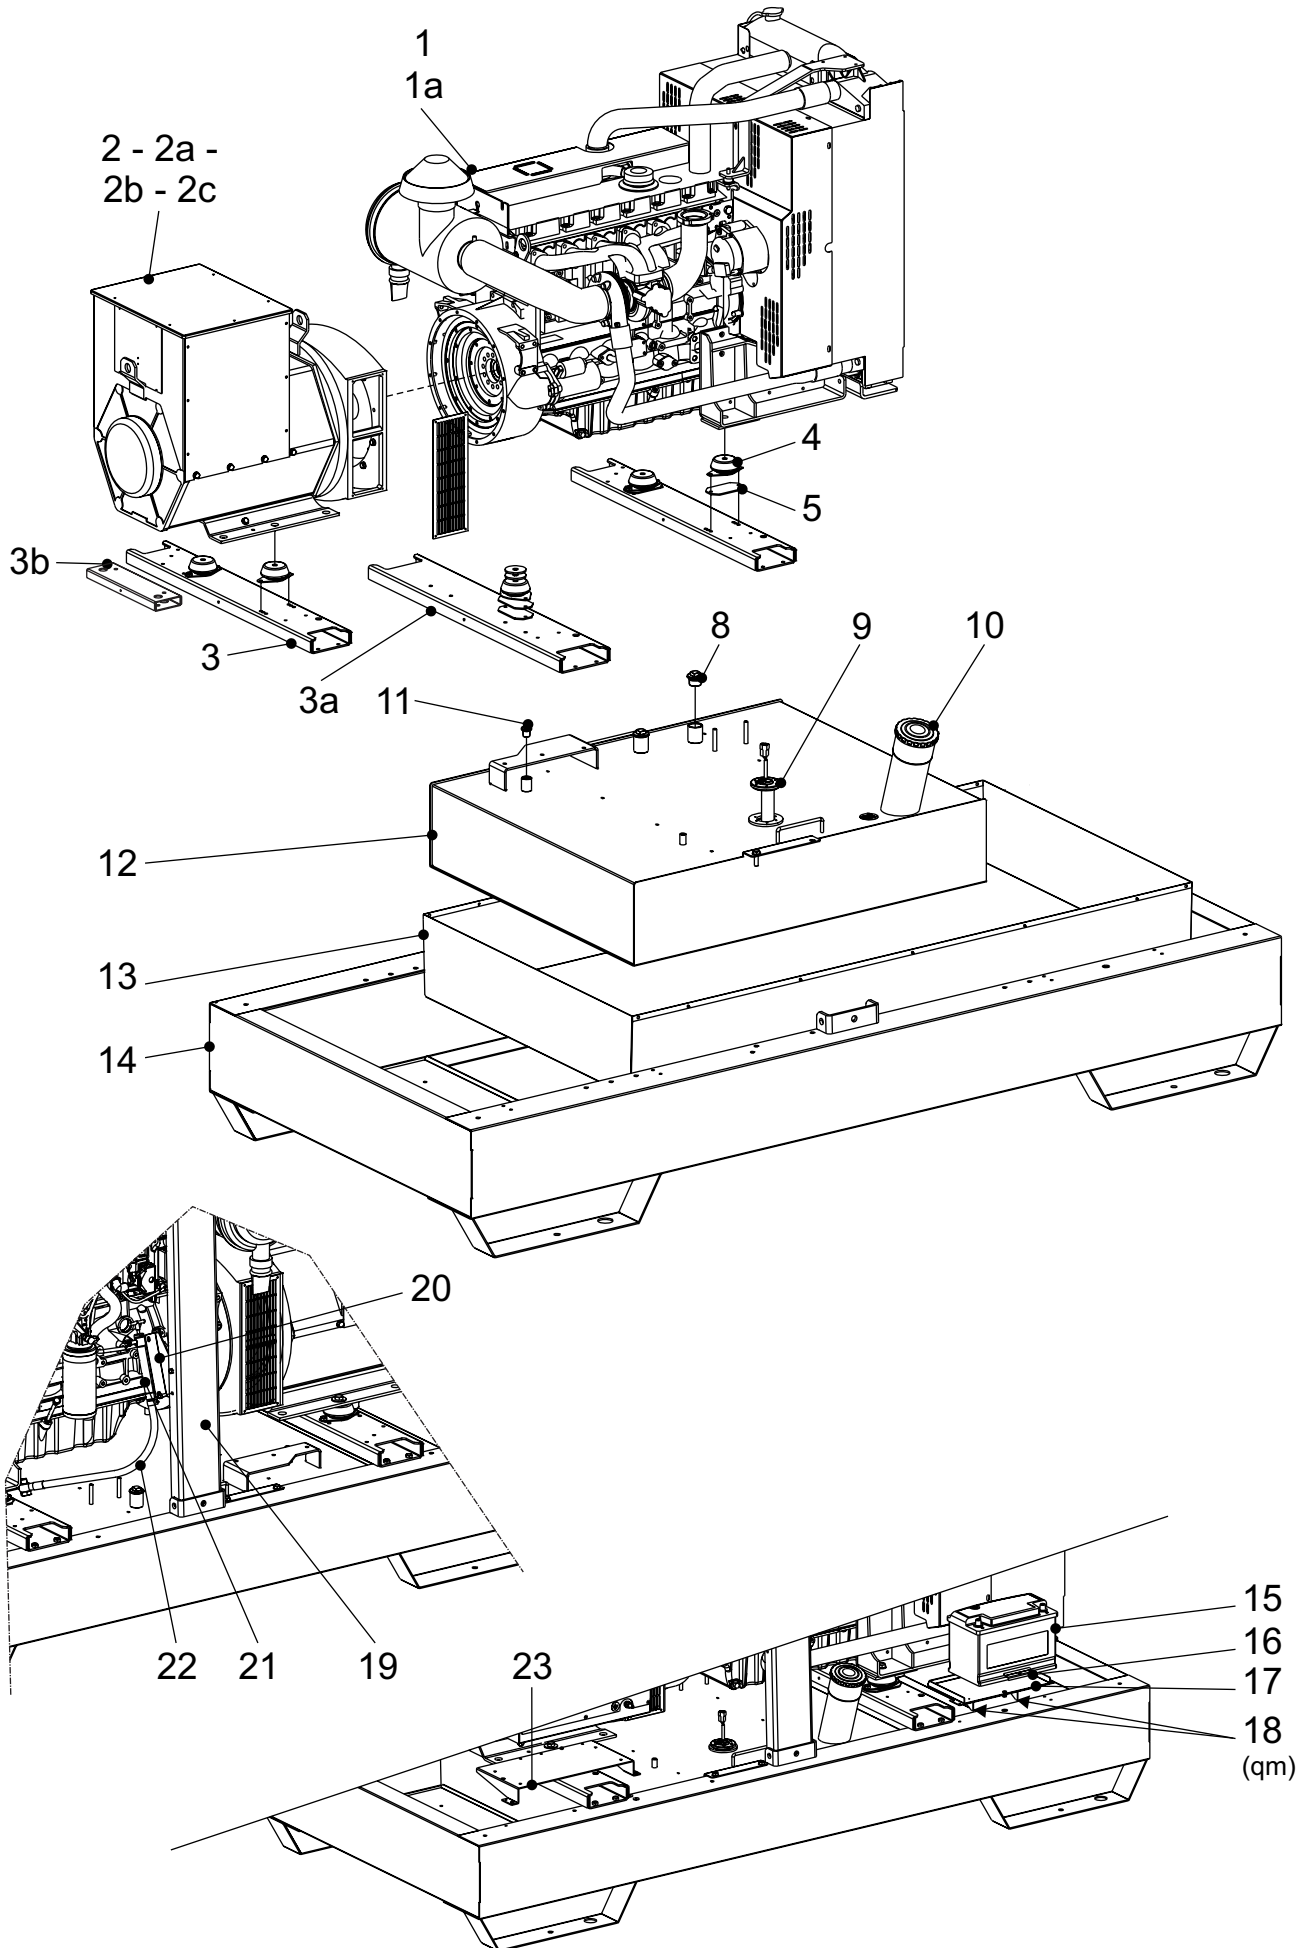


Pos.	Cod.	Descr.	Note
1	M841652200	MOTORE PERKINS 1106C - E66TAG3	GE 165
1a	M841462200	MOTORE PERKINS 1106C - E66TAG2	GE 145
2	M841653100	ALTERNATORE STAMFORD	GE 165 PS-PSX
2a	M741663100	ALTERNATORE MARELLI	GE 165 PMS-PMSX
2b	M641453100	ALTERNATORE STAMFORD	GE 145 PS-PSX
2c	M741473100	ALTERNATORE MARELLI	GE 145 PMS-PMSX
3	M841163101	TRAVERSA SUPPORTO ALTERNATORE	
3a	M741663101	TRAVERSA SUPPORTO ALTERNATORE	GE 165 PMS-PMSX
3b	M841183101	TRAVERSA SUPPORTO ALTERNATORE	GE 145 PMS-PMSX
4	M105611550	ANTIVIBRANTE	
5	M744502032	SPESSORE 4mm	
6	M209519045	PORTAFUSIBILE	Fino a REV.0-09/08 Del.218/08-15/12/08
7	M841657228	STAFFA FISSAGGIO PORTAFUSIBILE	Fino a REV.0-09/08 Del.218/08-15/12/08
8	M840951262	TAPPO 1" GAS (CONICO)	
9	M764409975	SENSORE LIVELLO CARBURANTE(L=225)	
10	M842252026	TAPPO SERB. CARBUR. BAIONETTA	
11	M842251262	TAPPO 1/2"GAS (CONICO)	
12	M841162020	SERBATOIO CARBURANTE	
13	M841161296	FONDO BASAMENTO	
14	M841651050	BASAMENTO	
15	M841459150	BATTERIA	
16	M400409154	STAFFA FISSAGGIO BATTERIA	
17	M841161016	SUPPORTO BATTERIA	
18	M107509005	GUARNIZIONE	qm
19	M841651100	ROLL BAR	
20	M740352211	STAFFA SUPP.POMPA SCARICO OLIO	
21	M317802310	POMPA SCARICO OLIO	
22	M841162212	TUBO SCARICO OLIO	
23	M841167102	SUPP.SCATOLA APPARECCH. ELETTR.	


Pos.	Cod.	Descr.	Note
1	M841652200	PERKINS ENGINE 1106C - E66TAG3	GE 165
1a	M841462200	PERKINS ENGINE 1106C - E66TAG2	GE 145
2	M841653100	STAMFORD ALTERNATOR	GE 165 PS-PSX
2a	M741663100	ALTERNATOR	GE 165 PMS-PMSX
2b	M641453100	STAMFORD ALTERNATOR	GE 145 PS-PSX
2c	M741473100	MARELLI ALTERNATOR	GE 145 PMS-PMSX
3	M841163101	ALTERNATOR SUPPORT	
3a	M741663101	ALTERNATOR SUPPORT	GE 165 PMS-PMSX
3b	M841183101	ALTERNATOR SUPPORT	GE 145 PMS-PMSX
4	M105611550	VIBRATION DAMPER	
5	M744502032	THICKNESS 4mm	
6	M209519045	HOLDER, FUSE	Up to REV.0-09/08 Del.218/08-15/12/08
7	M841657228	FUSE-HOLDER FIXING BRACKET	Up to REV.0-09/08 Del.218/08-15/12/08
8	M840951262	CAP	
9	M764409975	FUEL LEVEL SENSOR	
10	M842252026	BAYO-FITTING TANK CAP	
11	M842251262	CAP	
12	M841162020	FUEL TANK	
13	M841161296	BASE BOTTOM	
14	M841651050	BASE	
15	M841459150	BATTERY	
16	M400409154	BATTERY BRACKET	
17	M841161016	BATTERY SUPPORT	
18	M107509005	GASKET	qm
19	M841651100	ROLL BAR	
20	M740352211	BRACKET FOR OIL DISCHARGE PUMP	
21	M317802310	EXHAUST OIL PUMP	
22	M841162212	EXHAUST OIL PIPE	
23	M841167102	SUPPORT, ELECTRICAL EQUIPMENT	

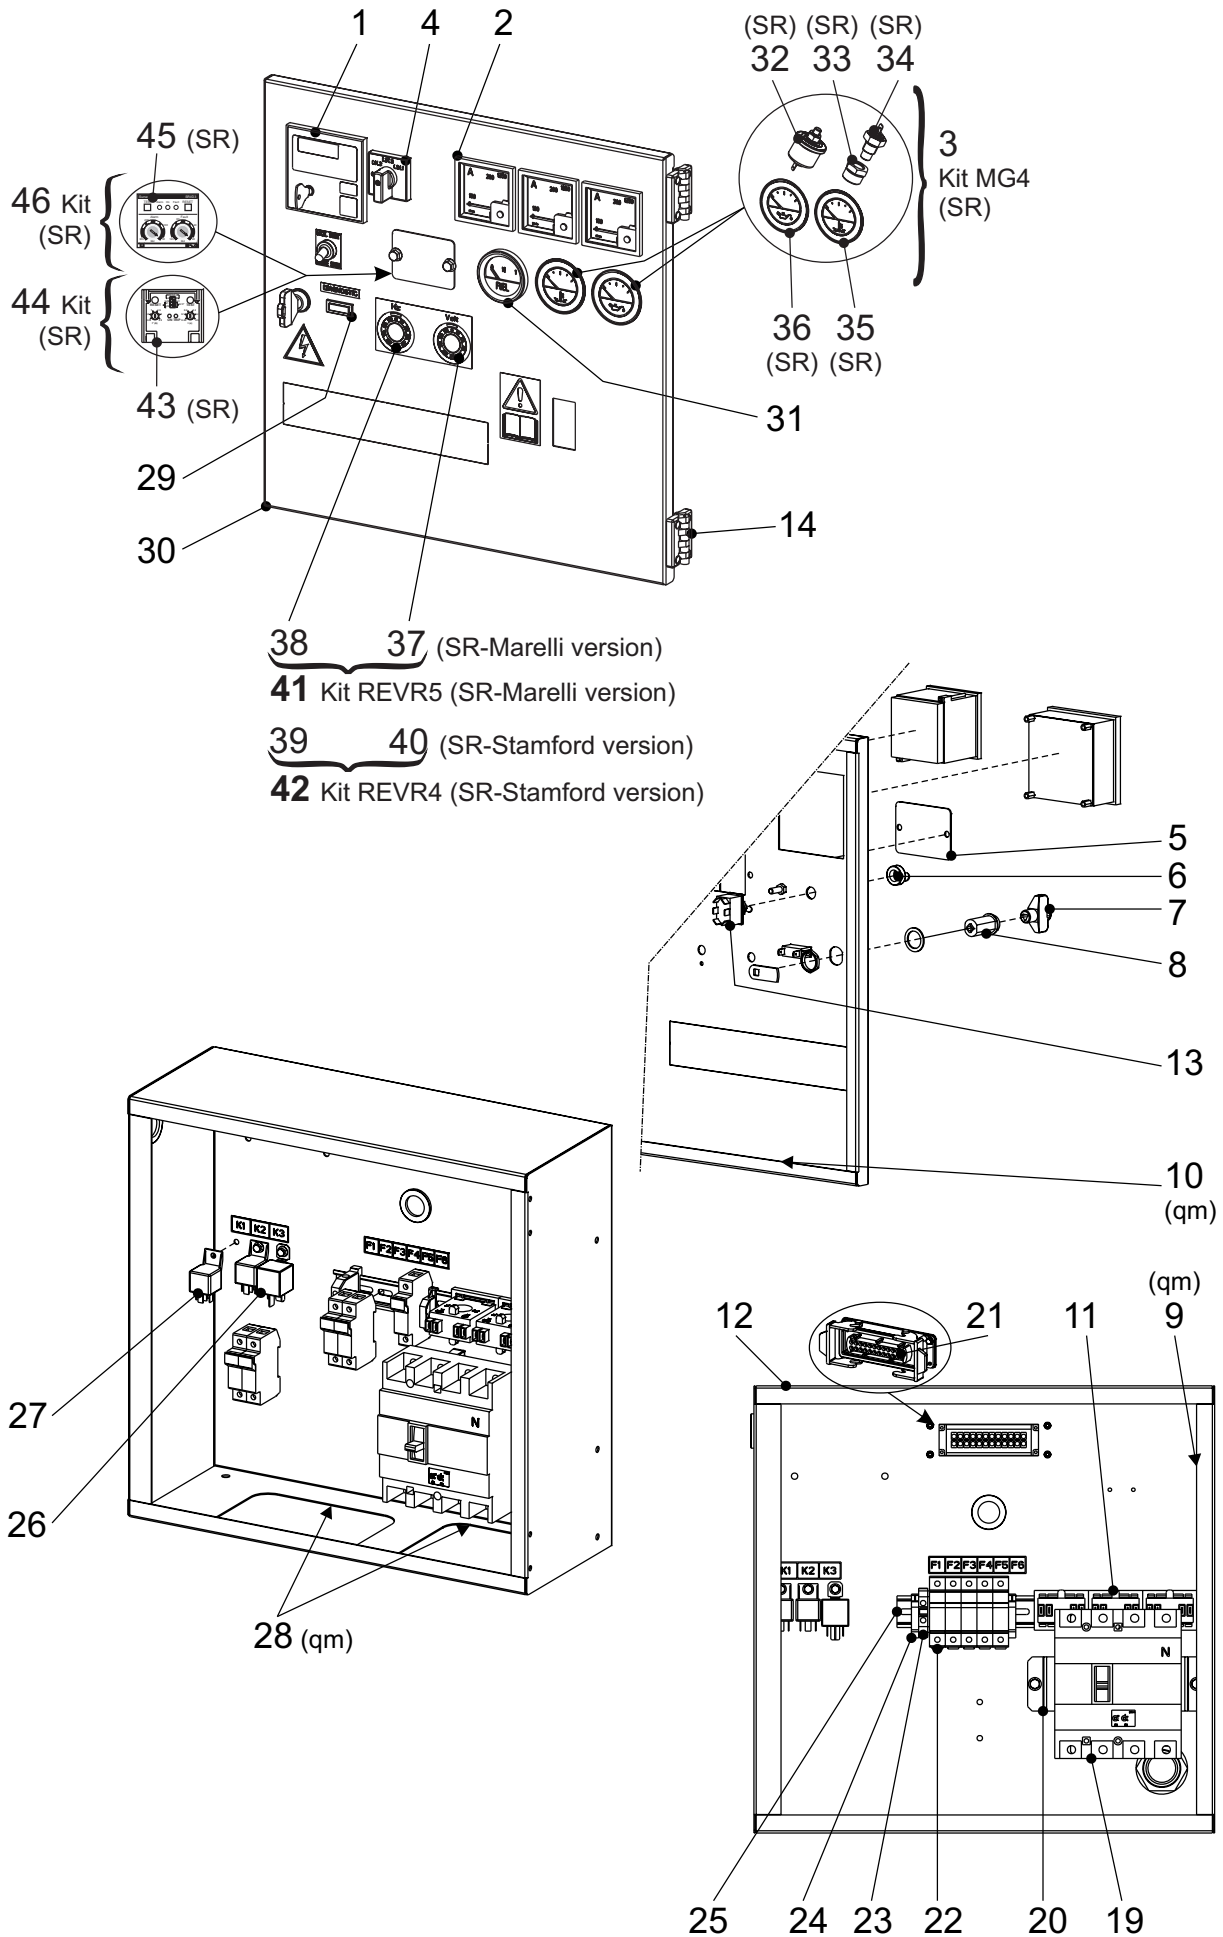


Pos.	Cod.	Descr.	Note
1	MJK0029770	UNITA' CONTR. MOTORE (EP6) / ENGINE CONTROL UNIT EP6	
2	M841657305	AMPEROMETRO 250A/5A-5In 72X72 / AMMETER	
3	M840760094	MG4 KIT TERMO/MANOMETRO / MG4 KIT TERMO/MANOMETRO	(SR)
4	M305717315	COMMUTATORE / COMMUTATOR	
5	M325507027	COPERCHIETTO RELE DIFFERENZ. / RELAY COVER	
6	M102042740	CAPPUCCIO / CAP	
7	M744507057	CHIAVE SERRATURA QUADRO ELETT. / ELECTRICAL BOARD KEY	
9	M306418310	GUARNIZIONE / PROTECTION GASKET	(qm)
10	M309509005	GUARNIZIONE / GASKET	(qm)
11	M841657306	TRASFORMATORE AMPEROM. 250A/5A / TRANSFORMER	
12	M841657010	SCATOLA ELETTRICA / ELECTRICAL BOX	
13	M102013290	COMMUTATORE / COMMUTATOR	
14	M744508103	CERNIERA X COPERCHIO FRONTALE / LATCH x FRONT COVER	
19	M841657325	INT.MAGNETOTERM.(SCAT) 4P 250A / CIRCUIT BREAKER SWITCH BOX	
20	M641167036	STAFFA SUPPORTO INTERR. MAGN. / BRACKET MAGNETO SWITCH	
21	M84165C020	GR.CAVI MOTORE / ENGINE CABLES GR.	
22	M107509045	PORTAFUSIBILE / HOLDER, FUSE	
23	M1240040	MORSETTIERA / TERMINAL BOARD	
24	M1241010	PIASTRINA / SMALL PLATE	
25	M1243020	GUIDA PER MORSETTIERA / TERMINAL GUIDE	
26	M317619199	RELE' 12V - 70A / RELAY 12V 70A	
27	M306479199	RELE' AVV. ELETTRICO / RELAY, ELECTRIC START	
28	M107509005	GUARNIZIONE / GASKET	(qm)
29	M1302500	SEGNALATORE RETT. 12V DC ROSSO / RECTANGULAR WARNING LAMP	
30	M841167020	PANNELLO FRONTALE / FRONT PANEL	
31	M325507210	INDICATORE LIVELLO CARBURANTE / FUEL LEVEL GAUGE	
32	M842252252	SENSORE / SENSOR	(SR - montato sul motore)
33	M840762253	RIDUZIONE / REDUCTION	(SR - montato sul motore)
34	M842252245	SENSORE TEMP. / TEMPERATURE SENSOR	(SR - montato sul motore)
35	M744527192	INDICATORE TEMPERATURA ACQUA / WATER TEMPERATURE INDICATOR	
36	M744527190	INDICATORE PRESSIONE OLIO / OIL PRESSURE INDICATOR	
37	M841189708	POTENZIOMETRO REGOL. VOLT / POTENTIOMETER Manca	(SR) (MARELLI version)
38	M841169708	POTENZIOMETRO REGOL. RPM / Manca la descrizione	(SR) (MARELLI version)
39	M841659708	POTENZIOMETRO REGOL. RPM / Manca la descrizione	(SR) (STAMFORD version)
40	M842259708	POTENZIOMETRO REGOL. VOLT / Manca la descrizione	(SR) (STAMFORD version)
41	M841180159	REVR5 - KIT REGOL.VOLT/RPM (Hz) / Manca la descrizione	(SR) (MARELLI version)
42	M841650159	REVR4 - KIT REGOL.VOLT/RPM (Hz) / Manca la descrizione	(SR) (STAMFORD version)
43	M740557105	SORVEGLIATORE D'ISOLAMENTO / INSULATING ALARM	(SR)
44	M840560160	KIT SORVEGLIATORE D'ISOLAMENTO / INSULATING ALARM KIT	(SR)
45	M740559297	RELE' DIFFERENZIALE / ELECTRONIC RELAY	(SR)
46	M840870165	KIT RELE' DIFFERENZIALE / ELECTRONIC RELAY KIT	(SR)

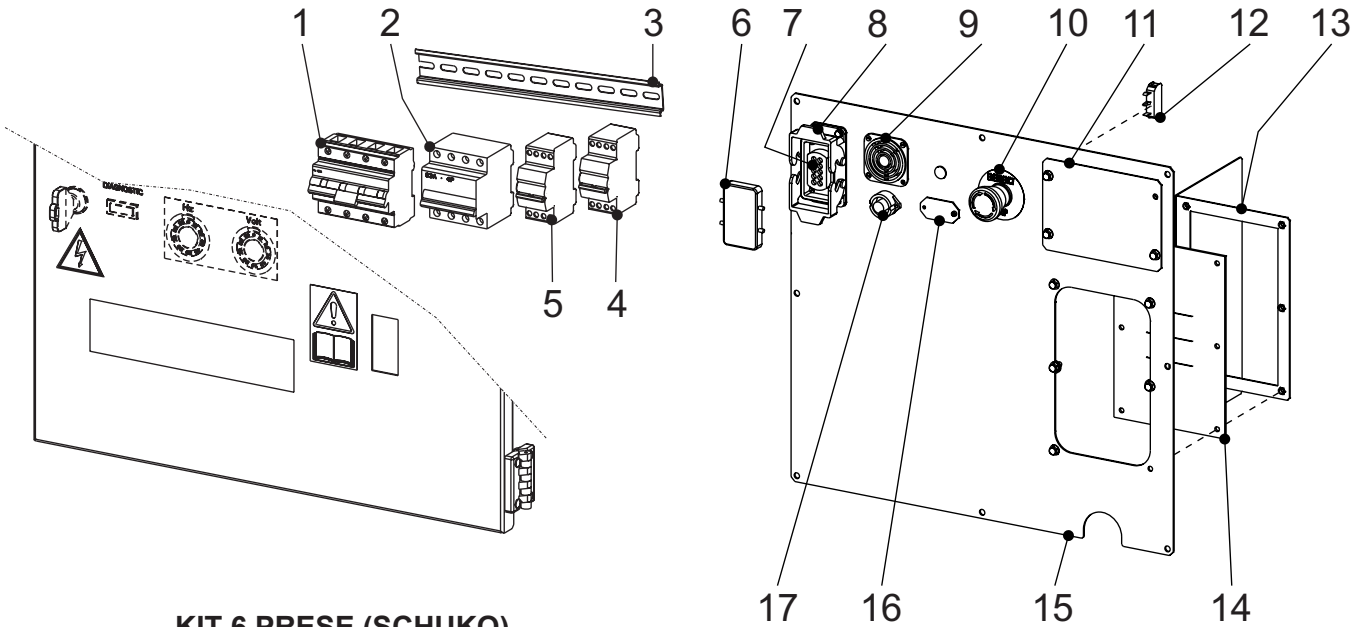

**KIT 6 PRESE (SCHUKO)
6 SOCKETS (SCHUKO) KIT
(SR) 22**


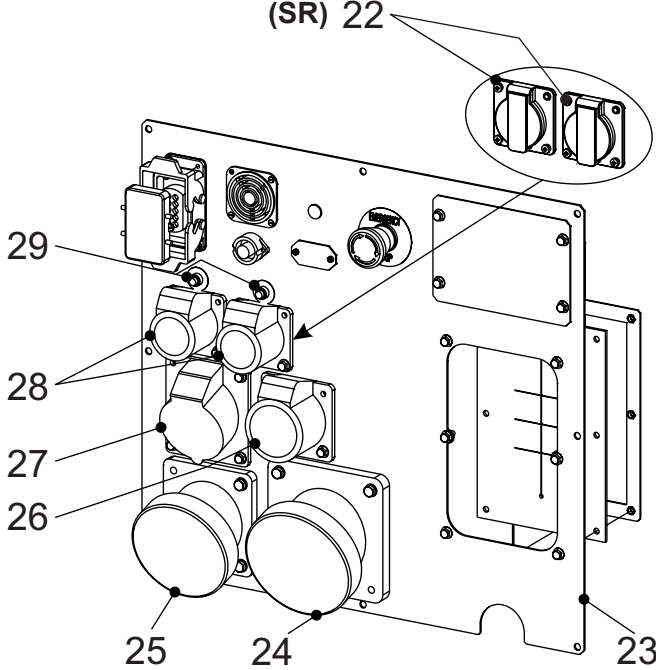


**KIT 6 PRESE
6 SOCKETS KIT
(SR)**

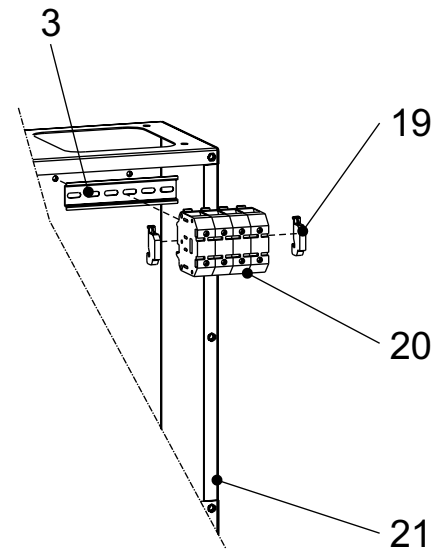


Pos.	Rev. Cod.	Descr.
1	M841157325	INTERR. MAGNETOTERMICO 125A
2	M305019705	INTERR.MAGNET.400V 63A
3	M1243020	GUIDA PER MORSETTIERA
4	MIG0117325	INT. MAGNET. 4P 16A
5	MKJ0187325	INT. MAGNET. 4P 32A
6	M105191570	COPERCHIO PER PRESA EAS
7	M105191560	FRUTTO PRESA CONNETTORE
8	M105191550	CUSTODIA PER PRESA EAS
9	M315507215	AVVISATORE ACUSTICO
10	M744507219	PULSANTE STOP D'EMERGENZA
11	M841167032	PIASTRA DI CHIUSURA
12	M744507237	CONTATTO
13	M841167074	CORNICE FISS. PANNELLO GOMMA
14	M841167075	PANNELLO IN GOMMA
15	M840857009	PIASTRA APPARECCH. ELETTRICHE
16	M359257032	COPERCH. CHIUS.FORO SCALDIGLIA
17	M107509903	PRESA
19	M1241010	PIASTRINA
20	M1240070	MORSETTO 70 mmq
21	M841167004	SCATOLA APPARECCH. ELETTRICHE
22	M259107241	PRESA SCHUKO 16A 230V - 2P+T
23	M841167065	PANNELLO PORTA PRESE
24	M746507270	PRESA CEE 400V 125A 3P+N+T
25	M344027270	PRESA CEE 63A 400V 3P+N+T
26	M305907270	PRESA CEE 16A 400V 3P+N+T
27	M105111510	PRESA CEE 380V TRIFASE
28	M307017240	PRESA 220V 16A
29	M155307107	DISGIUNTORE TERMICO 15A-250V


Pos.	Rev. Cod.	Descr.
1	M841157325	CIRCUIT BREAKER 125A
2	M305019705	CIRCUIT BREAKER 400V 63A
3	M1243020	TERMINAL GUIDE
4	MIG0117325	CIRCUIT BREAKER 4P 16A
5	MKJ0187325	CIRCUIT BREAKER 4P 32A
6	M105191570	BLIND PLATE, EAS SOCKET
7	M105191560	SOCKET, EAS
8	M105191550	BOX, EAS SOCKET
9	M315507215	ACOUSTIC ALARM SYSTEM
10	M744507219	EMERGENCY PUSH BUTTON STOP
11	M841167032	PLATE, LOCKSOCKET
12	M744507237	CONTACT
13	M841167074	RUBBER FIXING FRAME
14	M841167075	RUBBER COVER
15	M840857009	PLATE ELECTRICAL EQUIPMENT
16	M359257032	COVER
17	M107509903	SOCKET
19	M1241010	SMALL PLATE
20	M1240070	TERMINAL 70mmq
21	M841167004	ELECTRIC BOX
22	M259107241	SOCKET SCHUKO 16A 230V 2P+T
23	M841167065	SOCKETS HOLDER FRONT PANEL
24	M746507270	EEC SOCKET 400V 125A 3P+N+T
25	M344027270	EEC SOCKET 63A 400V 3P+N+T
26	M305907270	EEC SOCKET 16A 400V 3P+N+T
27	M105111510	EEC SOCKET THREE-PHASE 380V
28	M307017240	EEC SOCKET 16A, 220V 2P+T
29	M155307107	THERMAL SWITCH 15A-250V

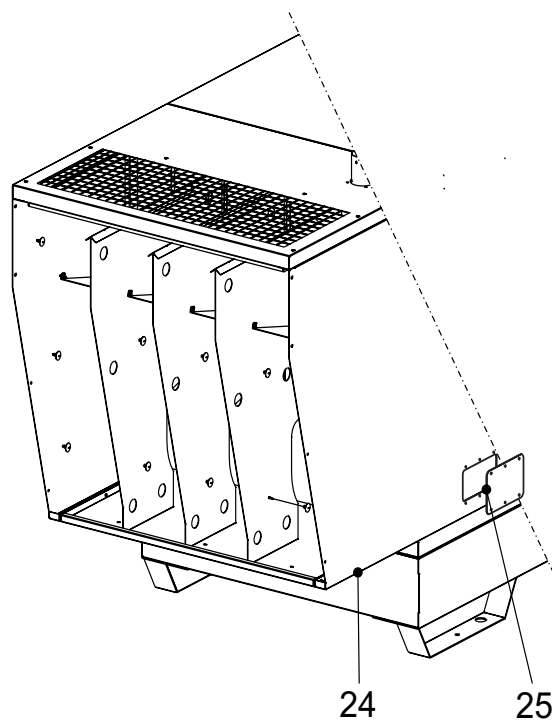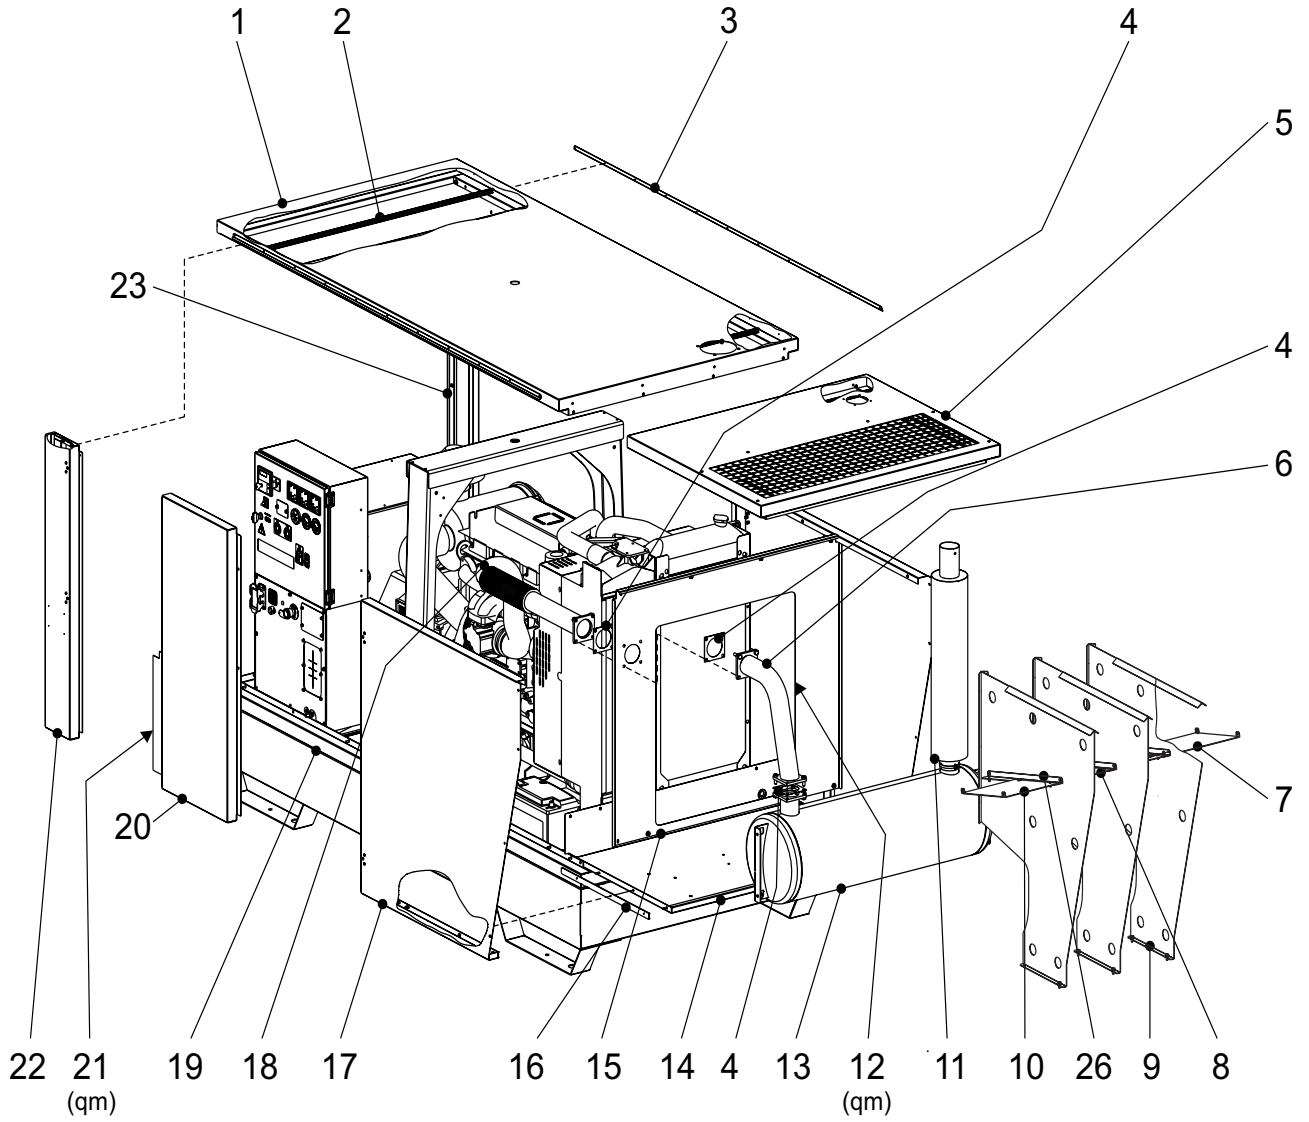

Pos.	Cod.	Descr.	Note
1	M841658091	CARENATURA SUPERIORE	
2	M841168464	STAFFA FERMO FONASSORBENTE	
3	M841658068	GOCCIOLATOIO	
4	M841452069	GUARNIZIONE SCARICO MOTORE	
5	M741658175	PANNELLO CARENATURA SUPERIORE LATO MOTORE	
6	M841652081	TUBO SCARICO COLLEGAMENTO MARMITTA	
7	M841658479	LAMIERA SINISTRA FISSAGGIO SETTI	Fino a REV. 0-09/08 Del.90/09-07/09/09
7	M841668479	LAMIERA SINISTRA FISSAGGIO SETTI	Da REV.1-03/11 Del.90/09-07/09/09
8	M841658474	DEFLETTORE SETTI	Fino a REV. 0-09/08 Del.90/09-07/09/09
8	M841668474	DEFLETTORE SETTI	Da REV.1-03/11 Del.90/09-07/09/09
9	M841658472	PANNELLO SETTI	
10	M841658478	LAMIERA DESTRA FISSAGGIO SETTI	Fino a REV. 0-09/08 Del.90/09-07/09/09
10	M841668478	LAMIERA DESTRA FISSAGGIO SETTI	Da REV.1-03/11 Del.90/09-07/09/09
11	M841652078	RACCORDO TUBO SCARICO	
12	M309509005	GUARNIZIONE	
13	M841652050	SILENZIATORE DI SCARICO	
14	M741658168	PANNELLO INFERIORE CASSONE SCARICO	
15	M841658215	PARETE SCARICO ARIA MOTORE	
16	M741658303	SPESSORE PER PARATIA	
17	M741658020	FIANCATA POSTERIORE DX	
18	M841652070	TUBO DI SCARICO	
19	M841658340	CORNICE SUPPORTO CARENATURA	
20	M841658015	FIANCATA INTERMED. DX	
21	M107509005	GUARNIZIONE	
22	M841658003	FIANCATA CARENATURA DX	
23	M841658004	FIANCATA CARENATURA SX	
24	M741658025	FIANCATA POSTERIORE SX	
25	M841657032	PIASTRA DI CHIUSURA	Da REV.1-03/11 Del.31/09-24/03/09
26	M841668480	STAFFA FISSAGGIO PORTASETTE	Da REV.1-03/11 Del.90/09-07/09/09
Pos.	Cod.	Descr.	Note
1	M841658091	TOP COVER	
2	M841168464	SOUND-PROOF MATERIAL BRACKET	
3	M841658068	DRIPPER	
4	M841452069	GASKET	
5	M741658175	TOP COVER (ENGINE SIDE)	
6	M841652081	EXHAUST PIPE FOR MUFFLER	
7	M841658479	LEFT-SIDE BAFFLE BRACKET	Up to REV.0-09/08 Del.90/09-07/09/09
7	M841668479	LEFT-SIDE BAFFLE BRACKET	From REV.1-03/11 Del.90/09-07/09/09
8	M841658474	BAFFLE DEFLECTOR	Up to REV.0-09/08 Del.90/09-07/09/09
8	M841668474	BAFFLE DEFLECTOR	From REV.1-03/11 Del.90/09 - 07/09/09
9	M841658472	PANEL FOR BAFFLES	
10	M841658478	RIGHT-SIDE BAFFLE BRACKET	Up to REV.0-09/08 Del.90/09-07/09/09
10	M841668478	RIGHT-SIDE BAFFLE BRACKET	From REV.1-03/11 Del.90/09-07/09/09
11	M841652078	PIPE FITTING, EXHAUST PIPE	
12	M309509005	GASKET	
13	M841652050	EXHAUST MUFFLER	
14	M741658168	LOWER PANEL FOR AIR INLET BOX	
15	M841658215	ENGINE AIR EXHAUST SITE	
16	M741658303	BULK-HEAD THICKNESS	
17	M741658020	REAR RIGHT COVER	
18	M841652070	EXHAUST PIPE	
19	M841658340	SUPPORTING FRAME FOR COMPLETE COVER	
20	M841658015	COVER RIGHT	
21	M107509005	GASKET	
22	M841658003	COVER RIGHT SIDE	
23	M841658004	COVER LEFT SIDE	
24	M741658025	REAR LEFT COVER	
25	M841657032	PLATE, LOCKSOCKET	From REV.1-03/11 Del.31/09-24/03/09
26	M841668480	BAFFLE FIXING BRACKET	From REV.1-03/11 Del.90/09-07/09/09

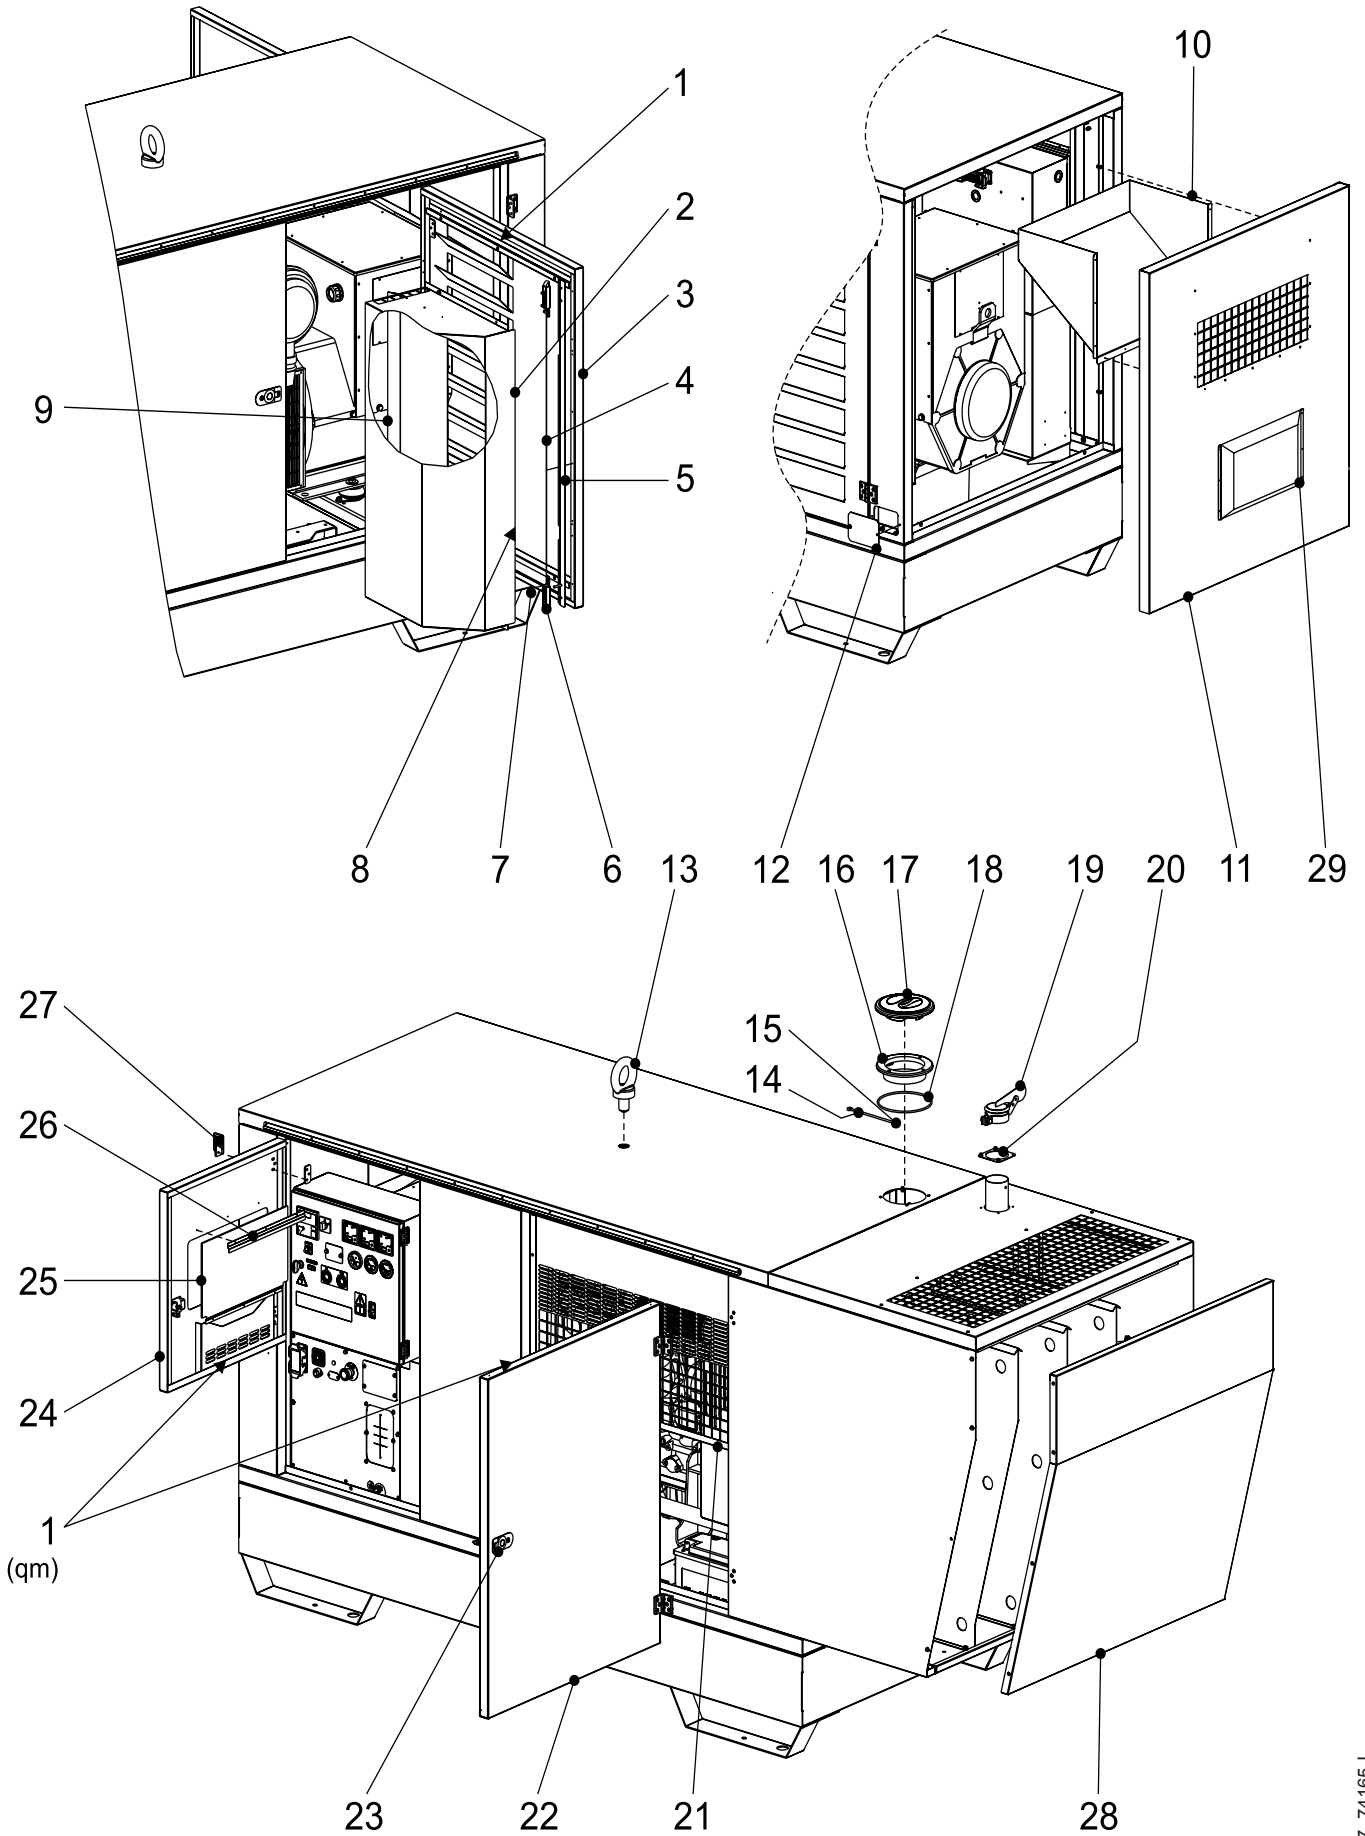

Pos.	Cod.	Descr.	Note
1	M309509005	GUARNIZIONE / GASKET	
2	M841658200	CASSONETTO ASPIRAZIONE ARIA / AIR INTAKE BOX	
3	M841658458	FIANCATA INTERMEDIA BATTENTE / CENTRAL WING DOOR	
4	M841658460	FILO ARMONICO / HARMONIC WIRE	
5	M841658461	LISTELLO FERMO FIANCATA / PANELIST FOR SIDE COVER	
6	M842258163	CHIUSURA A CRICCHETTO / JACK-GEAR LOCK	
7	M105111450	MORSETTO / TERMINAL	
8	M102302280	GUARNIZIONE (L=MT.1) / GASKET (L=MT.1)	
9	M841658145	DEFLETTORE CASSONETTO ASPIRAZIONE / INTAKE BOX DEFLECTOR	
10	M841658202	CASSONETTO ASPIRAZIONE ALTERNATORE / ALTERNATOR INTAKE BOX	
11	M841658080	CARENATURA ANTERIORE / FRONT COVER	Fino al/Up to REV.0-09/08 Del.149/10-08/11/10
11	M841668080	CARENATURA ANTERIORE / FRONT COVER	Dal/From REV.1-03/11 Del.149/10-08/11/10
12	M741167032	PIASTRA DI CHIUSURA / PLATE, LOCKSOCKET	
13	M6033050	GOLFARE M36 UNI2947 / UP-EAVING RING	
14	M841659357	TIRANTE IN GOMMA / TIE ROD	
15	M841659358	ANELLO DOPPIO / DOUBLE RING	
16	M841658361	GHIERA PER COPERCHIO ERMETICO / FLANGE FOR AIR-TIGHT SEALED COVER	
17	M841658360	COPERCHIO ERMETICO / ERMETIC COVER	
18	M1018130	ANELLO OR / OR RING	
19	M840952053	COPERCHIETTO PARAPIOGGIA / WATER CAP	
20	M841652068	FLANGIA PER TUBO SCARICO / EXHAUST PIPE FLANGE	
21	M841652058	PROTEZIONE TERMICA / THERMOPROTECTION	
22	M841658428	FIANCATA INTERMEDIA / MIDDLE COVER	
23	M744508136	MANIGLIA A PULSANTE / HANDLE	
24	M841658426	FIANCATA LATO STRUMENTI / COVER COMMANDS SIDE	
25	M841168089	SCHERMO PER PORTELLA / GLASS COVER	
26	M744508090	SQUADR.FISS.SCHERMO PORTELLA / FIXING BRACKET DOOR SCREEN	
27	M744508140	CERNIERA PER FIANCATA / LATCH	
28	M741658035	CARENATURA POSTERIORE / REAR COVER	
29	M841668125	COPERCHIO MANUT. ALTERN. / COVER	Dal/From REV.1-03/11 Del.149/10-08/11/10

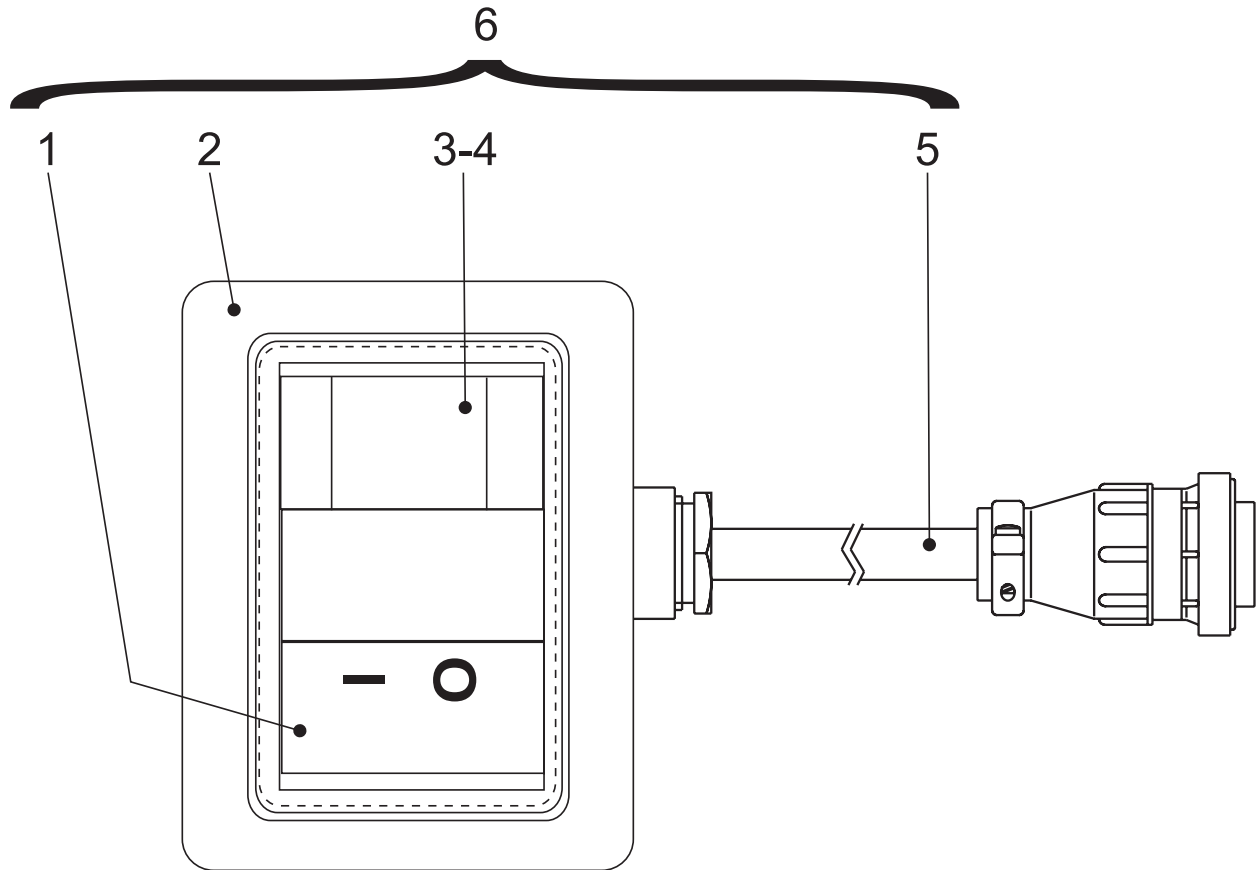

<i>Pos.</i>	<i>Rev.</i>	<i>Cod.</i>	<i>Descr.</i>	<i>Descr.</i>
1		930357219	INTERRUTTORE 2P 16A	INTERRUPTER 2P 16A
2		930359913	SCATOLA COMPLETA	CASE, COMPL.
3		930357227	LAMPADA 24V	WARNING LIGHT 24V
4		930357231	PORTALAMPADA SPIA ROSSA	WARNING LIGHT HOLDER
5		93035C060	GR. CAVI TCM	TCM CABLE KIT
6		930350000	TCM35 COMPLETO	COMPLETE TCM35